



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with start/stop system	1
1.2 Safety precautions when working on high-voltage system	2
1.3 Safety precautions when working in the vicinity of high-voltage components	3
1.4 Safety precautions when using testing and measuring instruments during a road test	3
1.5 Safety measures when working with pyrotechnic components	3
1.6 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	5
1.7 Additional safety regulations for side airbag	5
1.8 Additional safety instructions for curtain airbag	6
1.9 Safety regulations for crash sensors (pressure sensors) for front side airbags	6
1.10 Additional safety instructions for repair work on seat occupied recognition for front passenger airbag deactivation - country-specific	7
1.11 Measures for seat occupied recognition for front passenger airbag deactivation following an accident - country-specific	7
1.12 Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident	8
1.13 Checking airbag securing parts after an accident	9
1.14 Accident without airbag triggering	10
1.15 Checking seat belts	10
1.16 Check belt webbing	10
1.17 Checking inertia reel (locking mechanism)	11
1.18 Visually checking belt buckle	11
1.19 Check operation of belt buckle	12
1.20 Checking belt relays, and buckle tongues	12
1.21 Checking securing parts and anchorage points after an accident	12
1.22 Checking seat belt restraint function for holding additional child seats (not for driver's seat belt) - country-specific	13
1.23 Checking child seat anchors after an accident	13
1.24 Safety instructions for automatic anti-dazzle interior mirror	13
2 Repair notes	14
2.1 Contact corrosion	14
2.2 Routing and attachment of lines	14
68 - Interior equipment	15
1 Compartments/covers	15
1.1 Overview of fitting locations - storage compartments/covers	15
1.2 Assembly overview - driver side dash panel cover	16
1.3 Assembly overview - steering column trim	17
1.4 Assembly overview - glove compartment	18
1.5 Removing and installing dash panel cover on driver side	19
1.6 Removing and installing dash panel insert trim	20
1.7 Removing and installing upper steering column trim	21
1.8 Removing and installing lower steering column trim	22
1.9 Removing and installing glove compartment opener	23
1.10 Removing and installing dash panel cover on front passenger side	23
1.11 Removing and installing glove compartment	25
1.12 Removing and installing glove compartment cover	26
1.13 Removing and installing restrictor for glove compartment cover	26
2 Equipment	28
2.1 Assembly overview - sun visors	28
2.2 Removing and installing sun visor	28
2.3 Removing and installing sun visor centre mount	31



2.4	Removing and installing roof grab handle	32
3	Centre console	36
3.1	Assembly overview - centre console	36
3.2	Removing and installing rear centre console trim	36
3.3	Removing and installing centre console insert	37
3.4	Removing and installing centre console	38
3.5	Removing and installing centre console bracket	39
4	Front centre armrest	41
4.1	Removing and installing front centre armrest	41
5	On inside	42
5.1	Assembly overview - interior mirror	42
5.2	Removing and installing interior mirror	42
69	Passenger protection	47
1	Seat belts	47
1.1	Overview of fitting locations - seat belts and anchorage points	47
1.2	Assembly overview - front three-point seat belt	49
1.3	Assembly overview - rear outer three-point seat belt	51
1.4	Assembly overview - rear centre three-point seat belt	51
1.5	Assembly overview - front belt buckle	52
1.6	Assembly overview - rear belt buckle	53
1.7	Removing and installing front three-point seat belt	54
1.8	Removing and installing rear three-point seat belt	57
1.9	Removing and installing rear belt guide	60
1.10	Removing and installing front belt guide	60
1.11	Removing and installing front belt end fitting	61
1.12	Removing and installing rear outer belt end fitting	63
1.13	Removing and installing front belt buckle	64
1.14	Removing and installing rear belt buckle	64
2	Child seat anchors	66
2.1	Assembly overview - front child seat anchors	66
2.2	Assembly overview - rear child seat anchors	66
2.3	Removing and installing front child seat anchors	67
2.4	Removing and installing rear child seat anchors	68
3	Airbag system	70
3.1	Overview of fitting locations - airbag system	70
4	Airbag control unit	73
4.1	Assembly overview - airbag control unit	73
4.2	Removing and installing airbag control unit J234	73
5	Driver's airbag	77
5.1	Assembly overview - driver side airbag	77
5.2	Removing and installing airbag unit with igniter	77
5.3	Renewing connector on airbag	81
6	Front passenger side airbag	83
6.1	Assembly overview - front passenger side airbag	83
6.2	Removing and installing front passenger side airbag unit with igniter	83
6.3	Removing and installing key-operated switch to deactivate front passenger side airbag	85
7	Side airbags	88
7.1	Assembly overview - front side airbag	88
7.2	Removing and installing front side airbag with igniter	89
8	Curtain airbags	94
8.1	Assembly overview - curtain airbag	94
8.2	Removing and installing curtain airbag with igniter	94
9	Airbag crash sensors	98



9.1	Overview of fitting locations - airbag crash sensors	98
9.2	Removing and installing front airbag crash sensor, driver side G283	99
9.3	Removing and installing front side airbag crash sensor G179/G180	101
9.4	Removing and installing rear side airbag crash sensor G256/G257	104
10	Seat occupied recognition	107
10.1	Overview of fitting locations - seat occupied recognition system	107
10.2	Removing and installing seat occupied recognition	108
70	Trim, insulation	112
1	Front door trims	112
1.1	Removing and installing front door trim	112
1.2	Removing and installing button trim	116
1.3	Removing and installing mirror cover trim	117
2	Rear door trims	119
2.1	Removing and installing rear door trim	119
3	Dash panel	125
3.1	Removing and installing dash panel end cover	125
3.2	Removing and installing dash panel trim	126
3.3	Removing and installing loudspeaker trim	126
3.4	Removing and installing dash panel	127
3.5	Removing and installing outer dash panel vents	132
3.6	Removing and installing centre vent	133
4	Central tube for dash panel	135
4.1	Removing and installing central tube for dash panel	135
4.2	Removing and installing crash bar	140
5	Interior trims	142
5.1	Removing and installing sill panel moulding	142
5.2	Removing and installing A-pillar trim	146
5.3	Removing and installing A-pillar gap cover	152
5.4	Removing and installing B-pillar trim	153
5.5	Removing and installing C-pillar trim	159
5.6	Removing and installing floor covering	160
6	Luggage compartment trims	162
6.1	Removing and installing lower rear lid trim	162
6.2	Removing and installing upper rear lid trim	163
6.3	Removing and installing luggage compartment side trim	164
6.4	Removing and installing lock carrier trim	165
6.5	Removing and installing support for luggage compartment floor	166
7	Roof trims	168
7.1	Removing and installing roof end strip	168
7.2	Removing and installing moulded headlining	169
7.3	Installing roof reinforcement to body	171
72	Seat frames	174
1	Front seats	174
1.1	Overview of fitting locations - electrical and electronic components	174
1.2	Assembly overview - front seat	176
1.3	Assembly overview - front backrest	177
1.4	Assembly overview - head restraint	178
1.5	Assembly overview - seat pan	179
1.6	Removing and installing front seat	181
1.7	Removing and installing handle for seat height adjustment	193
1.8	Removing and installing seat height adjustment unit	194
1.9	Removing and installing front backrest	195
1.10	Removing and installing head restraint	197



1.11	Removing and installing head restraint guide	199
1.12	Removing and installing lumbar support	199
1.13	Removing and handle for installing backrest adjustment	200
2	Rear seats	202
2.1	Assembly overview - bench seat/individual seats	202
2.2	Assembly overview - rear seat backrest	203
2.3	Assembly overview - locking mechanism	205
2.4	Assembly overview - centre armrest	205
2.5	Removing and installing bench seat/individual seats	206
2.6	Removing and installing rear seat backrest	210
2.7	Removing and installing trim for locking mechanism	212
2.8	Removing and installing locking mechanism for rear seat backrest	214
2.9	Removing and installing trim frame for load-through hatch	214
2.10	Removing and installing flap for load-through hatch	217
2.11	Removing and installing centre armrest	218
2.12	Removing and installing head restraint	218
2.13	Removing and installing head restraint guide	219
74	Seat - padding, covers	221
1	Front seat covers and padding	221
1.1	Assembly overview - cover and padding for seat pan	221
1.2	Assembly overview - cover and padding for backrest	222
1.3	Assembly overview - seat heating element	223
1.4	Assembly overview - backrest heater element	224
1.5	Removing and installing cover and padding for seat pan	225
1.6	Removing and installing backrest cover and backrest padding	226
1.7	Separating cover and padding on seat pan	229
1.8	Removing and installing seat heating element Z6/Z8	231
1.9	Removing and installing backrest heating element Z7/Z9	232
2	Rear seat covers and padding	233
2.1	Assembly overview - cover and padding	233
2.2	Removing and installing covers and padding	234
2.3	Separating cover and padding	242