



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Safety information and repair notes</b> .....	<b>1</b>
1.1 Safety information .....	1
1.2 Repair instructions .....	1
<b>2 Electrical components</b> .....	<b>2</b>
2.1 Access to diagnoses .....	2
<b>3 Repair instructions</b> .....	<b>3</b>
3.1 Bonding surfaces for self-adhesive components .....	3
<b>50 - Body - front</b> .....	<b>5</b>
<b>1 Safety information and repair notes</b> .....	<b>5</b>
1.1 Safety information .....	5
1.2 Repair instructions .....	5
<b>2 Lock carrier</b> .....	<b>6</b>
2.1 Assembly overview – lock carrier .....	6
2.2 Removing and installing lock carrier .....	6
2.3 Removing and installing headlight mounting carrier .....	7
<b>3 Wings</b> .....	<b>9</b>
3.1 Assembly overview – wing .....	9
3.2 Removing and installing wing .....	10
3.3 Removing and installing wing bracket .....	12
3.4 Removing and installing end plate .....	13
3.5 Bracket for deformation element .....	14
<b>4 Bulkhead</b> .....	<b>16</b>
4.1 Assembly overview – bulkhead .....	16
4.2 Assembly overview – plenum chamber cover .....	16
4.3 Removing and installing bulkhead .....	17
4.4 Removing and installing plenum chamber cover .....	18
<b>55 - Bonnet, rear lid</b> .....	<b>20</b>
<b>1 Safety information and repair notes</b> .....	<b>20</b>
1.1 Safety information .....	20
1.2 Repair instructions .....	20
<b>2 Bonnet</b> .....	<b>21</b>
2.1 Assembly overview – bonnet .....	21
2.2 Assembly overview – Bowden cable .....	21
2.3 Removing and installing bonnet .....	22
2.4 Adjusting bonnet .....	23
2.5 Removing and installing bonnet lock .....	24
2.6 Removing and installing bonnet lock operating lever .....	25
2.7 Removing and installing striker pin .....	26
2.8 Removing and installing hinge .....	27
2.9 Adjusting hinges .....	27
2.10 Adjusting striker pin .....	28
2.11 Adjusting adjusting buffers .....	29
2.12 Adjusting bonnet lock .....	30
2.13 Removing and installing Bowden cable .....	31
2.14 Removing and installing bonnet stay .....	34
<b>3 Rear lid</b> .....	<b>36</b>
3.1 Assembly overview – rear lid .....	36
3.2 Removing and installing rear lid .....	39
3.3 Adjusting rear lid .....	43



3.4	Adjust adjustment buffer at bottom	44
3.5	Removing and installing striker pin	45
3.6	Removing and installing hinge	46
3.7	Adjusting striker pin	47
3.8	Removing and installing rear lid lock unit [VX25]	47
3.9	Removing and installing rear lid seal	49
3.10	Removing and installing rear lid handle [EX37]	50
3.11	Removing and installing adjusting buffer at bottom	51
3.12	Removing and installing gas strut	51
3.13	Preparing gas strut for disposal	52
3.14	Removing and installing ball stud	53
<b>4</b>	<b>Charging flap unit</b>	<b>55</b>
4.1	Assembly overview – charging flap unit	55
4.2	Removing and installing charging flap unit	55
4.3	Removing and installing charging flap	57
4.4	Removing and installing LED module for charging socket 1 [L263]	58
<b>57</b>	<b>Front doors, door components, central locking</b>	<b>60</b>
<b>1</b>	<b>Safety information and repair notes</b>	<b>60</b>
1.1	Safety information	60
1.2	Repair instructions	60
<b>2</b>	<b>Door</b>	<b>61</b>
2.1	Assembly overview – door	61
2.2	Removing and installing inner door seal	63
2.3	Removing and installing outer door seal	65
2.4	Removing and installing door	65
2.5	Adjusting door	68
2.6	Adjusting striker pin	70
2.7	Removing and installing door hinge, left-hand drive vehicles	71
2.8	Removing and installing door hinge, right-hand drive vehicles	72
2.9	Removing and installing door arrester	74
<b>3</b>	<b>Door components</b>	<b>76</b>
3.1	Assembly overview – door handle and door lock	76
3.2	Assembly overview – door components	78
3.3	Assembly overview – assembly carrier	78
3.4	Removing and installing window regulator motor [V147]/[V148]	79
3.5	Removing and installing striker pin	81
3.6	Removing and installing exterior door handle [EX6]/[EX7]	81
3.7	Assembling exterior door handle [EX6]/[EX7]	83
3.8	Removing and installing mounting bracket	84
3.9	Removing and installing lock unit [VX21]/[VX22]	85
3.10	Removing and installing window channel	86
3.11	Removing and installing assembly carrier	88
3.12	Removing and installing inner window slot seal	90
3.13	Removing and installing outer window slot seal	92
3.14	Removing and installing lock cylinder	93
3.15	Removing and installing Bowden cable for exterior door handle	94
3.16	Removing and installing Bowden cable for interior door handle	95
<b>4</b>	<b>Central locking</b>	<b>96</b>
4.1	Overview of fitting locations – central locking system	96
4.2	Removing and installing door control unit [J386]/[J387]	98
4.3	Removing and installing ignition key battery	99
4.4	Removing and installing actuator for high-voltage charging flap lock [F496]	99
<b>58</b>	<b>Rear doors, door components</b>	<b>101</b>



<b>1</b>	<b>Safety information and repair notes</b>	<b>101</b>
1.1	Safety information	101
1.2	Repair instructions	101
<b>2</b>	<b>Door</b>	<b>102</b>
2.1	Assembly overview – door	102
2.2	Removing and installing door	104
2.3	Adjusting door	106
2.4	Adjusting striker pin	108
2.5	Removing and installing door hinge	109
2.6	Removing and installing door arrester	110
2.7	Removing and installing inner door seal	111
2.8	Removing and installing door joint seal	112
<b>3</b>	<b>Door components</b>	<b>114</b>
3.1	Assembly overview – door components	114
3.2	Assembly overview – assembly carrier	114
3.3	Assembly overview – door handle and door lock	115
3.4	Removing and installing rear window regulator motor [V471]/[V472]	117
3.5	Removing and installing striker pin	118
3.6	Removing and installing exterior door handle [EX8]/[EX9]	119
3.7	Assembling exterior door handle [EX8]/[EX9]	120
3.8	Removing and installing mounting bracket	121
3.9	Removing and installing rear door lock unit [VX83]/[VX84]	123
3.10	Removing and installing assembly carrier	124
3.11	Removing and installing window channel	125
3.12	Removing and installing outer window slot seal	127
3.13	Removing and installing window slot inner seal	128
3.14	Removing and installing Bowden cable for exterior door handle	130
3.15	Removing and installing Bowden cable for interior door handle	130
<b>60</b>	<b>Sunroof</b>	<b>132</b>
<b>1</b>	<b>Safety information and repair notes</b>	<b>132</b>
1.1	Safety information	132
1.2	Repair instructions	132
<b>2</b>	<b>Sliding sunroof</b>	<b>133</b>
2.1	Assembly overview – glass panel	133
2.2	Assembly overview – sun blind	133
2.3	Removing and installing frame with sun blind	135
2.4	Dismantling and assembling frame with sun blind	135
2.5	Removing and installing sun blind cables	137
2.6	Removing and installing sun blind	137
2.7	Removing and installing sliding sunroof adjustment control unit [J245]	138
2.8	Adapting sliding sunroof adjustment control unit [J245]	139
2.9	Manual operation	139
2.10	Removing and installing sunroof roller blind motor [V260]	140
2.11	Removing and installing glass panel	141
2.12	Minimum drying time for bonded glass panels	147
2.13	Installations instructions for bonded glass panels	147
<b>3</b>	<b>Water drain hoses</b>	<b>150</b>
3.1	Assembly overview - water drain hoses	150
3.2	Cleaning water drain hoses	150
3.3	Removing and installing water drain hoses	151
3.4	Removing and installing water drain hose mounting	152
<b>63</b>	<b>Bumpers</b>	<b>154</b>
<b>1</b>	<b>Safety information and repair notes</b>	<b>154</b>



1.1	Safety information	154
1.2	Repair instructions	154
<b>2</b>	<b>Bumper, front</b>	<b>155</b>
2.1	Assembly overview – bumper cover	155
2.2	Assembly overview – bumper carrier	157
2.3	Removing and installing bumper cover	158
2.4	Removing and installing bumper carrier	159
2.5	Installing holder for park assist steering sender	161
2.6	Repairing bumper cover	164
2.7	Moving bumper carrier to and back from service position	164
2.8	Removing and installing radar sensor cover	165
2.9	Removing and installing front spoiler bracket	166
2.10	Removing and installing trim	167
2.11	Removing and installing number plate carrier	167
2.12	Removing and installing towing eye cap	168
2.13	Removing and installing centre air intake grille	169
<b>3</b>	<b>Bumper, rear</b>	<b>170</b>
3.1	Assembly overview – bumper cover	170
3.2	Assembly overview – bumper carrier	172
3.3	Removing and installing bumper cover	172
3.4	Removing and installing bumper carrier	174
3.5	Repairing bumper cover	174
3.6	Installing retainer for parking aid sender	174
3.7	Removing and installing rear bumper cover spoiler	177
3.8	Removing and installing forced ventilation for passenger compartment	177
3.9	Checking forced ventilation for passenger compartment	178
3.10	Removing and installing number plate carrier	178
<b>64 - Glazing</b>		<b>180</b>
<b>1</b>	<b>Safety information and repair notes</b>	<b>180</b>
1.1	Safety information	180
1.2	Repair instructions	180
<b>2</b>	<b>Repair notes</b>	<b>181</b>
2.1	Minimum drying times for bonded windows	181
2.2	Repairing windows	181
2.3	Installation instructions for bonded windows	181
2.4	Preparing old undamaged windows for installing	183
2.5	Preparing new windows for installation	184
2.6	Preparing body flange for installing	185
2.7	Cleaning off excess adhesive	187
2.8	Preparing flange for installation of rear window	187
2.9	Removing broken window	189
<b>3</b>	<b>Windscreen</b>	<b>191</b>
3.1	Assembly overview – windscreen	191
3.2	Removing and installing windscreen	191
3.3	Removing broken windscreen	197
<b>4</b>	<b>Rear windscreen</b>	<b>198</b>
4.1	Assembly overview – rear window	198
4.2	Removing and installing rear window	198
4.3	Removing broken rear window	201
<b>5</b>	<b>Side windows</b>	<b>202</b>
5.1	Assembly overview - front side window	202
5.2	Removing and installing front side window	202
5.3	Removing broken front side window	204
<b>6</b>	<b>Door windows</b>	<b>205</b>



6.1	Assembly overview - front door window	205
6.2	Assembly overview - rear door window	205
6.3	Assembly overview – fixed rear door window	206
6.4	Removing and installing front door window	207
6.5	Removing and installing rear door window	210
6.6	Removing and installing fixed rear door window	212
<b>66</b>	<b>- Exterior equipment</b>	<b>213</b>
<b>1</b>	<b>Safety information and repair notes</b>	<b>213</b>
1.1	Safety information	213
1.2	Repair instructions	213
<b>2</b>	<b>Spoiler</b>	<b>214</b>
2.1	Assembly overview – spoiler	214
2.2	Removing and installing trim for rear spoiler	214
2.3	Removing and installing side spoiler	216
<b>3</b>	<b>Mouldings, trims, extensions</b>	<b>217</b>
3.1	Assembly overview – bonnet cover	217
3.2	Assembly overview - side member trim	217
3.3	Assembly overview – water deflector	218
3.4	Removing and installing bonnet cover	219
3.5	Removing and installing water deflector	221
3.6	Removing and installing retaining strip	221
3.7	Removing and installing side member trim	222
3.8	Removing and installing A-pillar cover	224
3.9	Removing and installing A-pillar trim	225
3.10	Removing and installing B-pillar trim on door	226
<b>4</b>	<b>Underbody cladding</b>	<b>229</b>
4.1	Assembly overview – underbody cladding, 55, 62 kWh	229
4.2	Assembly overview – underbody cladding, 82 kWh	231
4.3	Removing and installing high-voltage battery skid plate, 55, 62 kWh	233
4.4	Removing and installing high-voltage battery skid plate, 82 kWh	235
4.5	Removing and installing side underbody cladding, 55, 62 kWh	236
4.6	Removing and installing side underbody cladding, 82 kWh	237
4.7	Removing and installing front underbody cladding	239
4.8	Removing and installing centre underbody cladding	239
4.9	Removing and installing rear centre underbody cladding	240
4.10	Removing and installing rear underbody cladding	241
4.11	Removing and installing skid plate	241
<b>5</b>	<b>Roof moulding and roof railing</b>	<b>243</b>
5.1	Assembly overview – roof trim strip	243
5.2	Removing and installing roof trim strip	243
5.3	Removing and installing rear roof trim strip	244
<b>6</b>	<b>Exterior mirror</b>	<b>247</b>
6.1	Assembly overview – exterior mirror	247
6.2	Removing and installing exterior mirror [VX4]/[VX5]	249
6.3	Removing and installing mirror glass	250
6.4	Removing and installing mirror adjustment unit	251
6.5	Removing and installing upper mirror cover	252
6.6	Removing and installing mirror frame	253
<b>7</b>	<b>Wheel housing liner</b>	<b>255</b>
7.1	Assembly overview – front wheel housing liner	255
7.2	Assembly overview – rear wheel housing liner	255
7.3	Removing and installing front wheel housing liner	256
7.4	Removing and installing rear wheel housing liner	258
<b>8</b>	<b>Lettering and emblems</b>	<b>259</b>



8.1	Assembly overview – lettering and badges .....	259
8.2	Removing and installing front badge .....	259
8.3	Removing and installing badge at rear .....	260
8.4	Removing and installing lettering at rear .....	260
8.5	Renewing lettering and badges on sides .....	261
8.6	Removing and installing badge at rear .....	262
<b>9</b>	<b>Bicycle carrier .....</b>	<b>263</b>
9.1	Assembly overview – bicycle carrier bracket .....	263
9.2	Removing and installing bicycle carrier bracket .....	263
<b>10</b>	<b>Trim film and protective film .....</b>	<b>265</b>
10.1	Renewing decorative film .....	265