



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Basic instructions</b>	<b>1</b>
1.1 Original joint	1
1.2 Used joining techniques	1
<b>2 Vehicle identification data</b>	<b>3</b>
2.1 Vehicle identification number	3
2.2 Type plate	4
2.3 Safety certificate	5
<b>3 Safety information</b>	<b>7</b>
<b>4 Body work for which HV electrical system must be de-energised</b>	<b>8</b>
4.1 The following body work requires the HV electrical system to be de-energised.	8
<b>5 If the high-voltage battery is removed, note the following:</b>	<b>9</b>
<b>6 Moulded foam inserts</b>	<b>10</b>
<b>7 Galvanized body parts, high- and higher-strength and hot-formed body panels</b>	<b>12</b>
<b>8 Laser welding</b>	<b>15</b>
<b>9 Straightening bracket set</b>	<b>16</b>
9.1 Overview of setup, entire body	16
<b>10 Portal gauge</b>	<b>18</b>
10.1 Overview of setup, entire body	18
<b>50 - Body - front</b>	<b>20</b>
<b>1 Renewing front longitudinal member end plate</b>	<b>20</b>
1.1 Tools	21
1.2 Removing	21
1.3 Installing	23
<b>2 Renewing battery carrier</b>	<b>26</b>
2.1 Tools	27
2.2 Removing	27
2.3 Installing	28
<b>3 Renewing upper wheel housing longitudinal member - part section</b>	<b>31</b>
3.1 Tools	32
3.2 Removing	32
3.3 Installing	34
<b>4 Renewing upper inner wheel housing longitudinal member - part section</b>	<b>38</b>
4.1 Tools	39
4.2 Removing	39
4.3 Installing	41
<b>5 Renewing front wheel housing</b>	<b>45</b>
5.1 Tools	46
5.2 Removing	46
5.3 Installing	49
<b>6 Renewing front wheel housing (part section)</b>	<b>55</b>
6.1 Tools	56
6.2 Removing	56
6.3 Installing	59
<b>7 Renewing front left longitudinal member (part section)</b>	<b>65</b>
7.1 Tools	66
7.2 Removing	66
7.3 Installing	69
<b>8 Renewing front right longitudinal member (part section)</b>	<b>76</b>



8.1	Tools	77
8.2	Removing	77
8.3	Installing	80
<b>9</b>	<b>Renewing front left longitudinal member (part section – second parting cut)</b>	<b>87</b>
9.1	Tools	88
9.2	Removing	88
9.3	Installing	91
<b>10</b>	<b>Renewing front right longitudinal member (part section – second parting cut)</b>	<b>102</b>
10.1	Tools	103
10.2	Removing	103
10.3	Installing	106
<b>11</b>	<b>Renewing studs</b>	<b>117</b>
<b>51 - Body - centre</b>		<b>119</b>
<b>1</b>	<b>Renewing roof – vehicles with no panoramic sliding sunroof</b>	<b>119</b>
1.1	Tools	120
1.2	Removing	120
1.3	Installing	124
<b>2</b>	<b>Renewing roof – vehicles with panoramic sliding sunroof</b>	<b>134</b>
2.1	Tools	135
2.2	Removing	135
2.3	Installing	139
<b>3</b>	<b>Renewing roof side member</b>	<b>149</b>
3.1	Tools	150
3.2	Removing	151
3.3	Installing	153
<b>4</b>	<b>Renewing A-pillar</b>	<b>159</b>
4.1	Tools	161
4.2	Removing	161
4.3	Installing	163
<b>5</b>	<b>Renewing A-pillar reinforcement (part section)</b>	<b>168</b>
5.1	Tools	169
5.2	Removing	169
5.3	Installing	172
<b>6</b>	<b>Renewing B-pillar</b>	<b>177</b>
6.1	Tools	179
6.2	Type plate	179
6.3	Removing	180
6.4	Installing	182
<b>7</b>	<b>Renewing B-pillar reinforcement</b>	<b>187</b>
7.1	Tools	188
7.2	Type plate	188
7.3	Removing	189
7.4	Installing	191
<b>8</b>	<b>Renewing inner B-pillar</b>	<b>195</b>
8.1	Tools	196
8.2	Removing	196
8.3	Installing	198
<b>9</b>	<b>Renewing outer side member</b>	<b>202</b>
9.1	Tools	203
9.2	Type plate	203
9.3	Removing	204
9.4	Installing	206
<b>10</b>	<b>Renewing side member reinforcement</b>	<b>211</b>



10.1	Tools .....	212
10.2	Removing .....	212
10.3	Installing .....	214
<b>11</b>	<b>Renewing side panel reinforcement (crash bar) .....</b>	<b>218</b>
11.1	Tools .....	219
11.2	Removing .....	219
11.3	Installing .....	221
<b>53 - Body - rear .....</b>	<b>225</b>	
<b>1</b>	<b>Renewing rear cross panel .....</b>	<b>225</b>
1.1	Tools .....	226
1.2	Removing .....	226
1.3	Installing .....	228
<b>2</b>	<b>Renewing rear cross member .....</b>	<b>232</b>
2.1	Tools .....	233
2.2	Removing .....	233
2.3	Installing .....	234
<b>3</b>	<b>Renewing rear floor cross member .....</b>	<b>238</b>
3.1	Tools .....	239
3.2	Removing .....	239
3.3	Installing .....	241
<b>4</b>	<b>Renewing centre floor panel (part section) .....</b>	<b>245</b>
4.1	Tools .....	246
4.2	Removing .....	246
4.3	Installing .....	248
<b>5</b>	<b>Renewing rear floor panel .....</b>	<b>252</b>
5.1	Tools .....	253
5.2	Removing .....	253
5.3	Installing .....	255
<b>6</b>	<b>Renewing longitudinal member cover plate .....</b>	<b>259</b>
6.1	Tools .....	260
6.2	Removing .....	260
6.3	Installing .....	262
<b>7</b>	<b>Renewing rear longitudinal member (part section) .....</b>	<b>266</b>
7.1	Tools .....	267
7.2	Removing .....	267
7.3	Installing .....	269
<b>8</b>	<b>Renewing rear longitudinal member (second part section) .....</b>	<b>273</b>
8.1	Tools .....	274
8.2	Removing .....	274
8.3	Installing .....	277
<b>9</b>	<b>Permitted parting cuts on side panel .....</b>	<b>283</b>
<b>10</b>	<b>Renewing side panel (part section) .....</b>	<b>284</b>
10.1	Tools .....	286
10.2	Removing .....	286
10.3	Installing .....	288
<b>11</b>	<b>Renewing floor panel reinforcement .....</b>	<b>294</b>
11.1	Tools .....	295
11.2	Removing .....	295
11.3	Installing .....	296
<b>12</b>	<b>Renewing outer wheel housing liner .....</b>	<b>299</b>
12.1	Tools .....	300
12.2	Removing .....	300
12.3	Installing .....	303