

Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 General information	2
2.1 Type plates, R1234yf	2
2.2 Type plates, R744	2
3 Technical data	3
3.1 Refrigerant capacities, R1234yf	3
3.2 Refrigerant capacities, R744	3
3.3 Refrigerant oil capacities, R1234yf	3
3.4 Refrigerant oil capacities, R744	3
3.5 Oil distribution	3
4 Electrical components	5
4.1 Access to diagnoses	5
87 - Air conditioning system	7
1 Safety information and repair notes	7
1.1 Safety information	7
1.2 Repair instructions	7
2 Overview of fitting locations – air conditioning system	8
2.1 Overview of fitting locations – components not located in passenger compartment, with heat pump	8
2.2 Overview of fitting locations – components not located in passenger compartment, without heat pump	11
2.3 Overview of fitting locations – components located in front section of passenger compartment	13
3 Refrigerant circuit	16
3.1 System overview - refrigerant circuit, R1234yf	16
3.2 System overview - refrigerant circuit, R744	18
3.3 Assembly overview – refrigerant lines, R1234yf	20
3.4 Assembly overview – refrigerant lines, R744	22
3.5 Assembly overview – heat exchanger for high-voltage battery, R1234yf	24
3.6 Assembly overview – condenser, R1234yf	25
3.7 Removing and installing refrigerant pressure and temperature sender [G395], R1234yf	26
3.8 Removing and installing refrigerant pressure and temperature sender [G395], R744	28
3.9 Removing and installing pressure sender for refrigerant circuit [G805], R1234yf	29
3.10 Removing and installing expansion valve	30
3.11 Removing/installing refrigerant line from/to expansion valve, R1234yf	31
3.12 Removing and installing condenser/gas cooler, R1234yf	32
3.13 Removing and installing condenser/gas cooler, R744	33
3.14 Removing and installing desiccant bag/dryer, R1234yf	34
3.15 Removing and installing desiccant bag/dryer, R744	35
3.16 Removing and installing evacuating and charging valves on low and high-pressure side, R1234yf	37
3.17 Removing and installing evacuating and charging valves on low and high-pressure side, R744	38
3.18 Removing and installing refrigerant pressure and temperature sender 2 [G826]	40
3.19 Removing and installing refrigerant pressure and temperature sender 3 [G827]	41
3.20 Removing and installing refrigerant pressure and temperature sender 4 [G828]	43
3.21 Removing and installing refrigerant pressure and temperature sender 5 [G829]	45
3.22 Removing and installing pressure relief valve, R744	46
3.23 Removing and installing heat exchanger for high-voltage battery, R1234yf	47



3.24	Removing and installing heat exchanger for high-voltage battery, R744	49
3.25	Removing and installing heat condenser, R744	51
3.26	Removing and installing refrigerant shut-off valve for heater and air conditioner unit [N541]	52
3.27	Removing and installing refrigerant line, R1234yf	55
3.28	Removing and installing refrigerant line, R744	64
3.29	Disconnecting/connecting refrigerant lines from/to condenser/gas cooler, R1234yf	76
3.30	Disconnecting/connecting refrigerant lines from/to condenser/gas cooler, R744	77
3.31	Cleaning refrigerant circuit, refrigerant R744	79
3.32	Cleaning refrigerant circuit, refrigerant R1234yf	81
4	Valve unit of heat pump	84
4.1	Exploded view - heat pump valve unit	84
4.2	Removing and installing valve unit of heat pump	88
4.3	Removing and installing refrigerant expansion valve 1 [N636]	92
4.4	Removing and installing refrigerant expansion valve 2 N637	93
4.5	Removing and installing refrigerant expansion valve 3 N638	94
4.6	Removing and installing refrigerant shut-off valve 1 N696	94
4.7	Removing and installing refrigerant shut-off valve 2 N640	94
4.8	Removing and installing refrigerant shut-off valve 3 N641	96
4.9	Removing and installing refrigerant shut-off valve 4 N642	96
4.10	Removing and installing refrigerant shut-off valve 5 N643	98
5	Air conditioner compressor	99
5.1	Exploded view - air conditioner compressor	99
5.2	Removing refrigerant lines from and installing to air conditioner compressor, R1234yf	100
5.3	Detaching/attaching refrigerant lines from/to air conditioner compressor, R744	101
5.4	Removing and installing air conditioner compressor [VX81], R1234yf	103
5.5	Removing and installing air conditioner compressor [VX81], R744	106
5.6	Detaching and attaching air conditioner compressor at bracket	109
6	Control motors	110
6.1	Overview of fitting locations – control motors at front	110
6.2	Exploded view - control motors (front)	111
6.3	Removing and installing control motor for front left temperature flap [VX34]	113
6.4	Removing and installing control motor for front right temperature flap [VX35]	116
6.5	Removing and installing control motor for defroster flap [VX47]	118
6.6	Removing and installing control motor for front left air distribution flap [VX93]	120
6.7	Removing and installing control motor for front right air distribution flap [VX94]	122
6.8	Removing and installing control motor for fresh air and air recirculation flap [VX96]	125
6.9	Removing and installing left air distribution flap actuator	126
6.10	Removing and installing right air distribution flap actuator	127
7	Front heater and air conditioning unit	129
7.1	Exploded view - heater and air conditioning unit	129
7.2	Assembly overview – evaporator housing, R1234yf	129
7.3	Assembly overview – evaporator housing, R744	130
7.4	Assembly overview - air intake box of heater and air conditioning unit	131
7.5	Removing and installing heater and air conditioning unit, R1234yf	133
7.6	Removing and installing heater and air conditioning unit, R744	136
7.7	Removing and installing evaporator, R1234yf	140
7.8	Removing and installing evaporator, R744	141
7.9	Dismantling and assembling heater and air conditioning unit, R1234yf	142
7.10	Dismantling and assembling heater and air conditioning unit, R744	142
7.11	Removing and installing dust and pollen filter	142
7.12	Removing and installing fresh air blower control unit J126	143
7.13	Removing and installing evaporator temperature sensor [G308]	145
7.14	Removing and installing condensation drain	145
7.15	Checking condensation drain	146



7.16	Removing and installing air intake box of heater and air conditioning unit	147
7.17	Removing and installing air intake cowling	150
7.18	Removing and installing high voltage heater (PTC) [ZX17]	151
8	Air duct	158
8.1	Assembly overview – air duct and air distribution in passenger compartment	158
8.2	Removing and installing driver side footwell vents	161
8.3	Removing and installing front passenger side footwell vents	162
8.4	Removing and installing rear footwell vent	163
8.5	Removing and installing fresh air intake	164
8.6	Removing and installing air duct for defroster vent	164
8.7	Removing and installing air duct for centre dash panel vent	165
8.8	Removing and installing air duct for rear centre console vent	165
8.9	Removing and installing front air duct for dash panel	166
9	Coolant circuit	168
9.1	Exploded view - high-voltage heater (PTC)	168
9.2	Removing and installing PTC heater element 3 [Z132]	168
10	Operating and display unit	171
10.1	Overview of fitting locations – operating and display unit	171
10.2	Removing and installing display unit for front information display and operating unit control unit [J685]	171
11	Other controlling and regulating components	172
11.1	Removing and installing external air quality and air humidity sensor G935	172
11.2	Removing and installing ambient temperature sensor [G17]	172
11.3	Removing and installing humidity sender for air conditioning system [G260]	173
11.4	Removing and installing left vent temperature sender [G150]	173
11.5	Removing and installing right vent temperature sender [G151]	174
11.6	Removing and installing left footwell vent temperature sender [G261]	175
11.7	Removing and installing right footwell vent temperature sender [G262]	176
11.8	Removing and installing sensor for interior carbon dioxide concentration [G929]	177
11.9	Removing and installing heater and air conditioning system control unit [J979]	177
11.10	Removing and installing vehicle interior temperature sensor [G1090]	178