



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information and repair notes</b>	<b>1</b>
1.1 Safety information	1
1.2 Repair instructions	1
<b>2 Identification</b>	<b>2</b>
2.1 Motor designation	2
2.2 Motor data	3
<b>3 Electrical components</b>	<b>5</b>
3.1 Access to diagnoses	5
<b>4 Hazard classification of high-voltage system</b>	<b>7</b>
4.1 Classification of dangers of the high-voltage system	7
<b>10 - Removing and installing engine</b>	<b>16</b>
<b>1 Safety information and repair notes</b>	<b>16</b>
1.1 Safety information	16
1.2 Repair instructions	16
<b>2 Removing and installing front motor</b>	<b>17</b>
2.1 Assembly overview – front motor	17
2.2 Removing front motor	21
2.3 Securing motor to engine and gearbox support, front motor	25
2.4 Installing front motor	27
<b>3 Removing and installing rear motor</b>	<b>32</b>
3.1 Exploded view - motor (rear)	32
3.2 Removing rear motor	34
3.3 Securing motor to engine and gearbox support, rear motor	39
3.4 Installing rear motor	42
<b>4 Front assembly mountings</b>	<b>46</b>
4.1 Removing and installing motor mountings	46
4.2 Removing and installing gearbox mountings	46
<b>5 Rear assembly mountings</b>	<b>47</b>
5.1 Removing and installing assembly mountings	47
<b>19 - Cooling</b>	<b>48</b>
<b>1 Safety information and repair notes</b>	<b>48</b>
1.1 Safety information	48
1.2 Repair instructions	48
<b>2 Cooling system/coolant</b>	<b>49</b>
2.1 Connection diagram – coolant hoses, refrigerant R744	49
2.2 Connection diagram – coolant hoses, refrigerant R1234yf	50
2.3 Overview of fitting locations – cooling system, rear-wheel drive	52
2.4 Overview of fitting locations – cooling system, all-wheel drive	54
2.5 Assembly overview – cooling system, rear-wheel drive	56
2.6 Assembly overview – cooling system, all-wheel drive	61
2.7 Checking cooling system for leaks	66
2.8 Draining coolant	69
2.9 Filling cooling system	71
2.10 Removing and installing coolant expansion tank	77
2.11 Checking filling quality	79
<b>3 Coolant pump/coolant regulation</b>	<b>81</b>
3.1 Assembly overview - electric coolant pump	81
3.2 Assembly overview – coolant valves	81



3.3	Exploded view - coolant temperature senders	82
3.4	Removing and installing coolant pump for high-voltage battery [V590], rear-wheel drive	84
3.5	Removing and installing coolant pump for high-voltage battery [V590], all-wheel drive	86
3.6	Removing and installing coolant pump for low-temperature circuit [V468]	87
3.7	Removing and installing mixing valve for high-voltage battery pre-heating [V683]	88
3.8	Removing and installing mixing valve 2 for high-voltage battery [V696] pre-heating, heat pump	90
3.9	Removing and installing temperature sensor [G18]	91
3.10	Removing and installing coolant temperature sender 1 for high-voltage battery G898	92
3.11	Removing and installing coolant temperature sender 2 for high-voltage battery G899	93
<b>4</b>	<b>Radiator, radiator fan</b>	<b>96</b>
4.1	Assembly overview - radiator/radiator fan	96
4.2	Assembly overview – radiator cowl and radiator fan	96
4.3	Removing and installing radiator module	97
4.4	Dismantling and assembling radiator module	99
4.5	Removing and installing radiator cowl with radiator fan	103
4.6	Removing and installing radiator fan VX57	104
4.7	Removing and installing control motor for radiator roller blind [V711], ID.3	105
4.8	Removing and installing control motor for radiator roller blind [V711], ID.4	106
<b>93</b>	<b>Electric drive systems</b>	<b>108</b>
<b>1</b>	<b>Safety information and repair notes</b>	<b>108</b>
1.1	Safety information	108
1.2	Repair instructions	108
<b>2</b>	<b>High-voltage components</b>	<b>109</b>
2.1	Overview of fitting locations – high-voltage components, all-wheel drive	109
2.2	Overview of fitting locations – high-voltage components, rear-wheel drive	111
<b>3</b>	<b>Warning stickers</b>	<b>114</b>
3.1	Checking warning stickers	114
<b>4</b>	<b>High-voltage battery unit</b>	<b>120</b>
4.1	Assembly overview – high-voltage battery, installed, 48, 55, 62 kWh	120
4.2	Assembly overview – high-voltage battery, installed, 82 kWh	121
4.3	Visual inspection of high-voltage battery 1 [AX2]	123
4.4	Diagnosis of high-voltage battery 1 [AX2]	123
4.5	Searching for leaks from high-voltage battery	123
4.6	Leakage test of high-voltage battery 1 [AX2]	124
4.7	Removing and installing high-voltage battery 1 [AX2], 48, 55, 62 kWh	124
4.8	Removing and installing high-voltage battery 1 [AX2], 82 kWh	134
4.9	Raising high-voltage battery 1 [AX2]	144
4.10	Opening high-voltage battery 1 [AX2]	145
4.11	Sealing high-voltage battery 1 [AX2], 48, 55, 62 kWh	147
4.12	Sealing high-voltage battery 1 [AX2], 82 kWh	149
4.13	Voltage and insulation measurement, 48, 55, 62 kWh	151
4.14	Voltage and insulation measurement, 82 kWh	154
4.15	Opening electrical circuit, 48, 55 kWh	156
4.16	Opening electrical circuit, 62 kWh	159
4.17	Opening electrical circuit, 82 kWh	162
4.18	Removing and installing battery regulation control unit [J840]	165
4.19	Charging and discharging battery modules	166
4.20	Renewing lower part of battery housing	167
4.21	Renewing high-voltage battery 1 [AX2]	168
<b>5</b>	<b>High-voltage battery components</b>	<b>170</b>
5.1	Overview of fitting locations – battery modules, 48, 55 kWh	170
5.2	Overview of fitting locations – battery modules, 62 kWh	171
5.3	Overview of fitting locations – battery modules, 82 kWh	173



5.4	Overview of fitting locations - battery connectors	175
5.5	Assembly overview – high-voltage battery, removed, 48, 55, 62 kWh	175
5.6	Assembly overview – high-voltage battery, removed, 82 kWh	177
5.7	Assembly overview – high-voltage battery, battery modules	179
5.8	Assembly overview – switching unit for high-voltage battery, 48, 55, 62 kWh	180
5.9	Assembly overview – switching unit for high-voltage battery, 82 kWh	181
5.10	Assembly overview – high-voltage battery, connecting element, 48, 55, 62 kWh	182
5.11	Assembly overview – high-voltage battery, connecting element, 82 kWh	184
5.12	Removing battery module	185
5.13	Installing battery module	189
5.14	Removing and installing battery modules control unit	192
5.15	Removing and installing connecting element, 48, 55 kWh	194
5.16	Removing and installing connecting element, 62 kWh	196
5.17	Removing and installing connecting element, 82 kWh	198
5.18	Removing and installing switching unit for high-voltage battery, negative terminal [SX7], 48, 55, 65 kWh	200
5.19	Removing and installing switching unit for high-voltage battery, negative terminal [SX7], 82 kWh	202
5.20	Removing and installing switching unit for high-voltage battery, positive terminal [SX8], 48, 55, 62 kWh	204
5.21	Removing and installing switching unit for high-voltage battery, positive terminal [SX8], 82 kWh	206
<b>6</b>	<b>Power and control electronics for electric drive</b>	<b>208</b>
6.1	Assembly overview – power and control electronics for electric drive, rear-wheel drive	208
6.2	Assembly overview – power and control electronics for electric drive, all-wheel drive	208
6.3	Removing and installing power and control electronics for electric drive, rear-wheel drive	208
6.4	Removing and installing power and control electronics for electric drive, all-wheel drive	219
<b>7</b>	<b>Electric drive motor</b>	<b>233</b>
7.1	Calibrating three-phase current drive [VX54-	233
7.2	Leakage test of electric drive motor, rear motor	233
7.3	Assembly overview – electric drive motor	242
7.4	Removing and installing drive motor rotor position sender, rear-wheel drive	247
7.5	Removing and installing drive motor rotor position sender, all-wheel drive	248
<b>8</b>	<b>Motor control unit</b>	<b>254</b>
8.1	Assembly overview – motor control unit	254
8.2	Removing and installing motor control unit [J623]	254
8.3	Removing and installing bracket for motor control unit [J623]	255
<b>9</b>	<b>De-energising high-voltage system</b>	<b>256</b>
9.1	De-energising high-voltage system	256
<b>10</b>	<b>Re-energise high-voltage system</b>	<b>257</b>
10.1	Re-energising high-voltage system	257
<b>11</b>	<b>Potential equalisation lines</b>	<b>258</b>
11.1	Overview of fitting locations – potential equalisation lines, all-wheel drive	258
11.2	Overview of fitting locations – potential equalisation lines, rear-wheel drive	259
<b>12</b>	<b>Charging socket</b>	<b>260</b>
12.1	Assembly overview – charging socket	260
12.2	Removing and installing high-voltage battery charging socket 1 [UX4]	260
12.3	Removing and installing actuator for high-voltage charging socket lock 1 [F498]	263
<b>13</b>	<b>Charging unit for high-voltage battery</b>	<b>265</b>
13.1	Assembly overview – charging unit for high-voltage battery, rear-wheel drive	265
13.2	Assembly overview – charging unit for high-voltage battery, all-wheel drive	266
13.3	Removing and installing charging unit 1 for high-voltage battery [AX4], rear-wheel drive	268
13.4	Removing and installing charging unit 1 for high-voltage battery [AX4], all-wheel drive	271
<b>14</b>	<b>Vehicle noise/engine sound</b>	<b>275</b>
14.1	Overview of fitting locations – driving sound/motor sound	275



14.2	Removing and installing engine sound generator module 1 [RX21]	275
14.3	Removing and installing engine sound generator module 2 [RX22]	276
<b>15</b>	<b>Accelerator pedal</b>	<b>278</b>
15.1	Assembly overview – accelerator pedal module	278
15.2	Removing and installing accelerator pedal module [GX2]	278
<b>16</b>	<b>Voltage converter</b>	<b>280</b>
16.1	Assembly overview – voltage converter, rear-wheel drive	280
16.2	Assembly overview – voltage converter, all-wheel drive	280
16.3	Removing and installing voltage converter, rear-wheel drive	281
16.4	Removing and installing voltage converter, all-wheel drive	283
<b>17</b>	<b>High-voltage cables</b>	<b>285</b>
17.1	Unplugging high-voltage connectors	285