



Contents

| | |
|---|-----------|
| 00 - Technical data | 1 |
| 1 Electrical components | 1 |
| 1.1 Access to diagnoses | 1 |
| 98 - Assist systems | 3 |
| 1 Safety information and repair notes | 3 |
| 1.1 Safety information | 3 |
| 1.2 Repair instructions | 3 |
| 2 Fitting locations | 4 |
| 2.1 Overview of fitting locations – senders, sensors and control units in front section of vehicle | 4 |
| 2.2 Overview of fitting locations – senders, sensors and control units in centre section of vehicle | 5 |
| 2.3 Overview of fitting locations – senders, sensors and control units in rear section of vehicle | 5 |
| 3 Senders/sensors/control units | 8 |
| 3.1 Removing and installing front parking aid senders G252/G253/G254/G255 | 8 |
| 3.2 Removing and installing rear parking aid senders [G203]/[G204]/[G205]/[G206] | 9 |
| 3.3 Removing and installing front park assist steering senders [G568]/[G569] | 11 |
| 3.4 Removing and installing rear park assist steering senders [G716]/[G717] | 12 |
| 3.5 Removing and installing adaptive cruise control unit J428 | 14 |
| 3.6 Removing and installing lane change assist control unit J769/J770 | 14 |
| 3.7 Removing and installing lane change assist warning lamp in exterior mirror K311/K312 | 15 |
| 3.8 Removing and installing left/right overhead view camera R244/R245 | 16 |
| 3.9 Removing and installing control unit for overhead view camera J928 | 17 |
| 3.10 Removing and installing front camera for driver assist systems [R242] | 17 |
| 3.11 Removing and installing parking aid control unit J446 | 19 |
| 3.12 Removing and installing front overhead view camera [R243] | 19 |
| 3.13 Removing and installing reversing camera [R189] | 20 |
| 3.14 Removing and installing rear overhead view camera [R246] | 21 |
| 4 Adaptive cruise control | 22 |
| 4.1 Necessity of calibration | 22 |
| 4.2 Adjusting/calibrating adaptive cruise control unit | 23 |
| 5 Reversing camera system | 27 |
| 5.1 Calibrating reversing camera R189 | 27 |
| 6 Front camera for driver assist systems | 33 |
| 6.1 Calibrating front camera for driver assist systems [R242] | 33 |
| 7 Overhead view camera | 41 |
| 7.1 Calibrating overhead view camera system | 41 |