



Contents

00 - Technical data	1
1 Safety and repair instructions	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Electrical components	2
2.1 Access to diagnoses	2
27 - Starter, current supply, CCS	3
1 Safety information and repair notes	3
1.1 Safety information	3
1.2 Repair instructions	3
2 Battery	4
2.1 Assembly overview – battery	4
2.2 Removing and installing battery A	4
2.3 Disconnecting and connecting battery	9
2.4 Removing and installing battery tray	12
2.5 Checking battery A	12
2.6 Charging battery A	15
2.7 Removing and installing earth wire with battery monitor control unit [J367]	16
2.8 Commissioning battery monitor control unit [J367]	17
90 - Gauges, instruments	18
1 Safety information and repair notes	18
1.1 Safety information	18
1.2 Repair instructions	18
2 Dash panel insert	19
2.1 Assembly overview ? control unit with display unit for driver information system	19
2.2 Assembly overview - head-up display	19
2.3 Removing and installing control unit with display unit for driver information system [J1254]	20
2.4 Removing and installing control unit for head-up display [J898]	21
2.5 Calibrating control unit for head-up display [J898]	24
3 Horn	28
3.1 Assembly overview - horn	28
3.2 Removing and installing horn or dual tone horn [H1]	28
92 - Windscreen wash/wipe system	30
1 Safety information and repair notes	30
1.1 Safety information	30
1.2 Repair instructions	30
2 Windscreen wiper system	31
2.1 Assembly overview - windscreen wiper system	31
2.2 Moving wipers to service position	32
2.3 Removing and installing wiper blade	32
2.4 Removing and installing wiper arms	33
2.5 Adjusting wiper arms	35
2.6 Removing and installing wiper motor [V]	37
2.7 Deactivating APP function	38
2.8 Removing and installing rain and light sensor [G397]	38
3 Windscreen washer system	43
3.1 Assembly overview ? windscreen washer system	43
3.2 Removing and installing washer fluid reservoir	44
3.3 Removing and installing washer pump [V59]	45



3.4	Removing and installing spray jets	46
3.5	Adjusting spray jets	47
4	Rear window wiper system	48
4.1	Assembly overview ? rear window wiper system	48
4.2	Removing and installing wiper blade	48
4.3	Removing and installing wiper arm	49
4.4	Adjusting wiper arm	50
4.5	Removing and installing rear window wiper motor [V12]	51
5	Rear window washer system	53
5.1	Assembly overview – rear window washer system	53
5.2	Removing and installing spray jet	53
6	Washer fluid lines	56
6.1	Repairing washer fluid lines	56
94	Lights, bulbs, switches - exterior	58
1	Safety information and repair notes	58
1.1	Safety information	58
1.2	Repair instructions	58
2	Headlights	59
2.1	Assembly overview – headlight, ECO	59
2.2	Assembly overview – headlight, Performance	61
2.3	Assembly overview ? repair kit for headlight housing	63
2.4	Assembly overview ? LED module for daytime running light	64
2.5	Removing and installing headlight	65
2.6	Adjusting headlights	66
2.7	Removing and installing front turn signal bulb [M5]/[M7], ECO headlights	66
2.8	Removing and installing front turn signal bulb [M5]/[M7], Performance headlights	67
2.9	Installing repair kit for headlight housing	68
2.10	Removing and installing headlight range control motor [V48]/[V49], ECO headlights	69
2.11	Removing and installing headlight range control motor [V48]/[V49], Performance headlights	71
2.12	Removing and installing LED module for daytime running light and side light [L176]/[L177]	73
2.13	Removing and installing bulb for VARILIS headlight [L207]/[L208]	75
2.14	Removing and installing headlight fan [V407]/[V408]	77
2.15	Removing and installing output module 1 for LED headlight [A27]/[A31], ECO headlights	79
2.16	Removing and installing output module 1 for LED headlight [A27]/[A31], Performance headlights	80
2.17	Removing and installing light conductor for contour lighting in radiator grille [L362]/[L363]	82
2.18	Removing and installing LED module for daytime running lights [L377]/[L378]	83
3	Lights in exterior mirror	84
3.1	Assembly overview - lights in exterior mirror	84
3.2	Removing and installing turn signal repeater bulb [L131]/[L132]	86
3.3	Removing and installing entry light in exterior mirror [W52]/[W53]	87
4	Tail lights	89
4.1	Assembly overview ? tail lights in body	89
4.2	Assembly overview ? tail lights in rear lid	89
4.3	Removing and installing centre rear tail light cluster [MX13]	90
4.4	Removing and installing tail light cluster [MX3]/[MX4]	91
4.5	Removing and installing rear fog light [X3]	92
5	High-level brake light	94
5.1	Assembly overview ? high-level brake light	94
5.2	Removing and installing high-level brake light bulb [M25]	94
6	Number plate light	96
6.1	Removing and installing number plate light [X4]/[X5]	96
7	Entry and start authorisation system	97



7.1	Overview of fitting locations – entry and start authorisation system	97
7.2	Overview of fitting locations – keyless entry system	100
7.3	Assembly overview ? control unit for break-in protection	102
7.4	Removing and installing interface for entry and start system [J965]	103
7.5	Removing and installing entry and start authorisation aerial [R200]/[R201]	105
7.6	Removing and installing interior aerial 1 for entry and start system [R138]	106
7.7	Removing and installing luggage compartment aerial for entry and start system [R137]	107
7.8	Removing and installing control unit 2 for break-in protection [J1192]/control unit 3 for break-in protection [J1193]	107
7.9	Removing and installing control unit 4 for break-in protection [J1194]/control unit 5 for break-in protection [J1195]	108
7.10	Removing and installing control unit for mobile-controlled entry and start authorisation system [J1308]	109
7.11	Removing and installing aerial 1 for mobile-controlled entry and start authorisation system [R415]	110
7.12	Removing and installing aerial 2 for mobile-controlled entry and start authorisation system [R416]	111
8	Steering column switch module	112
8.1	Assembly overview - steering column switch module	112
8.2	Removing and installing steering column electronics control unit [J527]	113
9	Automatic headlight range control	115
9.1	Assembly overview - automatic headlight range control	115
10	Towing bracket	116
10.1	Assembly overview – socket, trailer detector control unit	116
10.2	Removing and installing trailer socket [U10]	116
96	Lights, bulbs, switches - interior	118
1	Safety information and repair notes	118
1.1	Safety information	118
1.2	Repair instructions	118
2	Lights	119
2.1	Overview of fitting locations - lights in dash panel	119
2.2	Overview of fitting locations - lights in front doors	119
2.3	Overview of fitting locations ? footwell lights	120
2.4	Overview of fitting locations ? lights in centre console	121
2.5	Overview of fitting locations ? lights in luggage compartment	122
2.6	Overview of fitting locations ? lights in roof trim	123
2.7	Removing and installing footwell light [W9]/[W10]	125
2.8	Removing and installing central locking SAFELOCK function warning lamp [K133]	126
2.9	Removing and installing rear footwell light [W45]/[W46]	127
2.10	Removing and installing luggage compartment light [W18/35]	128
2.11	Removing and installing illuminated vanity mirror [W20]/[W14]	128
2.12	Removing and installing dynamic light strip 1 for information in dash panel [L385]	129
2.13	Removing and installing light 1 for front centre console background lighting [L193]	130
3	Controls	131
3.1	Overview of fitting locations - controls in dash panel	131
3.2	Overview of fitting locations ? controls in front doors	132
3.3	Overview of fitting locations ? controls in rear doors	132
3.4	Overview of fitting locations – controls in luggage compartment	133
3.5	Overview of fitting locations ? controls in roof trim	134
3.6	Removing and installing operating unit for lighting [EX59]	136
3.7	Removing and installing centre switch module in dash panel [EX22]	137
3.8	Removing and installing operating unit for window regulator in driver door [EX36]	137
3.9	Removing and installing front passenger side window regulator button [E716]	138
3.10	Removing and installing rear lid remote release button [E233]	139
3.11	Removing and installing rear window regulator button [E711]/[E713]	140



3.12	Removing and installing starter button [E378]	140
3.13	Removing and installing electric hinged tow coupling attachment button [E474]	141
3.14	Removing and installing rear lid closure button [E574]	142
3.15	Removing and installing rear lid warning buzzer [H32]	142
3.16	Removing and installing front interior light [WX1]	143
3.17	Removing and installing rear interior light/reading light	144
4	Anti-theft alarm system	146
4.1	Assembly overview – interior monitor	146
4.2	Removing and installing alarm horn [H12]	147
4.3	Removing and installing anti-theft alarm sensor [G578]	148
5	Cigarette lighter, socket	150
5.1	Removing and installing 12 V socket [U5/U19]	150
97 - Wiring		151
1	Safety information and repair notes	151
1.1	Safety information	151
1.2	Repair instructions	151
2	Relay carriers, fuse holders, electronics boxes	152
2.1	Overview of fitting locations - relay carriers, fuse holders, electronics boxes	152
2.2	Assembly overview ? relay carriers, fuse holders, electronics boxes	153
2.3	Removing and installing electronics box	155
2.4	Removing and installing fuse holder A [SA]	156
2.5	Removing and installing fuse holder B [SB]	158
2.6	Removing and installing fuse holder C [SC]	160
3	Control units	164
3.1	Overview of fitting locations - control units	164
3.2	Assembly overview – onboard supply control unit	165
3.3	Removing and installing onboard supply control unit [J519]	167
3.4	Removing and installing bracket for onboard supply control unit [J519]	169
3.5	Removing and installing data bus diagnostic interface [J533]	172
3.6	Removing and installing fan for control unit [V274]	172
4	Connector housings	174
4.1	Dismantling connector housings	174
5	Cleaning contact surfaces	175
5.1	Cleaning battery clamp and battery terminal	175
5.2	Anti-corrosion treatment of contact surfaces	176
5.3	Cleaning cable lugs	177
5.4	Cleaning threaded connections	178
6	Wires	179
6.1	Repairing aerial wires	179
6.2	Repairing wires with a cross section of 0.13mm ² to 6mm ²	183
6.3	Repairing 2.5 mm, 4 mm or 6 mm aluminium wires with a single crimp connector	187
6.4	Repairing a 10 mm ² or 16 mm ² wire	190
6.5	Repairing Ethernet lines	194
6.6	Section repairs to electrical wiring	194
7	Fibre optic cables	196
7.1	Repairing fibre optic cables	196
7.2	Removing and installing fibre optic cable of wiring harness connector	200