



Contents

00 - Technical data	1
1 Electrical components	1
1.1 Access to diagnoses	1
2 Safety information and repair notes	2
2.1 Safety information	2
2.2 Repair instructions	2
91 - Communication	3
1 Safety information and repair notes	3
1.1 Safety information	3
1.2 Repair instructions	3
2 Fitting locations	4
2.1 Overview of fitting locations – components/control units, ID.4	4
2.2 Overview of fitting locations – components/control units, ID.5	8
3 Components/control units	12
3.1 Removing and installing control unit for front display and information control panel [J685]	12
3.2 Control unit 1 for information electronics [J794]	12
3.3 Removing and installing front treble loudspeakers [R20]/[R22]	15
3.4 Removing and installing bass loudspeaker	15
3.5 Removing and installing centre loudspeaker [R208]	16
3.6 Removing and installing subwoofer [R211]	16
3.7 Removing and installing digital sound package control unit [J525]	17
3.8 Removing and installing aerial module	17
3.9 Removing and installing frequency modulation (FM) frequency filters [R178/R179]	18
3.10 Removing and installing roof aerial [RX5]	19
3.11 Removing and installing LTE aerial	20
3.12 Removing and installing internet access control unit [J666]	20
3.13 Removing and installing data transmission aerial [R180]	21
3.14 Removing and installing transmission and reception stabilisation control unit [R308]	22
3.15 Removing and installing telephone bracket [R126]	22
3.16 Removing and installing multifunction buttons [E440]/[E441]	23
3.17 Removing and installing control unit for steering wheel contact detection [J1158]	26
3.18 Removing and installing USB connection 1 [U41]	26
3.19 Removing and installing USB charging socket 1 [U37]	27
3.20 Removing and installing emergency call module control unit and communication unit [J949], rear bench seat	28
3.21 Removing and installing loudspeaker for emergency call module [R335]	29
3.22 Removing and installing emergency battery, telematics [A16]	30
4 Multifunction steering wheel	32
4.1 Assembly overview – multifunction steering wheel	32