



Contents

00 - Technical data	1
1 Electrical components	1
1.1 Access to diagnoses	1
68 - Interior equipment	2
1 Safety information and repair notes	2
1.1 Safety information	2
1.2 Repair instructions	2
2 Compartments/covers	3
2.1 Overview of fitting locations – compartments/covers	3
2.2 Assembly overview ? dash panel cover on driver side	5
2.3 Assembly overview - front passenger side dash panel cover	6
2.4 Assembly overview - steering column trim	7
2.5 Assembly overview – glove compartment	8
2.6 Removing and installing dash panel cover on driver side	9
2.7 Removing and installing gap cover for dash panel insert	11
2.8 Removing and installing dash panel trim on front passenger side	11
2.9 Removing and installing upper steering column trim	12
2.10 Removing and installing lower steering column trim	13
2.11 Removing and installing glove compartment opener	13
2.12 Removing and installing glove compartment	14
2.13 Removing and installing glove compartment cover	14
2.14 Removing and installing restrictor in glove compartment	15
2.15 Glove compartment, service position	15
2.16 Removing and installing information electronics cover	16
2.17 Removing and installing footwell cover on driver side	16
3 Equipment	18
3.1 Assembly overview ? net partition	18
3.2 Assembly overview ? sun visors	18
3.3 Removing and installing net partition bracket	19
3.4 Removing and installing sun visor	21
3.5 Removing and installing sun visor centre mount	22
3.6 Removing and installing roof grab handle	23
4 Centre console	25
4.1 Assembly overview ? centre console	25
4.2 Removing and installing rear centre console trim	26
4.3 Removing and installing centre console cover	26
4.4 Removing and installing centre console insert	27
4.5 Removing and installing centre console	27
4.6 Removing and installing cup holder	28
4.7 Removing and installing rear centre console storage compartment	28
4.8 Removing and installing centre console bracket	29
4.9 Removing and installing front centre console trim	29
4.10 Removing and installing centre console side trim	30
4.11 Removing and installing rear centre console vent	30
5 Front centre armrest	32
5.1 Assembly overview ? front centre armrest	32
5.2 Removing and installing front centre armrest	32
6 Interior mirror	34
6.1 Assembly overview – interior mirror	34
6.2 Removing and installing interior mirror	34
6.3 Bonding retaining plate for interior mirror	36



69 - Passenger protection	38
1 Safety information and repair notes	38
1.1 Safety information	38
1.2 Repair instructions	38
2 Seat belts	39
2.1 Overview of fitting locations – seat belts and anchorage points	39
2.2 Assembly overview ? front three-point seat belt	41
2.3 Assembly overview ? rear outer three-point seat belt	43
2.4 Assembly overview – rear centre three-point seat belt	43
2.5 Assembly overview ? front belt buckle	44
2.6 Assembly overview ? rear belt buckle	45
2.7 Removing and installing front three-point seat belt [NX10]/[NX11]	46
2.8 Removing and installing rear three-point seat belt	49
2.9 Removing and installing rear belt guide	51
2.10 Removing and installing front belt guide	51
2.11 Removing and installing front belt end fitting	52
2.12 Removing and installing rear outer belt end fitting	54
2.13 Removing and installing belt height adjuster	54
2.14 Removing and installing front belt buckle	55
2.15 Removing and installing rear belt buckle	56
3 Child seat anchors	58
3.1 Assembly overview ? front child seat anchors	58
3.2 Assembly overview – rear child seat anchors	58
3.3 Removing and installing front child seat anchors	59
4 Airbag system	61
4.1 Overview of fitting locations – airbag system	61
5 Airbag control unit	64
5.1 Assembly overview ? airbag control unit	64
5.2 Removing and installing airbag control unit [J234]	64
6 Front airbag, driver side	68
6.1 Assembly overview ? front airbag, driver side	68
6.2 Removing and installing airbag unit with airbag igniter on driver side [N95]	68
6.3 Renewing connector on airbag	70
7 Front passenger airbag	73
7.1 Assembly overview ? front passenger airbag	73
7.2 Removing and installing front passenger airbag unit with igniter	74
7.3 Removing and installing key-operated switch to deactivate airbag on front passenger side [E224]	76
8 Side airbags	78
8.1 Assembly overview ? front side airbag, outer side	78
8.2 Assembly overview – front side airbag, inner side	78
8.3 Removing and installing front side airbag, outer side	79
8.4 Removing and installing front side airbag, inner side	81
9 Curtain airbags	84
9.1 Assembly overview – curtain airbag	84
9.2 Removing and installing curtain airbag with igniter	85
10 Airbag crash sensors	89
10.1 Assembly overview ? airbag crash sensors	89
10.2 Removing and installing crash sensor for front airbag [G190]/[G284]	91
10.3 Removing and installing front side airbag crash sensor [G179/G180]	93
10.4 Removing and installing rear side airbag crash sensor [G256/G257]	94
10.5 Removing and installing crash sensor for side airbag in B-pillar [G1101/G1102]	95
11 Seat belt verification	98



11.1	Assembly overview – seat occupied sensor	98
11.2	Removing and installing front seat occupied sensor [G1067]/[G128]	99
11.3	Removing and installing rear seat occupied sensor [G177/G178/G1010]	100
12	Seat occupied recognition	102
12.1	Overview of fitting locations – seat occupied recognition	102
12.2	Removing and installing seat occupied recognition control unit [J706]	102
70	Trim, insulation	104
1	Safety information and repair notes	104
1.1	Safety information	104
1.2	Repair instructions	104
2	Front door trims	105
2.1	Assembly overview – front door trim	105
2.2	Removing and installing front door trim	105
2.3	Removing and installing button trim	108
3	Rear door trims	110
3.1	Assembly overview ? rear door trim	110
3.2	Removing and installing button trim	110
3.3	Removing and installing rear door trim	111
4	Dash panel	114
4.1	Assembly overview - dash panel	114
4.2	Removing and installing dash panel end cover	116
4.3	Removing and installing dash panel trim	116
4.4	Removing and installing loudspeaker trim	118
4.5	Removing and installing dash panel	118
4.6	Removing and installing side defroster vent	120
4.7	Removing and installing centre vent	121
4.8	Removing and installing cover for dash panel/head-up display	121
4.9	Removing and installing tunnel support cover	122
5	Central tube for dash panel	123
5.1	Assembly overview ? central tube for dash panel	123
5.2	Assembly overview ? impact damper and glove compartment bracket	123
5.3	Removing and installing dash panel cross member	124
5.4	Removing and installing crash bar	127
5.5	Removing and installing impact absorber	128
6	Interior trims	131
6.1	Overview of fitting locations ? interior trims	131
6.2	Assembly overview ? sill panel moulding	132
6.3	Assembly overview ? A-pillar trim	132
6.4	Assembly overview ? B-pillar trim	133
6.5	Assembly overview ? C-pillar trim	134
6.6	Assembly overview ? foot rest and floor covering	135
6.7	Removing and installing front sill panel moulding	136
6.8	Removing and installing rear sill panel moulding	137
6.9	Removing and installing upper A-pillar trim	138
6.10	Removing and installing lower A-pillar trim	139
6.11	Removing and installing A-pillar gap cover	140
6.12	Removing and installing upper B-pillar trim	141
6.13	Removing and installing lower B-pillar trim	142
6.14	Removing and installing C-pillar trim	143
6.15	Removing and installing floor covering	144
7	Luggage compartment trims	145
7.1	Overview of fitting locations – luggage compartment trims	145
7.2	Assembly overview ? luggage compartment side trim	146
7.3	Assembly overview – luggage compartment floor	146



7.4	Assembly overview ? lower rear lid trim	147
7.5	Assembly overview ? upper rear lid trim	148
7.6	Removing and installing lower rear lid trim	149
7.7	Removing and installing upper rear lid trim	151
7.8	Removing and installing luggage compartment side trim	151
7.9	Removing and installing lock carrier trim	152
7.10	Removing and installing support for luggage compartment floor	153
7.11	Removing and installing side rear lid trim	154
8	Roof trims	155
8.1	Assembly overview ? moulded headliner	155
8.2	Removing and installing moulded headliner	155
8.3	Installing roof reinforcement to body	158
72	- Seat frames	161
1	Safety information and repair notes	161
1.1	Safety information	161
1.2	Repair instructions	161
2	Overview of seat variants	162
2.1	Overview of fitting locations – seat variants	162
3	Front seats	163
3.1	Overview of fitting locations ? electrical and electronic components	163
3.2	Assembly overview ? front seat	167
3.3	Assembly overview ? front backrest	170
3.4	Assembly overview ? head restraint	171
3.5	Assembly overview ? seat pan	172
3.6	Assembly overview ? seat height adjustment	179
3.7	Assembly overview ? lumbar support	181
3.8	Assembly overview ? seat rake adjustment	182
3.9	Assembly overview ? seat depth adjustment	183
3.10	Removing and installing front seat	184
3.11	Removing and installing seat height adjustment handle	187
3.12	Removing and installing seat height adjuster	187
3.13	Removing and installing seat rake adjustment motor [V243]/[V244]	189
3.14	Removing and installing front backrest	190
3.15	Removing and installing head restraint	191
3.16	Removing and installing head restraint guide	192
3.17	Removing and installing lumbar support adjustment switch [E176]/[E177]	194
3.18	Removing and installing backrest adjuster	194
3.19	Securing front seat to seat repair stand	195
3.20	Removing and installing lumbar support	196
3.21	Removing and installing seat adjustment operating unit [EX33]/[EX34]	197
3.22	Removing and installing bracket for seat trim	198
3.23	Removing and installing inner seat trim	198
3.24	Removing and installing outer seat trim	199
3.25	Removing and installing seat longitudinal adjustment motor [V28]/[V31]	201
3.26	Removing and installing seat depth adjuster	202
3.27	Removing and installing seat adjustment control unit	204
3.28	Removing and installing operating unit for memory settings [E464]/[E465]	205
3.29	Removing and installing wiring harness for seat frame	206
4	Rear seats	208
4.1	Assembly overview – bench seat/individual seats	208
4.2	Assembly overview ? rear seat backrest	209
4.3	Assembly overview ? locking mechanism	211
4.4	Assembly overview – centre armrest	211
4.5	Removing and installing bench seat/individual seats	212



4.6	Removing and installing seat pan	214
4.7	Removing and installing head restraint	215
4.8	Removing and installing head restraint guide	216
4.9	Removing and installing rear seat backrest	216
4.10	Removing and installing back panel trim	218
4.11	Removing and installing locking mechanism trim	219
4.12	Removing and installing locking mechanism for rear seat backrest	220
4.13	Removing and installing trim frame for load-through hatch	221
4.14	Removing and installing flap for load-through hatch	222
4.15	Removing and installing centre armrest	223
74	Seat - padding, covers	225
1	Safety information and repair notes	225
1.1	Safety information	225
1.2	Repair instructions	225
2	Front seat covers and padding	226
2.1	Assembly overview ? seat pan cover and padding	226
2.2	Assembly overview ? backrest cover and padding	226
2.3	Assembly overview ? seat heating element	227
2.4	Assembly overview ? backrest heating element	228
2.5	Removing and installing seat pan cover and padding	229
2.6	Removing and installing backrest cover and padding	230
2.7	Separating seat pan cover from seat pan padding	231
2.8	Separating backrest cover from backrest padding	233
2.9	Removing and installing seat heating element [ZX11]/[ZX13]	234
2.10	Removing and installing backrest heating element [Z116]/[Z117]	235
3	Rear seat covers and padding	237
3.1	Assembly overview – rear bench seat cover and padding	237
3.2	Assembly overview ? rear seat backrest cover and padding	237
3.3	Removing and installing cover and padding of rear bench seat	238
3.4	Removing and installing cover and padding of rear seat backrest	239
3.5	Removing and installing intermediate padding, backrest with load-through hatch	242
3.6	Separating rear bench seat cover from padding	242
3.7	Separating rear seat backrest cover from padding	243