



Contents

00	Technical data	1
1	ID.4 Workshop Manual – Body repairs	1
2	Basic instructions	2
2.1	Original joint	2
2.2	Used joining techniques	2
3	Vehicle identification data	3
3.1	Vehicle identification number	3
3.2	Type plate	4
3.3	Safety certificate	5
4	Safety information	7
5	The following body work requires the HV electrical system to be de-energised.	8
6	When the high-voltage battery is removed, observe the following:	9
7	Moulded foam inserts	10
8	Galvanized body parts, high- and higher-strength and hot-formed body panels	12
9	Laser welding	15
10	Gaps/shut lines	16
10.1	Body, front	16
10.2	Body, centre	17
10.3	Body - rear	19
11	Body dimensions	21
11.1	Preliminary work for determining body dimensions	21
11.2	Body, front	21
11.3	Body, centre	22
11.4	Body - rear	27
11.5	Floor panel, front	28
11.6	Floor panel, centre	29
11.7	Floor panel, rear	30
12	Straightening bracket set	32
12.1	Overview of setup, entire body	32
13	Portal gauge	34
13.1	Overview of setup, entire body	34
50	Body - front	36
1	ID.4 Workshop Manual – Body repairs	36
2	Overview of parts	37
3	Renewing front longitudinal member cross panel	38
3.1	Tools	39
3.2	Removing	39
3.3	Installing	41
4	Renewing battery tray reinforcement	44
4.1	Tools	45
4.2	Removing	45
4.3	Installing	46
5	Renewing upper wheel housing longitudinal member - part section	49
5.1	Tools	50
5.2	Removing	50
5.3	Installing	52
6	Renewing upper inner wheel housing longitudinal member	56
6.1	Tools	57
6.2	Removing	57



6.3	Installing	59
7	Renewing front wheel housing	63
7.1	Tools	64
7.2	Removing	64
7.3	Installing	67
8	Renewing front wheel housing (part section)	75
8.1	Tools	76
8.2	Removing	76
8.3	Installing	79
9	Renewing front left longitudinal member, part section	87
9.1	Tools	88
9.2	Removing	88
9.3	Installing	91
10	Renewing front right longitudinal member, part section	96
10.1	Tools	97
10.2	Removing	97
10.3	Installing	100
11	Renewing front left longitudinal member (part section – second parting cut)	105
11.1	Tools	106
11.2	Removing	106
11.3	Installing	109
12	Renewing front right longitudinal member (part section – second parting cut)	118
12.1	Tools	119
12.2	Removing	119
12.3	Installing	122
13	Renewing studs	131
51 - Body - centre		133
1	ID.4 Workshop Manual – Body repairs	133
2	Overview of parts	134
3	Renewing roof – vehicles without glass panel	135
3.1	Tools	136
3.2	Removing	136
3.3	Installing	140
4	Renewing roof – vehicles with glass panel	150
4.1	Tools	151
4.2	Removing	151
4.3	Installing	155
5	Renewing roof side member	165
5.1	Tools	166
5.2	Removing	167
5.3	Installing	169
6	Renewing A-pillar	175
6.1	Tools	177
6.2	Removing	177
6.3	Installing	179
7	Renewing A-pillar reinforcement (part section)	185
7.1	Tools	186
7.2	Removing	186
7.3	Installing	190
8	Renewing B-pillar	196
8.1	Tools	198
8.2	Type plate	198



8.3	Safety certificate	199
8.4	Removing	200
8.5	Installing	201
9	Renewing B-pillar reinforcement	207
9.1	Tools	208
9.2	Type plate	208
9.3	Safety certificate	209
9.4	Removing	210
9.5	Installing	212
10	Renewing outer side member	216
10.1	Tools	217
10.2	Type plate	217
10.3	Safety certificate	218
10.4	Removing	219
10.5	Installing	221
11	Renewing side member reinforcement	227
11.1	Tools	228
11.2	Removing	228
11.3	Installing	230
12	Renewing side panel reinforcement, crash bar	234
12.1	Tools	235
12.2	Removing	235
12.3	Installing	237
53 - Body - rear		241
1	ID.4 Workshop Manual – Body repairs	241
2	Overview of parts	242
3	Renewing rear cross panel	243
3.1	Tools	244
3.2	Removing	244
3.3	Installing	246
4	Renewing rear cross member	250
4.1	Tools	251
4.2	Removing	251
4.3	Installing	252
5	Renewing sealing channel support	257
5.1	Tools	258
5.2	Removing	258
5.3	Installing	259
6	Renewing rear floor cross member	262
6.1	Tools	263
6.2	Removing	263
6.3	Installing	265
7	Renewing centre floor panel (part section)	269
7.1	Tools	270
7.2	Removing	270
7.3	Installing	272
8	Renewing rear floor panel	276
8.1	Tools	277
8.2	Removing	277
8.3	Installing	279
9	Renewing longitudinal member cover plate	283
9.1	Tools	284
9.2	Removing	284



9.3	Installing	286
10	Renewing rear longitudinal member (part section)	290
10.1	Tools	291
10.2	Removing	291
10.3	Installing	294
11	Renewing rear longitudinal member (second part section)	299
11.1	Tools	300
11.2	Removing	300
11.3	Installing	304
12	Permitted parting cuts on side panel	312
13	Renewing side panel, part section	313
13.1	Tools	315
13.2	Removing	315
13.3	Installing	317
14	Renewing floor panel reinforcement	323
14.1	Tools	324
14.2	Removing	324
14.3	Installing	325
15	Renewing outer wheel housing liner	328
15.1	Tools	329
15.2	Removing	329
15.3	Installing	332