

## Contents

<b>54 - Vehicle-specific paintwork information</b>	<b>1</b>
<b>1 Safety information and repair notes</b>	<b>1</b>
1.1 Safety information	1
1.2 Repair instructions	1
<b>2 Explanation of symbols</b>	<b>2</b>
2.1 Sanding	2
2.2 Seam sealing	2
2.3 Cavity sealing	4
<b>3 Paintwork structure</b>	<b>5</b>
3.1 Structure of factory finish, surfacer	5
3.2 Structure of factory finish, base coat	5
3.3 Structure of factory finish, clear coat	6
<b>4 Areas exposed to stone chipping</b>	<b>8</b>
4.1 Areas exposed to stone chipping – overview	8
<b>5 Masked sectors</b>	<b>10</b>
5.1 Masking areas, front body	10
5.2 Masking areas, rear body	10
<b>6 Seam sealing</b>	<b>12</b>
6.1 Seam seals, front body	12
6.2 Seam sealing: Front wheel housing	13
6.3 Seam seals, A-pillar	13
6.4 Seam seals, bonnet, inner side	14
6.5 Seam seals, roof	15
6.6 Seam seals, doors	16
6.7 Seam seals, rear wheel housing	17
6.8 Seam seals, underbody	18
6.9 Seam seals, rear cross panel	19
<b>7 Underseal</b>	<b>20</b>
7.1 Underseal, body – overview	20
7.2 Underseal, front body	20
7.3 Underseal, centre body	21
7.4 Underseal, rear body	22
<b>8 Cavity sealing</b>	<b>24</b>
8.1 Cavity sealing, body – overview	24
8.2 Cavity sealing, front body	24
8.3 Cavity sealing, rear body	25
8.4 Cavity sealing, doors	25
<b>9 Paintwork repair</b>	<b>26</b>
9.1 Paintwork repair, radar sensor cover	26