

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety and repair instructions</b>	<b>1</b>
1.1 Safety information	1
1.2 Repair instructions	1
<b>2 General information</b>	<b>2</b>
2.1 Type plates, R1234yf	2
2.2 Type plates, R744	2
<b>3 Technical data</b>	<b>3</b>
3.1 Refrigerant capacities, R1234yf	3
3.2 Refrigerant capacities, R744	3
3.3 Refrigerant oil capacities, R1234yf	3
3.4 Refrigerant oil capacities, R744	3
3.5 Oil distribution	3
<b>4 Electrical components</b>	<b>5</b>
4.1 Access to diagnoses	5
<b>87 - Air conditioning system</b>	<b>7</b>
<b>1 Safety information and repair notes</b>	<b>7</b>
1.1 Safety information	7
1.2 Repair instructions	7
<b>2 Overview of fitting locations ? air conditioning system</b>	<b>8</b>
2.1 Overview of fitting locations – components not located in passenger compartment, with heat pump	8
2.2 Overview of fitting locations – components not located in passenger compartment, without heat pump	11
2.3 Overview of fitting locations - components located in front section of passenger compartment	13
<b>3 Refrigerant circuit</b>	<b>16</b>
3.1 System overview - refrigerant circuit, R1234yf	16
3.2 System overview - refrigerant circuit, R744	18
3.3 Assembly overview ? refrigerant lines, R1234yf	20
3.4 Assembly overview ? refrigerant lines, R744	22
3.5 Assembly overview – heat exchanger for high-voltage battery, R1234yf	24
3.6 Assembly overview ? condenser, R1234yf	25
3.7 Removing and installing refrigerant pressure and temperature sender [G395], R1234yf	26
3.8 Removing and installing refrigerant pressure and temperature sender [G395], R744	28
3.9 Removing and installing pressure sender for refrigerant circuit [G805], R1234yf	29
3.10 Removing and installing expansion valve	30
3.11 Removing/installing refrigerant line from/to expansion valve, R1234yf	31
3.12 Removing and installing condenser/gas cooler, R1234yf	32
3.13 Removing and installing condenser/gas cooler, R744	33
3.14 Removing and installing desiccant bag/dryer, R1234yf	34
3.15 Removing and installing desiccant bag/dryer, R744	35
3.16 Removing and installing evacuating and charging valves on low and high-pressure side, R1234yf	37
3.17 Removing and installing evacuating and charging valves on low and high-pressure side, R744	38
3.18 Removing and installing refrigerant pressure and temperature sender 2 [G826]	40
3.19 Removing and installing refrigerant pressure and temperature sender 3 [G827]	42
3.20 Removing and installing refrigerant pressure and temperature sender 4 [G828]	43
3.21 Removing and installing refrigerant pressure and temperature sender 5 [G829]	45
3.22 Removing and installing pressure relief valve, R744	46
3.23 Removing and installing heat exchanger for high-voltage battery, R1234yf	48



3.24	Removing and installing heat exchanger for high-voltage battery, R744	50
3.25	Removing and installing heat condenser, R744	51
3.26	Removing and installing refrigerant shut-off valve for heater and air conditioner unit [N541]	52
3.27	Removing and installing refrigerant line, R1234yf	56
3.28	Removing and installing refrigerant line, R744	64
3.29	Disconnecting/connecting refrigerant lines from/to condenser/gas cooler, R1234yf	75
3.30	Disconnecting/connecting refrigerant lines from/to condenser/gas cooler, R744	77
3.31	Cleaning refrigerant circuit, refrigerant R744	78
3.32	Cleaning refrigerant circuit, refrigerant R1234yf	81
<b>4</b>	<b>Valve unit of heat pump</b>	<b>84</b>
4.1	Exploded view - heat pump valve unit	84
4.2	Removing and installing valve unit of heat pump	87
4.3	Removing and installing refrigerant expansion valve 1 [N636]	91
4.4	Removing and installing refrigerant expansion valve 2 N637	92
4.5	Removing and installing refrigerant expansion valve 3 N638	94
4.6	Removing and installing refrigerant shut-off valve 1 N696	94
4.7	Removing and installing refrigerant shut-off valve 2 N640	94
4.8	Removing and installing refrigerant shut-off valve 3 N641	95
4.9	Removing and installing refrigerant shut-off valve 4 N642	95
4.10	Removing and installing refrigerant shut-off valve 5 N643	97
<b>5</b>	<b>Air conditioner compressor</b>	<b>98</b>
5.1	Exploded view - air conditioner compressor	98
5.2	Removing refrigerant lines from and installing to air conditioner compressor, R1234yf	99
5.3	Detaching/attaching refrigerant lines from/to air conditioner compressor, R744	100
5.4	Removing and installing air conditioner compressor [VX81], R1234yf	102
5.5	Removing and installing air conditioner compressor [VX81], R744	105
5.6	Detaching and attaching air conditioner compressor at bracket	108
<b>6</b>	<b>Control motors</b>	<b>109</b>
6.1	Overview of fitting locations - control motors (front)	109
6.2	Assembly overview – control motors, PR numbers KC0, KH4	111
6.3	Assembly overview – control motors, PR number KH7	113
6.4	Removing and installing control motor for front left temperature flap [VX34]	116
6.5	Removing and installing control motor for front right temperature flap [VX35]	119
6.6	Removing and installing control motor for defroster flap [VX47]	121
6.7	Removing and installing control motor for front left air distribution flap [VX93]	123
6.8	Removing and installing control motor for front right air distribution flap [VX94]	125
6.9	Removing and installing control motor for rear temperature flap [VX95]	128
6.10	Removing and installing control motor for fresh air and air recirculation flap [VX96]	129
6.11	Removing and installing left air distribution flap actuator	131
6.12	Removing and installing right air distribution flap actuator	132
<b>7</b>	<b>Front heater and air conditioning unit</b>	<b>133</b>
7.1	Exploded view - heater and air conditioning unit	133
7.2	Assembly overview – evaporator housing, R1234yf	133
7.3	Assembly overview – evaporator housing, R744	134
7.4	Assembly overview - air intake box of heater and air conditioning unit	135
7.5	Removing and installing heater and air conditioning unit, R1234yf	137
7.6	Removing and installing heater and air conditioning unit, R744	141
7.7	Removing and installing evaporator, R1234yf	145
7.8	Removing and installing evaporator, R744	146
7.9	Dismantling and assembling heater and air conditioning unit, R1234yf	146
7.10	Dismantling and assembling heater and air conditioning unit, R744	147
7.11	Removing and installing dust and pollen filter	147
7.12	Removing and installing fresh air blower control unit J126	148
7.13	Removing and installing evaporator temperature sensor [G308]	149