

Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Identification	2
2.1 Allocation of PR number - brakes	2
3 Technical data	3
3.1 Technical data for brakes	3
4 Brake test	5
4.1 Brake check on single-axle roller dynamometer	5
4.2 Checking electromechanical parking brake	5
5 Electrical components	6
5.1 Access to diagnoses	6
45 - Anti-lock brake system	7
1 Safety information and repair notes	7
1.1 Safety information	7
1.2 Repair instructions	7
2 Overview of fitting locations	8
2.1 Overview of fitting locations – ABS/ESP	8
3 Control unit and hydraulic unit	10
3.1 Assembly overview – control unit and hydraulic unit	10
3.2 Removing and installing ABS control unit [J104]/ABS hydraulic unit [N55]	14
3.3 Connecting brake lines to hydraulic unit	22
4 Sensors	27
4.1 Assembly overview – speed sensor on front axle	27
4.2 Assembly overview – speed sensors on rear axle	27
4.3 Removing and installing speed sensor on front axle [G45]/[G47]	28
4.4 Removing and installing speed sensor on rear axle [G44]/[G46]	29
4.5 Checking ABS sensor ring	30
46 - Brakes - mechanism	31
1 Safety information and repair notes	31
1.1 Safety information	31
1.2 Repair instructions	31
2 Front brake	32
2.1 Assembly overview - front brakes	32
2.2 Removing and installing brake pads	34
2.3 Removing and installing brake caliper	39
2.4 Removing and installing brake disc	41
3 Rear brake	43
3.1 Assembly overview – rear brake, drum brake	43
3.2 Assembly overview – brake shoes	45
3.3 Removing and installing brake shoes	47
4 Parking brake	55
4.1 Assembly overview – parking brake	55
4.2 Removing and installing control unit for electromechanical parking brake [J540]	56
4.3 Removing and installing parking brake motor [V282]/[V283]	56
5 Brake pedal	57
5.1 Assembly overview – brake pedal	57
5.2 Separating brake pedal from brake servo	60

5.3	Connecting brake pedal to brake servo	60
5.4	Removing and installing brake pedal	61
5.5	Removing and installing mounting bracket	62
47	- Brakes - hydraulics	67
1	Safety information and repair notes	67
1.1	Safety information	67
1.2	Repair instructions	67
2	Brake servo and brake master cylinder	68
2.1	Assembly overview – brake servo/brake master cylinder	68
2.2	Removing and installing brake servo	72
3	Hydraulic system	82
3.1	Bleeding hydraulic system following standard procedure	82
3.2	Subsequent bleeding of hydraulic system	82
3.3	Changing brake fluid	83
3.4	Leak test	83
3.5	Checking wheel brake cylinder for leaks	84