



Contents

00 - Technical data	1
1 Safety and repair instructions	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Electrical components	2
2.1 Access to diagnoses	2
27 - Starter, current supply, CCS	3
1 Safety information and repair notes	3
1.1 Safety information	3
1.2 Repair instructions	3
2 Battery	4
2.1 Assembly overview – battery	4
2.2 Removing and installing battery A	4
2.3 Disconnecting and connecting battery	9
2.4 Removing and installing battery tray	12
2.5 Checking battery A	12
2.6 Charging battery A	16
2.7 Removing and installing earth wire with battery monitor control unit [J367]	17
2.8 Commissioning battery monitor control unit [J367]	18
90 - Gauges, instruments	19
1 Safety information and repair notes	19
1.1 Safety information	19
1.2 Repair instructions	19
2 Dash panel insert	20
2.1 Assembly overview – control unit with display unit for driver information system	20
2.2 Assembly overview - head-up display	20
2.3 Removing and installing control unit with display unit for driver information system [J1254]	21
2.4 Removing and installing control unit for head-up display [J898]	22
2.5 Calibrating control unit for head-up display [J898]	25
3 Horn	29
3.1 Assembly overview - horn	29
3.2 Removing and installing horn or dual tone horn [H1]	29
92 - Windscreen wash/wipe system	31
1 Safety information and repair notes	31
1.1 Safety information	31
1.2 Repair instructions	31
2 Windscreen wiper system	32
2.1 Assembly overview - windscreen wiper system	32
2.2 Moving wipers to service position	33
2.3 Removing and installing wiper blade	33
2.4 Removing and installing wiper arms	34
2.5 Adjusting wiper arms	36
2.6 Removing and installing wiper motor [V]	38
2.7 Deactivating APP function	39
2.8 Removing and installing rain and light sensor [G397]	39
3 Windscreen washer system	44
3.1 Assembly overview – windscreen washer system	44
3.2 Removing and installing washer fluid reservoir	45
3.3 Removing and installing washer pump [V59]	46



3.4	Removing and installing spray jets	47
3.5	Adjusting spray jets	48
4	Rear window washer system	49
4.1	Assembly overview – rear window washer system	49
4.2	Removing and installing spray jet	49
5	Washer fluid lines	52
5.1	Repairing washer fluid lines	52
94	Lights, bulbs, switches - exterior	54
1	Safety information and repair notes	54
1.1	Safety information	54
1.2	Repair instructions	54
2	Headlights	55
2.1	Assembly overview – headlight	55
2.2	Assembly overview – repair kit for headlight housing	59
2.3	Assembly overview – LED module for daytime running light	60
2.4	Removing and installing headlight	61
2.5	Adjusting headlights	62
2.6	Removing and installing front turn signal bulb [M5]/[M7]	62
2.7	Installing repair kit for headlight housing	64
2.8	Removing and installing headlight range control motor [V48]/[V49]	64
2.9	Removing and installing LED module for daytime running light and side light [L176]/[L177]	69
2.10	Removing and installing bulb for VARILIS headlight [L207]/[L208]	70
2.11	Removing and installing headlight fan [V407]/[V408]	73
2.12	Removing and installing output module 1 for LED headlight [A27]/[A31]	75
2.13	Removing and installing light conductor for contour lighting in radiator grille [L362]/[L363]	78
2.14	Removing and installing LED module for daytime running lights [L377]/[L378]	78
3	Lights in exterior mirror	80
3.1	Assembly overview - lights in exterior mirror	80
3.2	Removing and installing turn signal repeater bulb [L131]/[L132]	82
3.3	Removing and installing entry light in exterior mirror [W52]/[W53]	83
4	Tail lights	85
4.1	Assembly overview – tail lights in body	85
4.2	Assembly overview – tail lights in rear lid	85
4.3	Removing and installing centre rear tail light cluster [MX13]	86
4.4	Removing and installing tail light cluster [MX3]/[MX4]	87
4.5	Removing and installing rear fog light [X3]	88
5	LED module for charging socket	90
5.1	Removing and installing LED module for charging socket 1 [L263]	90
6	High-level brake light	91
6.1	Assembly overview – high-level brake light	91
6.2	Removing and installing high-level brake light bulb [M25]	91
7	Number plate light	93
7.1	Removing and installing number plate light [X4]/[X5]	93
8	Entry and start authorisation system	94
8.1	Overview of fitting locations – entry and start authorisation system	94
8.2	Overview of fitting locations – keyless entry system	97
8.3	Assembly overview – control unit for break-in protection	98
8.4	Removing and installing interface for entry and start system [J965]	99
8.5	Removing and installing entry and start authorisation aerial [R200]/[R201]	101
8.6	Removing and installing interior aerial 1 for entry and start system [R138]	102
8.7	Removing and installing luggage compartment aerial for entry and start system [R137]	103
8.8	Removing and installing control unit 2 for break-in protection [J1192]/control unit 3 for break-in protection [J1193]	103



8.9	Removing and installing control unit 4 for break-in protection [J1194]/control unit 5 for break-in protection [J1195]	104
9	Steering column switch module	106
9.1	Assembly overview - steering column switch module	106
9.2	Removing and installing steering column electronics control unit [J527]	107
10	Automatic headlight range control	109
10.1	Assembly overview - automatic headlight range control	109
11	Towing bracket	110
11.1	Assembly overview – socket, trailer detector control unit	110
11.2	Removing and installing trailer detector control unit [J345]	110
11.3	Removing and installing trailer socket [U10]	111
96	Lights, bulbs, switches - interior	113
1	Safety information and repair notes	113
1.1	Safety information	113
1.2	Repair instructions	113
2	Lights	114
2.1	Overview of fitting locations - lights in dash panel	114
2.2	Overview of fitting locations - lights in front doors	114
2.3	Overview of fitting locations – footwell lights	115
2.4	Overview of fitting locations – lights in centre console	116
2.5	Overview of fitting locations – lights in luggage compartment	117
2.6	Overview of fitting locations – lights in roof trim	118
2.7	Removing and installing footwell light [W9]/[W10]	120
2.8	Removing and installing central locking SAFELOCK function warning lamp [K133]	121
2.9	Removing and installing rear footwell light [W45]/[W46]	122
2.10	Removing and installing luggage compartment light [W18/35]	123
2.11	Removing and installing illuminated vanity mirror [W20]/[W14]	123
2.12	Removing and installing dynamic light strip 1 for information in dash panel [L385]	124
2.13	Removing and installing light 1 for front centre console background lighting [L193]	125
3	Controls	126
3.1	Overview of fitting locations - controls in dash panel	126
3.2	Overview of fitting locations – controls in front doors	127
3.3	Overview of fitting locations – controls in rear doors	127
3.4	Overview of fitting locations – controls in luggage compartment	128
3.5	Overview of fitting locations – controls in roof trim	129
3.6	Removing and installing operating unit for lighting [EX59]	131
3.7	Removing and installing centre switch module in dash panel [EX22]	132
3.8	Removing and installing operating unit for window regulator in driver door [EX36]	132
3.9	Removing and installing front passenger side window regulator button [E716]	133
3.10	Removing and installing rear lid remote release button [E233]	134
3.11	Removing and installing rear window regulator button [E711]/[E713]	135
3.12	Removing and installing starter button [E378]	135
3.13	Removing and installing electric hinged tow coupling attachment button [E474]	136
3.14	Removing and installing rear lid closure button [E574]	137
3.15	Removing and installing rear lid warning buzzer [H32]	137
3.16	Removing and installing front interior light [WX1]	138
3.17	Removing and installing rear interior light/reading light	139
4	Anti-theft alarm system	141
4.1	Assembly overview – interior monitor	141
4.2	Removing and installing alarm horn [H12]	142
4.3	Removing and installing anti-theft alarm sensor [G578]	143
5	Cigarette lighter, socket	145
5.1	Removing and installing 12 V socket [U5/U19]	145



97 - Wiring	146
1 Safety information and repair notes	146
1.1 Safety information	146
1.2 Repair instructions	146
2 Relay carriers, fuse holders, electronics boxes	147
2.1 Overview of fitting locations – relay carriers, fuse holders, E-boxes	147
2.2 Assembly overview – relay carriers, fuse holders, electronics boxes	148
2.3 Removing and installing electronics box	150
2.4 Removing and installing fuse holder A [SA]	151
2.5 Removing and installing fuse holder B [SB]	153
2.6 Removing and installing fuse holder C [SC]	155
3 Control units	159
3.1 Overview of fitting locations – control units	159
3.2 Assembly overview – onboard supply control unit	160
3.3 Removing and installing onboard supply control unit [J519]	162
3.4 Removing and installing bracket for onboard supply control unit [J519]	164
3.5 Removing and installing data bus diagnostic interface [J533]	167
3.6 Removing and installing fan for control unit [V274]	167
4 Connector housings	169
4.1 Dismantling connector housings	169
5 Cleaning contact surfaces	170
5.1 Cleaning battery clamp and battery terminal	170
5.2 Anti-corrosion treatment of contact surfaces	171
5.3 Cleaning cable lugs	172
5.4 Cleaning threaded connections	173
6 Wires	174
6.1 Repairing aerial wires	174
6.2 Repairing wires with a cross section of 0.13mm ² to 6mm ²	178
6.3 Repairing 2.5 mm, 4 mm or 6 mm aluminium wires with a single crimp connector	182
6.4 Repairing a 10 mm ² or 16 mm ² wire	185
6.5 Repairing Ethernet lines	189
6.6 Section repairs to electrical wiring	189
7 Fibre optic cables	191
7.1 Repairing fibre optic cables	191
7.2 Removing and installing fibre optic cable of wiring harness connector	195