

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information and repair notes</b>	<b>1</b>
1.1 Safety information	1
1.2 Repair instructions	1
<b>2 Identification</b>	<b>2</b>
2.1 Gearbox identification	2
<b>3 Technical data</b>	<b>3</b>
3.1 Allocation gearbox - engine	3
3.2 Capacities	3
<b>34 - Controls, housing</b>	<b>4</b>
<b>1 Safety information and repair notes</b>	<b>4</b>
1.1 Safety information	4
1.2 Repair instructions	4
<b>2 Removing and installing gearbox</b>	<b>5</b>
2.1 Removing gearbox	5
2.2 Installing gearbox	5
<b>3 Gearbox housing, clutch housing</b>	<b>6</b>
3.1 Assembly overview - gearbox housing	6
<b>4 Gear oil</b>	<b>7</b>
4.1 Checking gear oil level	7
4.2 Draining and filling gear oil	7
<b>39 - Final drive - differential</b>	<b>8</b>
<b>1 Safety information and repair notes</b>	<b>8</b>
1.1 Safety information	8
1.2 Repair instructions	8
<b>2 Oil seals</b>	<b>9</b>
2.1 Assembly overview – seals	9
2.2 Renewing left seal	9
2.3 Renewing right seal	10