

Rep. Group	Title/Contents	Page
27	Starter, Current Supply	1
	• Checking battery	1
	• Charging battery	1
	• Boost charging/Starting assistance	2
	• Battery – Maintenance tips	2
	• Removing and installing cell plugs	3
	• Removing and installing battery	4
	• Battery discharges	4
	• Starter does not turn	5
	• Starter motor turns too slowly to start engine	6
	• Repairing starter	8/10
	• Alternator warning lamp does not light up when ignition is switched on	16
	• Alternator warning lamp does not go out when speed increases	18
	• Checking alternator and voltage regulator with tester V.A.G 1315 A	19
	• Checking resistance for pre-exciter current switch (from 8.80 ▶)	20
	• Removing and installing alternator (petrol engines)	21
	• Removing and installing alternator (4 cylinder Diesel)	22
	• Securing alternator wiring	25
	• Repairing 35 A and 55 A alternator (Bosch)	27
	• Repairing 45 A and 65 A alternator (Bosch)	28
	• Repairing 35 A, 55 A and 65 A alternator (Motorola)	33
• Repairing 45 A alternator (Motorola)	38	
90	Instruments, Radio	43
	• Repairing dash insert	43
	• Voltage stabilizer and printed circuit	48
	• Checking fuel gauge	50
	• Fuel or coolant temperature gauges indicating incorrectly or not at all	51
	• Checking coolant temperature gauge	52
	• Checking fuel consumption gauge	58

Rep. Group	Title/Contents	Page	
	• Removing and installing dash insert	59	
	• Dash insert – VDO	59	
	• Dash insert (Golf/Jetta only from model year 81)	60	
	• Dash insert with optical and acoustic oil pressure warning (from model year 83)	64	
	• Dash insert with multi function indicator (MFI) from model year 83)	73	
	• Removing and installing multi function indicator (MFI) Golf Convertible from 9.84)	76	
	• Checking multi function indicator (MFI) (Golf Convertible from 9.84)	77	
	• Removing and installing fuel gauge sender	83	
	• Removing and installing speedo cable	84	
	• Removing and installing speedo drive gear	85	
	• Horn system defective (up to model year 82)	86	
	• Dual horn system defective (up to 7.77)	89	
	• Dual horn system defective (model year 78)	91	
	92	Windscreen Wiper and Washer System	94
		• Repairing wiper system	94
• Repairing windscreen washer		95	
• Repairing rear wiper and washer		96	
• Removal and installation of wiper rubbers		101	
• Service installation of intermittent facility with automatic wash-wipe		102	
• Wiper motor does not work at all (up to model year 79)		102	
• Wiper motor does not work at stage II (up to model year 79)		104	
• Wiper motor does not work on intermittent operation (up to 7.77)		106	
• Wiper motor does not work on intermittent operation (up to model year 79)		107	

Index

Rep. Group	Title/Contents	Page
	• Intermittent operation cannot be switched off up to 7.77)	109
	• Intermittent operation cannot be switched off (up to model year 79)	111
	• Rear wiper does not work (up to 7.77)	113
	• Rear wiper does not work (model year 78)	115
	• Rear wiper works continuously (model year 78)	117
	• Repairing headlight washer system	118
94	Exterior Switches, Lights	122
	• Repairing steering column switch (up to 7.76)	122
	• Repairing steering column switch (from 8.76)	125
	• Repairing steering column switch (from 8.77)	128
	• Turn signals, left or right, defective (up to model year 82)	130
	• Emergency lights defective (up to model year 82)	132
	• Low beam left and right (high beam left and right) not working (up to 7.77)	133
	• Low beam left (right) not working (up to model year 82)	135
	• Side light and tail light left (side light and tail light right) not working (up to model year 82)	136
	• Lighting for ashtray, clock, dash insert, fresh air controls, cigarette lighter and emergency light switch not working	137
	• Headlight flasher not working (up to 7.77)	138
	• Reversing lights not working (up to model year 82)	139
	• Low beam left and right (high beam left and right) not working (from model year 78)	141
	• Headlight flasher not working (from model year 78)	143
	• Removing and installing rear lights (Golf)	144

Rep. Group	Title/Contents	Page
	• Renewing headlight bulb, rectangular headlight – Scirocco	144
	• Removing and installing switches, warning lamp for dual circuit brakes and handbrake	145
	• Removing and installing emergency light switch, switch for heated rear window, switch for fog lights and rear fog light	145
97	Wiring	146
	• Removing and installing front left loom (up to 2.76)	146
	• Removing and installing front right loom (up to 2.76)	148
	• Routing of front left and front right looms (up to 2.76)	150
	• Removing and installing instrument panel loom	151
	• Routing of wiring behind dash (only Golf LHD from 3.78)	155
	• Removing and installing rear loom	157
	• Loom for heated rear window and wiper – Scirocco only	158
	• Removing and installing front wiring looms (from 2.76)	159
	• Removing and installing generator wiring loom	161
	• Installing suppression filter for radiator fan	161
	• Fitting sequence for earth connections	162
	• Removing and installing relay plate/fuse box (up to 7.77)	163
	• Removing and installing relay plate/fuse box (up to model year 82)	165
	• Removing and installing fuse box/relay plate (Golf/Jetta only from model year 83)	166