Index

INDEX OF REPAIR OPERATIONS SHOWING VW/AUDI SPECIAL TOOLS/GOLF (R+I = REMOVING AND INSTALLING)

Repair operation	Repair	Page	VW/AUDI special tools	Workshop equipment
55 14 15	Cable for engine bonnet lock, adj	usting 1		
55 59 19 12	Tailgate, R+I	1		
57 11 19	Door handle, installing	8		
57 17 19	Door lock, installing	5, 6		
57 51 55	Door, renewing	4, 5, 6, 7, 8		
57 59 19	Door check strap, installing	5		
58 11 19	Door handle, removing	11		
58 17 19	Door lock, removing	11		
58 51 55	Door, renewing	10, 11, 12		
60 05 15	Sliding roof, adjusting	16		
60 05 19	Sliding roof, R + L	13, 14		
60 18 20	Cables, R + I	13, 15		
60 22 19	Driving pinion, R+I	13, 15		
60 30 20	Lateral guides, R+I	13, 15		
60 40 19	Sliding roof panel, R + I	13, 14		
63 50 19	Bumpers, R+I	22	VW 3041	
64 27 19 00	Vent window in front door, R+I	24		
64 29 19 50	Corner window, front, R+I	7		
64 40 19 50	Door window, front, R + I	6		
64 53 19 50	Window lifter, front, R + I	6		
64 57 19 00	Window crank, R + I	37		
64 60 19 00	Door window, rear, R+I	10		
64 73 19 50	Window lifter, rear, R+I	10		
64 82 19 50	Corner window, rear, R+I	11		
70 86 19	Sliding roof trim, R+I	14		
74 50 19	Seat cover, R+I	40		

$\textbf{INDEX OF REPAIR OPERATIONS SHOWING VW/AUDI SPECIAL TOOLS/JETTA} \ (R+I = REMOVING \ AND \ INSTALLING)$

Repair operation	Repair	Page	VW/AUDI special tools	Workshop equipment
55 14 15	Cable for engine bonnet lock, adjusting	1		
55 86 15	Lower section of boot lid lock, adjusting	2	·	
57 17 19	Door handle, installing	8		
57 17 19	Door lock, installing	5, 6		

Index

57 51 55	Door, renewing	4			
57 59 19	Door check strap, installing	5			
58 11 19	Door handle, removing	11			
58 17 19	Door lock, removing	11			
58 51 55	Door, renewing	10, 11, 12			
60 05 15	Sliding roof, adjusting	16			
60 05 19	Sliding roof, R+I	13, 14			
60 18 20	Cables, R+I	13, 15	·		
60 22 19	Driving pinion, R+I	13, 15	411.	1.4.	
60 30 20	Lateral guides, R+I	13, 15			-
60 40 19	Sliding roof panel, R+I	13, 14	4		-
63 50 19	Bumpers, R+I	22	VW 3056		
64 29 19 50	Corner window, front, R+I	7			
64 40 19 50	Door window, front, R + I	6	77.16		
64 53 19 50	Window lifter, front, R + I	6	4	W 11 11 11 11 11 11 11 11 11 11 11 11 11	
64 57 19 00	Window crank, R+I	37			
64 60 19 00	Door window, rear, R+I	10		W	
64 73 19 50	Window lifter, rear, R+I	10	- 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1		
64 82 19 50	Corner window, rear, R+I	11		**************************************	
66 05 19	Radiator grille, R + I	32			
70 18 19	Instrument panel, R+I	33, 34		V 4.415.11	_
70 21 19	Knee bar, R+I	35			
70 59 19	Door trim, front, removing	36, 37		t	•
70 73 19	Door trim, rear, removing	38	<u></u>		
70 86 19	Sliding roof trim, R+I	14			

INDEX OF REPAIR OPERATIONS SHOWING VW/AUDI SPECIAL TOOLS/SCIROCCO (R + I = REMOVING AND INSTALLING)

			•	
Repair operation	Repair	Page	VW/AUDI special tools	Workshop equipment
57 51 55 50	Door, renewing	9		
60 05 15	Tilting roof, adjusting	19, 20, 21		
60 05 19	Tilting roof, R+I	18, 19		
60 22 19	Driving pinion, R+I	18, 19		
60 40 19	Tilting roof panel, R+I	18, 19		
66 17 19 00	Side panel trim strip, sticking	31		
70 18 19	Instrument panel, R+I	39		



Index

ALPHABETICAL INDEX/GOLF

Pa	ge		Pa	ıge
B umper covering, renewing	22	Front door trim panel Exploded view		36
Engine bonnet lock cable, adjusting	1	Door trim panel, removing		37
Front door ■ Exploded view	4	Instrument panel, R+I	33,	34
Bolting on door, installing door check strap, door lock, window	·	Knee bar, R+I		35
lifter, corner window, guide rail, window slot seals, window		Radiator grille, R + I		32
channel, expanding nuts and door handle; installing clips for window slot seals 5, 6, 7	•	Rear door Exploded view Removing door handle, door lock, guide rail and check flap	r;	10
Gas-filled spring, installing Rear door	3	fitting clips for window slot seals; fitting and removing door 10,	11	12
	10	4001	,	12
 Removing door handle, door lock, guide rail and check flap; fitting clips for window slot 		Rear door trim panel ■ Exploded view		38
seals; fitting and removing		Sliding roof		
door 10, 11,		Exploded viewRemoving and installing slidin	g	13
	40	roof panel; disengaging leaf springs; removing support plate; removing and installing		
Rear-view mirror, service installation 25, 26, 27, 28, 29,	30	cables; removing moulding	14,	. 15
Sliding roof		Height adjustment	,	16
	13	 Parallel movement, adjusting Water drain hoses, cleaning 		16 17
plate; removing and installing cables; removing moulding		ALPHABETICAL INDEX/SCIRO	cc	2
and cable guide 14,			Pa	age
,	16	Front door overladed view		,
- · · · · · · · · · · · · · · · · · · ·	16 17	Front door – exploded view		ξ
Tailgate, renewing	1	Instrument panel, R+I		39
Tallyate, Terlewing	'	Rear bumper side part, renewing		23
ALPHABETICAL INDEX/JETTA		Tilting roof ■ Exploded view		18
Pa	ge	Tilting roof panel, removing	18,	. 19
Bumper covering, renewing	22	 Tilting roof panel and manual drive, installing 	18,	19
Engine bonnet lock cable, adjusting	1	Parallel movement, adjustingGap, correcting		19
Flap lock, exploded view	2	Height adjustmentWater drain hoses, cleaning	20,	21 21
Flap lock, lower part, adjusting	2	Trim strips, sticking on		31
Front door Exploded view Bolting on door, installing door check strap, door lock, window lifter, corner window, guide rail, window slot seals, window channel, expanding nuts and door handle; installing clips for window slot seals 5.6.7	4			
window slot seals 5, 6, 7	', 8			

Materials for Body Repairs

		Application	Designation VW Pt. No. Manufacturer
Sticking	Activator	For glass-to-metal adhesive	D 000 701
	Glass-to-metal adhesive	For sticking rear view mirror mounting and vent fittings	D 000 702
	Non hardening adhesive	For sticking leatherette	D 001 100
	Universal adhesive	For sticking felt, material, rubber and carpet to painted metal	D 001 201
	Moulded rubber adhesive	For sticking door seals	D 002 101
	Silicone rubber	For sticking reinforcements, bracing and hoops to bodies (black)	AMV 176 000 05
	Double- sided sealing tape	For sticking protective foils on door inner panels	AKL 440 025
Sealing	Genuine VW non-harden- ing sealant	For sealing off bolt and cable holes	D 001 400
	Window sealant	For sealing off windows	D 001 007
	Non-hardening sealing tape	For sealing off between mudwings and body	D 001 900
	Sealing cord 10 mm dia.	For sealing off taillight clusters	AKD 497 010 R 10