

ALPHABETICAL INDEX

	Page		Page
Air conditioner charging and evacuating valves . . .	8	-Heater, servicing	1, 4, 10, 14
Air conditioner, opening and evacuating.	9	Heat exchanger, removing and installing	
Air conditioner, servicing controls		● up to 1976 Model Year	2
up to 1979 Model Year	23	● from 1977 Model Year	4
● from 1980 Model Year	28	Heat exchanger for air conditioner, removing and installing	10
Air conditioner micro switch, adjusting		Heater cable, adjusting	
● up to 1979 Model Year	23	● up to 1976 Model Year	1
● from 1980 Model Year	28	● from 1977 Model Year	5
Air conditioner cables, adjusting		Instruction regarding general repairs on vehicles with air conditioner	9
● up to 1979 Model Year	13	Receiver for air conditioner	8
● from 1980 Model Year	14	Repairs to the air conditioner which can only be carried out by specially equipped workshops	8
Additional current flow diagrams		Repairs to the air conditioner and ventilation systems, which are possible without any special equipment	
● up to 1977 Model Year	30	● up to 1979 Model Year	10
● from 1977 Model Year	32	● from 1980 Model Year	14
● from 1978 Model Year	34	Regulator valve, removing and installing	1, 4, 10
● from 1979 Model Year	36	Safety precautions when working on vehicles with air conditioner or when handling refrigerant	7
● from 1980 Model Year	38	Temperature switch, removing and installing	
Cover, removing and installing		● up to 1979 Model Year	23
● up to 1979 Model Year	1	● from 1980 Model Year	28
● from 1980 Model Year	4	Vacuum hose layout	
Cover for air conditioner	10	● up to 1979 Model Year	40
Compressor bracket, removing and installing		● from 1980 Model Year	41
● up to 1977 Model Year	16	Vacuum unit, removing and installing	
● from 1978 Model Year	20	● up to 1979 Model Year	10
● from 1979 Model Year — Golf/Diesel	20	● from 1980 Model Year	14
● from 1979 Model Year	22	Vacuum system, checking	
Cooling function, checking		● up to 1979 Model Year	42
● up to 1979 Model Year	46	● from 1980 Model Year	49
● from 1980 Model Year	53	Vacuum distributor, removing and installing	
Control flap	4	● up to 1979 Model Year	23
Cut-off flap, removing and installing	4	● from 1980 Model Year	28
Direct ventilation	1	V belt, removing, installing/adjusting	
Evaporator housing, dismantling and assembling	10	● up to 1977 Model Year	16
Fault Finding Instructions — air conditioner		● from 1978 Model Year	18
● up to 1979 Model Year	42	● from 1979 Model Year (Golf Diesel)	10
● from 1979 Model Year	49	● from 1979 Model Year	22
Fresh air blower for heater, removing and installing		V belt adjusting pulley, adjusting	22
● up to 1976 Model Year	3		
● from 1977 Model Year	4		
Fresh air blower for air conditioner, removing and installing	10		
Fresh air box, removing and installing			
● Heater	1		
● Air conditioner	10, 14		
Fresh air flap, removing and installing	1, 4		
Fresh air and heater controls, removing and installing			
● up to 1976 Model Year	2		
● from 1977 Model Year	5		
Fresh air blower switch, removing and installing	4, 14		