



Contents

1	Engine list	1
2	Oil change service	11
2.1	Oil change service every 7,500 km	11
2.2	Oil change service every 15,000 km	11
3	Inspection service	13
3.1	Inspection service every 12 months	13
3.2	Inspection service every 30,000 km	15
4	General	18
4.1	Type plate, vehicle identification number	18
4.2	Engine code and engine number	18
4.3	Lifting vehicle	20
4.4	Tow starting and towing	21
5	Descriptions of work	24
5.1	Self-diagnosis: Read fault memories of all systems	24
5.2	Service interval display: Reset (digital driver information centre - DIGIFIZ)	27
5.3	Door arrester and securing pins: Grease	28
5.4	Sunroof: Check function, clean and grease guide rails	28
5.5	Windscreen wash/wipe system and headlight washer system: Check function	29
5.6	Check tyres: Condition, wear pattern, inflation pressures, tread depth	34
5.7	Oil level: Check	38
5.8	Engine oil: Drain or extract and top up; Renew oil filter	38
5.9	Engine and components in engine compartment (from above and below): Perform visual check for leaks and damage	41
5.10	V-belt: Check condition and tension	42
5.11	Poly V-belts: Check condition	44
5.12	Manual gearbox/final drive: Check oil level	44
5.13	Automatic gearbox: Check final drive oil level	45
5.14	Automatic gearbox: Check ATF level	45
5.15	Changing ATF (automatic gearbox)	46
5.16	Brake system: Perform visual check for leaks and damage	48
5.17	Front and rear brake pads/linings: Check thickness	48
5.18	Underbody protection: Perform visual check for damage	49
5.19	Track rod ends: Check play, security and boots	50
5.20	Swivel joints: Perform visual check	50
5.21	Cooling system: Check frost protection and coolant level	50
5.22	Camshaft drive toothed belt: Check condition and tension (diesel engine)	53
5.23	Valve clearance: Check (engine code GT)	54
5.24	Contact breaker points: Renew (engine code GT)	55
5.25	Fuel filter: Renew	56
5.26	Fuel filter: Drain water (diesel engine)	57
5.27	Power assisted steering: Check fluid level	58
5.28	Change brake fluid	58
5.29	Brake fluid level (dependent upon lining/pad wear): Check	61
5.30	Battery: Check	62
5.31	Clutch play: Check	69
5.32	Engine basic setting: Perform settings	70
5.33	Idling speed: Check	104
5.34	Headlight settings: Check	105
5.35	Road test: Carry out	108
6	Legally required extra work according to country	109
6.1	Emissions test	109