

## Contents

<b>00</b>	<b>Technical data</b>	<b>Page</b>
	<b>Gearbox identification</b> .....	<b>00-1</b>
	– Code letters, allocation, ratios, capacities .....	00-3
	– 4 Speed manual gearbox 020.....	00-7
	– Transmission changes: 4 speed manual gearbox 1A .....	00-15
	– Transmission layout .....	00-16
<b>30</b>	<b>Clutch</b>	<b>Page</b>
	<b>Repairing clutch controls</b> .....	<b>30-1</b>
	– Release shaft, release lever, return spring, clutch lever and release bearing .....	30-1
	– Repairing clutch.....	30-6
<b>34</b>	<b>Controls, Housing</b>	<b>Page</b>
	<b>Controls, Housing</b> .....	<b>34-1</b>
	– Repairing shift linkage .....	34-1
	– Repairing shift linkage .....	34-5
	– Adjusting shift linkage .....	34-8
	– Repairing shift linkage .....	34-10
	– Adjusting gear shift linkage .....	34-15
	– Modifications to the shift linkage .....	34-20
	– Boot with cap .....	34-20
	– One-piece shift rod bearing .....	34-22
	– Relay lever with larger rubber ball .....	34-23
	– Type of grease .....	34-23
	– Removing and installing bonded rubber bushes for gearbox carrier .....	34-24
	– Removing and installing gearbox.....	34-29
	– Dismantling and assembling gearbox .....	34-36
	– Removing and installing Housing.....	34-40
	– Service installation of the 5 speed manual gearbox .....	34-57
	– Selector shaft cover modified .....	34-59
	– Selector shaft lever self-locking nut .....	34-60
	<b>Dismantling and assembling gearbox</b> .....	<b>34-61</b>
	– Removing and installing drive shaft, output shaft and differential .....	34-61
	– Removing and installing drive shaft .....	34-64
	– Dismantling and assembling Gearbox.....	34-72
	– Modifications to gearbox housing.....	34-77
	– Repairing bearing housing .....	34-78
	– TDC sensor adapter in clutch housing.....	34-86
	– "Floating" shift fork rod .....	34-87
	– Location and bearings of gearshift shaft in gearbox modified .....	34-88
	– Gearbox breather relocation .....	34-94
	– Additionally securing magnet in clutch housing with sealing compound.....	34-96
<b>35</b>	<b>Gears, Shafts</b>	<b>Page</b>
	<b>Dismantling and assembling input shaft</b> .....	<b>35-1</b>
	– Adjusting input shaft .....	35-20
	– Dismantling and assembling output shaft .....	35-25
	– Adjusting output shaft.....	35-45
	– Securing the output shaft needle roller bearing .....	35-50
	– Repair instructions: .....	35-51
<b>39</b>	<b>Final drive, Differential</b>	<b>Page</b>
	<b>Repairing differential</b> .....	<b>39-1</b>
	– Removing and installing drive flange oil seal .....	39-1
	– Dismantling and assembling differential .....	39-3
	– Adjusting differential .....	39-15
	– Differential bevel gear shaft secured with extended rivets .....	39-19
	– Adjustment list .....	39-20