

Contents

	Page
00 Technical data	Page
Gearbox identification	00-1
- Speedometter drive pinions	00-3
- Code letters, gearbox allocation, ratios, oil capacities (up to 07.82)	00-4
- Code letters, gearbox allocation, ratios, oil capacities (up to 07.82)	00-6
- Code letters, gearbox allocation, ratios, oil capacities (up to 07.82)	00-8
- Code letters, gearbox allocation, ratios, oil capacities (from 8.82) (up to 07.83)	00-10
- Code letters, gearbox allocation, ratios, oil capacities (from 8.82 up to 07.83)	00-12
- Code letters, gearbox allocation, ratios, oil capacities (from 8.82 up to 7.83)	00-14
- Code letters, gearbox allocation, ratios, oil capacities (from 8.83)	00-16
- Code letters, gearbox allocation, ratios, oil capacities (from 8.83)	00-18
- Code letters, gearbox allocation, ratios, oil capacities (from 8.83)	00-20
- Code letters, gearbox allocation, ratios, oil capacities (from 8.83)	00-22
- Transmission layout	00-26
30 Clutch	Page
Clutch	30-1
- Repairs to the clutch mechanism	30-1
- Clutch cable chafing against brake fluid reservoir	30-4
- Repairs to clutch (190/200 mm dia.)	30-6
34 Controls, housing	Page
Controls, Housing	34-1
- Operation of shift mechanism	34-1
- Repair shift linkage	34-4
- Adjusting gearshift linkage	34-8
- Adjusting selector shaft retaining screw	34-10
- Adjusting retaining screw for 5th gear	34-11
- Selector shaft lever self-locking nut	34-12
- Removing and installing bonded rubber bushes for gearbox carrier	34-13
- Removing and installing gearbox	34-15
- General view	34-19
- Dismantling and assembling gearbox	34-21
- Dismantling and assembling gearbox	34-26
- Dismantling and assembling gearbox	34-29
- Dismantling and assembling gearbox	34-51
- Dismantling and assembling gearbox	34-58
- Dismantling and assembling gearbox	34-62
- Vehicles with gearchange and consumption indicator	34-66
- Additional bearing for output shaft	34-67
- Gearbox breather relocation	34-69
- TDC sensor adapter in clutch housing	34-70
- Spring for the reverse gear relay lever	34-71
- Modified locating and mounting of the selector shaft in the gearbox	34-72
- Additionally securing magnet in clutch housing with sealing compound	34-76
- Selector shaft cover modified	34-77
35 Gears, shafts	Page
Gears, Shafts	35-1
- Dismantling and assembling input shaft	35-1
- Dismantling and assembling output shaft	35-15
- Adjusting output shaft	35-25
- Synchronizer hub for 5th gear with retaining ring for locking keys	35-30
- Dismantling and assembling output shaft (pinion shaft)	35-33
39 Final drive - differential	Page
Final drive, Differential	39-1
- Removing and installing drive flange oil seal	39-1
- Dismantling and assembling differential	39-3
- Adjustment table	39-12
- Adjusting differential	39-13
- Play free location of drive flange shafts	39-16
- Differential with cones: dismantling and assembling	39-17

- Differential bevel gear shaft secured with extended rivets 39-23