

## Index

| 01 Self diagnosis, Electrical check                            | Page  |
|--|-------|
| Electrical check   | 01-1  |
| - Test table K Jetronic (Engine code letters: GX)              | 01-3  |
| - Test table FEI ignition system (Engine code letters: RG)     | 01-5  |
|  |       |
| 25 Fuel system   | Page  |
| Servicing K Jetronic system                                    | 25-1  |
| - Technical data   | 25-19 |
| - Safety measures  | 25-23 |
| - Rules for cleanliness  | 25-25 |
| - Idling adjustment  |       |
| o Engine code letters: EV, GZ, RG                              | 25-26 |
| o Engine code letters: GX                                      | 25-30 |
| - Checking idle speed boost                                    | 25-36 |
| - Checking adjusting lever and control plunger                 | 25-39 |
| - Air flow meter plate, checking and adjusting position        |       |
| o Engine code letters: EV and GZ > approx. 02.86, GX           | 25-39 |
| - Checking/adjusting meter plate rest position and free travel |       |
| o Engine code letters: EV and GZ approx. 03.86 >, RG           | 25-41 |
| - Removing and installing control plunger                      |       |
| o Engine code letters: EV and GZ approx. 03.86 >, RG           | 25-44 |
| - Checking and adjusting cold start valve and thermostich      | 25-45 |
| - Checking cold acceleration enrichment                        |       |
| o Engine code letters: EV and GZ 09.84 >, GX, RG               | 25-49 |
|  |       |
| Continued on next page   |       |
|  |       |
| 25 Fuel system   | Page  |
| - Checking diaphragm pressure switch                           |       |
| o Engine code letters: EV and GZ 09.84 >, GX, RG               | 25-51 |
| - Checking and adjusting idling switch                         |       |
| o Engine code letters: EV and GZ 09.84 >, GX                   | 25-52 |
| o Engine code letters: RG                                      | 25-53 |
| - Checking auxiliary air valve                                 | 25-55 |
| - Checking warm-up valve (voltage supply, control pressure)    | 25-57 |
| - Checking and adjusting system pressure                       | 25-59 |
| - Checking holding pressure                                    | 25-62 |
| - Comparing injection delivery                                 | 25-63 |
| - Basic throttle valve setting                                 | 25-67 |
| - Checking regulated exhaust system (Engine code letters: GX)  | 25-69 |
| - Relay locations  | 25-69 |
| - Checking thermostich (F 58)                                  | 25-70 |
| - Connecting tester V.A.G 1367                                 | 25-71 |
| - Connecting remote control V.A.G 1348/3A                      | 25-72 |
| - Checking frequency valve (N 7)                               | 25-72 |
| - Checking emergency running from control unit (J 21)          | 25-73 |
| - Checking cold running enrichment from control unit (J 21)    | 25-74 |
| - Checking cold start enrichment from control unit (J 21)      | 25-75 |
| - Checking regulating function of vacuum switch                | 25-76 |
| - Checking Lambda regulating function of control unit (J 21)   | 25-78 |
| - Checking Lambda probe  | 25-79 |

| 28 Ignition system                           | Page  |
|--|-------|
| Servicing ignition system                    | 28-1  |
| Servicing TCI-H ignition system (EV, GX, GZ) | 28-2  |
| - Dismantling and assembling distributor     | 28-6  |
| - Settings, spark plugs                      | 28-11 |
| - Distributor data                           | 28-13 |
| - Safety measures for TCI-H system           | 28-14 |
| - Installing distributor                     | 28-15 |
| - Checking and adjusting ignition timing     | 28-17 |
| - Checking spark control                     | 28-19 |
| - Checking TCI-H switch unit and Hall sender | 28-25 |
| - Removing and installing rotor              | 28-30 |
| Servicing FEI ignition system (RG)           | 28-31 |
| - Settings, spark plugs                      | 28-38 |
| - Safety measures for FEI system             | 28-40 |
| - Installing distributor                     | 28-41 |
| - Checking and adjusting ignition timing     | 28-43 |
| - Checking FEI system                        | 28-45 |
| - Checking Hall sender                       | 28-49 |
| - Checking TCI-H switch unit                 | 28-50 |
|  |       |
|  |       |
|  |       |
|  |       |