

I N D E X

01 Self-Diagnosis, Electrical check	Page
Electrical check	01-1
- Test table KE Jetronic	01-3
o Engine code letters: GX	01-3
o Engine code letters: HT, RD	01-5
- Test table FEI ignition system (Engine code letters: HT, RD)	01-7
25 Fuel system	Page
Servicing KE Jetronic injection system	25-1
- Technical data	25-20
- Safety measures	25-24
- Rules for cleanliness	25-26
- Idling adjustment	25-27
o Engine code letters: GX	25-27
o Engine code letters: HT, RD	25-36
- Checking Lambda control	25-47
- Checking idle speed boost (Engine code letters: GX)	25-49
- Checking idle stabilization (Engine code letters: HT, RD)	25-51
- Checking and adjusting idle and full throttle switches (HT, GX)	25-54
- Checking cold acceleration enrichment	25-57
- Checking re-start and warm-up enrichment	25-58
- Checking full throttle enrichment (HT, RD)	25-59
- Checking overrun cut-off (HT, RD)	25-60
- Checking adjusting lever and control plunger	25-61
- Checking/adjusting rest position and free travel of air flow meter plate	25-62
- Removing and installing control plunger	25-65
- Checking cold start valve and thermotime switch	25-66
- Checking auxiliary air valve (GX)	25-69
- Checking and adjusting potentiometer	25-71
- Checking system, differential and holding pressures	25-73
- Comparing injection delivery	25-79
- Basic throttle valve setting	25-83
28 Ignition system	Page
Servicing ignition system	28-1
Servicing TCI-H ignition system (GX)	28-2
- Dismantling and assembling distributor	28-5
- Settings, spark plugs	28-8
- Distributor data	28-10
- Safety measures for TCI-H system	28-11
- Installing distributor	28-12
- Checking and adjusting ignition timing	28-14
- Checking spark control	28-16
- Checking TCI-H switch unit and Hall sender	28-22
- Removing and installing rotor	28-27
Servicing FEI ignition system (HT, RD)	28-29
- Settings, spark plugs	28-36
- Safety measures for FEI ignition system	28-38
- Installing distributor	28-39
- Checking and adjusting ignition timing	28-41
- Checking FEI ignition system	28-43
- Checking Hall sender	28-47
- Checking TCI-H switch unit	28-48