23	Fuel processing, fuel injection	Page
	Servicing fuel injection system	23- 1
	Rules for cleanliness when working on fuel injection system	23- 7
	Removing and installing injection pump	23- 8
	Checking and adjusting static injection pump timing	23–13
	<ul> <li>Load-dependent injection pump timing</li> </ul>	23–18
	- Checking engine timing	23–19
	<ul> <li>Sealing connection fitting of injection pump</li> </ul>	23–21
	<ul> <li>Adjusting idling and maximum engine speed (unloaded)</li> </ul>	23–22
_	<ul> <li>Injection pump with idle speed boost</li> </ul>	23–26
	- Altitude pressure compensator	23–32
	<ul> <li>Removing and installing injectors</li> </ul>	23–34
	- Servicing injectors	23–36
	Checking injectors for undamaged pintle, ejection pressure and leaks	23–38
	<ul> <li>Fuel filter preheating</li> </ul>	23–41
	- Retrofitting fuel filter preheating	23–42
	Servicing Bosch fuel injection pump	23–45
	- Injection pump with load shock absorber	23–49
	Replacing return spring for control lever of injection pump	23–51
	Removing and installing control lever or return spring	23–53
23	Fuel processing, fuel injection	Page
	Replacing control lever bearing bush in pump cover, pump cover gasket and	
	O-ring for control lever	23–57
	Replacing O-ring for fuel delivery adjusting screw	23–62
	- Replacing O-ring of idle speed boost shaft	23–63
	- Replacing O-ring on injection timing cover	23–64
	- Replacing sealing or O-ring for CSA lever/cover	23–65
28	Glow plug system	Page
	Checking glow plug system	28- 1
	Testing current consumption of glow plugs	28- 1
	- Testing glow plugs	28- 2
	Glow plugs with burnt electrodes	28- 4
· -		