



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification of gearbox</b>	<b>1</b>
1.1 Location on gearbox	1
1.2 Identification code, assembly allocation and capacities	2
<b>2 Overview - power transmission</b>	<b>6</b>
<b>3 Calculating overall gear ratio "i"</b>	<b>8</b>
<b>4 General repair instructions</b>	<b>9</b>
4.1 Components	9
<b>5 Safety precautions</b>	<b>13</b>
5.1 Safety precautions for vehicles with a start-stop system	13
<b>30 - Clutch</b>	<b>14</b>
<b>1 Repairing clutch mechanism</b>	<b>14</b>
1.1 Overview	14
1.2 Assembly overview - pedal cluster	15
1.3 Removing and installing over-centre spring	16
1.4 Removing and installing clutch pedal	21
1.5 Removing and installing mounting bracket	26
1.6 Removing and installing clutch master cylinder	32
1.7 Removing and installing clutch position sender G476	34
1.8 Assembly overview - hydraulics (LHD)	37
1.9 Assembly overview - hydraulics (RHD)	40
1.10 Removing and installing clutch slave cylinder	41
1.11 Bleeding clutch system	44
<b>2 Repairing clutch release mechanism</b>	<b>46</b>
<b>3 Repairing clutch, in conjunction with dual-mass flywheel</b>	<b>48</b>
3.1 Determining clutch manufacturer	48
3.2 Removing and installing Sachs clutch	50
3.3 Repairing Sachs clutch	51
3.4 Removing and installing LuK clutch	52
3.5 Repairing LuK clutch	54
<b>4 Repairing clutch, in conjunction with one-piece flywheel</b>	<b>56</b>
<b>34 - Controls, housing</b>	<b>59</b>
<b>1 Repairing selector mechanism</b>	<b>59</b>
1.1 Installation position of selector mechanism	59
1.2 Overview of selector mechanism	60
1.3 Removing and installing gear knob and cover	61
1.4 Removing and installing gaiter with gear knob and noise insulation	62
1.5 Repairing gear lever and selector housing (through 10.06)	63
1.6 Repairing gear lever and selector housing (from 11.06)	66
1.7 Assembly overview - removing and installing selector cables	72
1.8 Plastic relay lever	76
1.9 Removing and installing selector mechanism	79
1.10 Removing and installing gear selector cable and gate selector cable	82
1.11 Adjusting selector mechanism	84
<b>2 Removing and installing gearbox, Jetta 2005 ▶ , Bora 2006 ▶ , Golf Variant 2007 ▶ , Bora Sportwagen 2008 ▶ , Golf Variant 2010 ▶</b>	<b>87</b>
2.1 Removing gearbox	89
2.2 Install gearbox	96
<b>3 Removing and installing gearbox, Jetta 2011 ▶</b>	<b>103</b>
3.1 Removing gearbox, Jetta 2011 with 2.0 l - 85 kW engine	103



3.2	Installing gearbox, Jetta 2011 with 2.0 l - 85 kW engine	113
3.3	Removing gearbox, Jetta 2011 with 2.5 l - 125 kW engine	120
3.4	Installing gearbox, Jetta 2011 with 2.5 l - 125 kW engine	131
3.5	Removing gearbox, Jetta 2011 with 1.8 l - 125 kW engine	138
3.6	Installing gearbox, Jetta 2011 with 1.8 l - 125 kW engine	151
3.7	Removing gearbox, Jetta 2011 with turbo diesel engine	160
3.8	Installing gearbox, Jetta 2011 with turbo diesel engine	170
<b>4</b>	<b>Assembly mountings</b>	<b>178</b>
4.1	Assembly overview - assembly mountings	178
<b>5</b>	<b>Transporting gearbox</b>	<b>180</b>
<b>6</b>	<b>Checking and topping up gear oil</b>	<b>181</b>
6.1	Preparing	181
6.2	Drain gear oil	182
6.3	Fill with gear oil	183
<b>7</b>	<b>Dismantling and assembling gearbox</b>	<b>184</b>
7.1	Overview - gearbox	184
7.2	Assembly overview	185
7.3	Removing and installing cover for gearbox housing and 5th gear	186
7.4	Removing and installing gearbox housing and selector mechanism	187
7.5	Removing and installing input shaft, output shaft, differential and selector forks	189
7.6	Assembly sequence - removing and installing cover for gearbox housing and 5th gear	190
7.7	Assembly sequence - Dismantling and assembling gearbox completely	196
<b>8</b>	<b>Repairing gearbox housing and clutch housing</b>	<b>211</b>
<b>9</b>	<b>Repairing selector unit</b>	<b>217</b>
<b>10</b>	<b>Dismantling and assembling selector forks</b>	<b>220</b>
<b>35 - Gears, shafts</b>		<b>225</b>
<b>1</b>	<b>Input shaft</b>	<b>225</b>
1.1	Dismantling and assembling input shaft	225
1.2	Adjusting input shaft	233
1.3	Renewing input shaft seal	237
<b>2</b>	<b>Output shaft</b>	<b>240</b>
2.1	Dismantling and assembling output shaft	240
2.2	Adjusting output shaft	253
<b>3</b>	<b>Reverse shaft</b>	<b>258</b>
3.1	Dismantling and assembling reverse shaft	258
<b>39 - Final drive - differential</b>		<b>261</b>
<b>1</b>	<b>Oil seals</b>	<b>261</b>
1.1	Overview of fitting locations - seals	261
1.2	Renewing oil seal for left flange shaft	261
1.3	Distinguishing seals for right flange shaft	263
1.4	Renewing seal (two-part seal and sleeve for right flange shaft)	264
1.5	Renewing seal and sleeve together (one-piece seal and sleeve for right flange shaft)	266
<b>2</b>	<b>Adjustment overview</b>	<b>270</b>
<b>3</b>	<b>Differential</b>	<b>271</b>
3.1	Dismantling and assembling differential	271
3.2	Adjusting differential	279