



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Location on gearbox	1
1.2 Identification code, assembly allocation and capacities	1
2 Overview - power transmission	4
3 Calculating overall gear ratio "i"	6
4 General repair notes	7
4.1 Components	7
30 - Clutch	11
1 Fault finding, power transmission	11
2 Repairing clutch mechanism	12
2.1 Overview	12
2.2 Assembly overview - pedal cluster	13
2.3 Removing and installing over-centre spring	14
2.4 Removing and installing clutch pedal	19
2.5 Removing and installing mounting bracket	25
2.6 Removing and installing clutch master cylinder	31
2.7 Removing and installing clutch position sender G476	33
2.8 Assembly overview - hydraulics (LHD)	36
2.9 Assembly overview - hydraulics (RHD)	39
2.10 Removing and installing clutch slave cylinder	40
2.11 Bleeding clutch mechanism	43
3 Repairing clutch release mechanism	45
4 Repairing clutch, in conjunction with dual-mass flywheel	47
4.1 Determining clutch manufacturer	47
4.2 Removing and installing "Sachs" clutch	49
4.3 Repairing "Sachs" clutch	50
4.4 Removing and installing "LuK" clutch	51
4.5 Repairing "LuK" clutch	53
5 Repairing clutch, in conjunction with one-piece flywheel	55
34 - Controls, housing	58
1 Repairing selector mechanism	58
1.1 Installation position of selector mechanism	58
1.2 Overview of selector mechanism	59
1.3 Assembly overview - gear lever knob and cover	60
1.4 Removing and installing gaiter with gear knob and noise insulation	61
1.5 Assembly overview - selector lever and selector housing (up to 10.06)	62
1.6 Assembly overview - selector lever and selector housing (from 11.06)	65
1.7 Assembly overview - selector cables (cable support bracket and metal relay lever)	71
1.8 Assembly overview - selector cables (cable support bracket and plastic relay lever)	75
1.9 Removing and installing selector mechanism	80
1.10 Removing and installing gear selector cable and gate selector cable	84
1.11 Adjusting selector mechanism	86
2 Removing and installing gearbox, Jetta 2005 ►, Golf Variant 2007 ►, Golf Variant 2010 ►	90
2.1 Removing gearbox	90
2.2 Installing gearbox	97
3 Removing and installing gearbox, Jetta 2011 ►	105
3.1 Removing gearbox	105
3.2 Installing gearbox	116



4	Transporting gearbox	125
5	Checking and topping up gear oil	126
5.1	Preparation	126
5.2	Draining gear oil	127
5.3	Filling with gear oil	128
6	Dismantling and assembling gearbox	129
6.1	Overview - gearbox	129
6.2	Assembly overview - dismantling and assembling gearbox	130
6.3	Assembly overview - Removing and installing cover for gearbox housing and 5th and 6th gears	131
6.4	Assembly overview - removing and installing gearbox housing and selector mechanism ..	134
6.5	Assembly overview - removing and installing input shaft, output shaft, differential and selector forks	135
6.6	Assembly sequence - Removing and installing cover for gearbox housing and 5th and 6th gear	136
6.7	Assembly sequence - Dismantling and assembling gearbox completely	142
7	Repairing gearbox housing and clutch housing	163
8	Repairing gearbox housing cover	170
9	Repairing selector unit	174
10	Selector forks	177
10.1	Assembly overview - selector forks in connection with reverse synchromeshed gear arrow	177
10.2	Assembly overview - selector forks in connection with reverse gear locking collar arrow	179
10.3	Repairing selector forks	180
35 - Gears, shafts	184	
1	Input shaft	184
1.1	Dismantling and assembling input shaft	184
1.2	Adjusting input shaft	193
2	Output shaft	198
2.1	Dismantling and assembling output shaft	198
2.2	Adjusting output shaft	211
3	Reverse shaft	216
3.1	Assembly overview - reverse shaft with reverse synchromeshed gear arrow	216
3.2	Assembly overview - reverse shaft with reverse gear locking collar arrow	217
3.3	Dismantling and assembling reverse shaft	219
39 - Final drive - differential	222	
1	Renewing flange shaft oil seals with gearbox installed	222
1.1	Renewing oil seal for left flange shaft with gearbox installed	222
1.2	Distinguishing seals for right flange shaft	224
1.3	Renewing right seal with gearbox installed (two-part seal for flange shaft and sleeve)	224
1.4	Renewing right seal and sleeve together with gearbox installed (one-piece seal and sleeve for flange shaft)	227
2	Adjustment overview	230
3	Differential	231
3.1	Dismantling and assembling differential	231
3.2	Adjusting differential	239