



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing engine - Jetta up to MY 2010 and Golf Variant	3
1.2 Removing engine - Jetta from MY 2011	8
1.3 Securing engine to assembly stand	15
1.4 Installing engine - Jetta up to MY 2010 and Golf Variant	18
1.5 Installing engine - Jetta from MY 2011	19
1.6 Assembly mountings- specified torques	21
13 - Crankshaft group	22
1 Dismantling and assembling engine	22
1.1 Assembly overview - add-on parts	22
1.2 Assembly overview - chain drive	36
1.3 Removing and installing poly V-belt	40
1.4 Removing and installing exhauster pump for brake servo	43
2 Sealing flange and flywheel or drive plate	46
2.1 Assembly overview	46
2.2 Renewing crankshaft sealing flange - belt pulley end	47
2.3 Removing and installing valve timing housing	50
2.4 Removing and installing seal on gearbox side	53
2.5 Removing and installing drive plate	54
3 Crankshaft	56
3.1 Assembly overview - crankshaft	56
3.2 Crankshaft dimensions	57
3.3 Locking crankshaft	58
4 Pistons and conrods	62
4.1 Assembly overview - pistons and conrods	62
4.2 Separating new conrod	63
4.3 Checking pistons, piston rings and cylinder bores	64
4.4 Piston and cylinder dimensions	66
15 - Cylinder head, valve gear	67
1 Cylinder head	67
1.1 Assembly overview	67
1.2 Removing and installing cylinder head cover	69
1.3 Removing and installing chain guard cover	70
1.4 Renewing chain guard cover seal	74
1.5 Checking valve timing	76
1.6 Adjusting valve timing	77
1.7 Removing and installing cylinder head	81
1.8 Checking compression	86
2 Valve gear	88
2.1 Assembly overview - valve gear	88
2.2 Valve dimensions	90
2.3 Checking valve guides	90
2.4 Renewing valve stem seals	91
2.5 Removing and installing camshafts	94



17 - Lubrication	99
1 Parts of lubrication system	99
1.1 Engine oil	99
1.2 Assembly overview - parts of lubrication system - Jetta up to MY 2010 and Golf Variant	100
1.3 Assembly overview - parts of lubrication system - Jetta from MY 2011	102
1.4 Oil filter bracket with attachments - Assembly overview - Jetta up to MY 2010 and Golf Variant	104
1.5 Oil filter bracket with attachments - Assembly overview - Jetta from MY 2011	105
1.6 Draining oil filter housing	107
1.7 Removing and installing lower part of sump	107
1.8 Removing and installing upper part of sump	109
1.9 Removing and installing oil pump, engine codes BGP, BGQ and BTK	112
1.10 Removing and installing oil pump, engine codes CBTA, CBUA and CCCA	115
1.11 Checking oil pressure and oil pressure switch - Jetta up to MY 2010 and Golf Variant	119
19 - Cooling	122
1 Cooling system components - Jetta up to MY 2010 and Golf Variant	122
1.1 Assembly overview - parts of cooling system, engine side	123
1.2 Assembly overview - parts of cooling system, body side	126
1.3 Coolant hose schematic diagram	127
1.4 Draining and filling coolant	129
1.5 Removing and installing coolant pump	132
1.6 Removing and installing thermostat	136
1.7 Removing and installing radiator fan V7 and radiator fan 2 V177	138
1.8 Removing and installing radiator	139
1.9 Checking cooling system for leaks	141
2 Cooling system components - Jetta from MY 2011	144
2.1 Assembly overview - parts of cooling system, engine side	145
2.2 Assembly overview - parts of cooling system, body side	148
2.3 Coolant hose schematic diagram	149
2.4 Assembly overview - engine preheater	150
2.5 Draining and filling coolant	151
2.6 Removing and installing coolant pump	154
2.7 Removing and installing thermostat	158
2.8 Removing and installing radiator fan V7 and radiator fan 2 V177	160
2.9 Removing and installing radiator	161
2.10 Checking cooling system for leaks	162
20 - Fuel supply system	165
1 Parts of fuel supply system	165
1.1 Safety precautions when working on fuel supply system	165
1.2 Rules for cleanliness	166
1.3 Assembly overview - fuel tank, engine codes BGP, BGQ, CBTA, CBUA	166
1.4 Assembly overview - fuel tank, engine codes BTK, CCCA	169
1.5 Emptying fuel tank	171
1.6 Removing and installing fuel delivery unit	176
1.7 Removing and installing fuel gauge sender G	178
1.8 Removing and installing fuel tank - Jetta up to MY 2010 and Golf Variant	180
1.9 Removing and installing fuel tank - Jetta from MY 2011	183
1.10 Assembly overview - fuel filter with attachments	187
1.11 Removing and installing fuel filter	188
1.12 Checking fuel pump	189
1.13 Bleeding fuel system	197
2 Electronic power control (EPC)	200
2.1 Function of EPC system	200



2.2	Assembly overview - accelerator module	200
2.3	Removing and installing accelerator module	201
3	Activated charcoal filter system - Jetta up to MY 2010 and Golf Variant with engine codes BGP, BGQ, CBTA, CBUA	205
3.1	Function	205
3.2	Overview of activated charcoal filter system - vehicles to MY 2009	205
3.3	Overview of activated charcoal filter system - vehicles from MY 2010	207
3.4	Assembly overview: activated charcoal filter system	208
3.5	Removing and installing activated charcoal filter	209
3.6	Removing and installing fuel system diagnostic pump V144	210
3.7	Checking fuel system for leaks	210
4	Activated charcoal filter system - Jetta from MY 2011 with engine code CBTA, CBUA	219
4.1	Function	219
4.2	Overview of activated charcoal filter system	219
4.3	Assembly overview: activated charcoal filter system	221
4.4	Removing and installing activated charcoal filter	222
4.5	Removing and installing fuel system diagnostic pump V144	222
4.6	Checking fuel system for leaks	223
5	Activated charcoal filter system, engine codes BTK, CCCA	230
5.1	Function	230
5.2	Assembly overview - activated charcoal filter system	230
5.3	Checking fuel tank breather	231
24 - Mixture preparation - injection	234
1	Injection system	234
1.1	General notes on injection	234
1.2	Safety precautions	235
1.3	Rules for cleanliness	236
1.4	Technical data	236
1.5	Overview of fitting locations	237
1.6	Assembly overview - intake manifold with attachments, engine codes BGP and BGQ	240
1.7	Assembly overview - intake manifold with attachments, Jetta up to MY 2010 and Golf Variant with engine codes CBTA and CBUA	241
1.8	Assembly overview - intake manifold with attachments, Jetta up to MY 2010 and Golf Variant with engine codes BTK and CCCA	242
1.9	Assembly overview - intake manifold with attachments, Jetta from MY 2011	243
1.10	Assembly overview - fuel rail with injectors	244
1.11	Assembly overview - air filter	244
1.12	Removing and installing engine cover with air filter	246
1.13	Removing and installing throttle valve module J338	246
1.14	Removing and installing intake manifold	248
1.15	Removing and installing injectors	252
2	Checking components	254
2.1	Checking injectors for leaks and quantity injected	254
2.2	Checking fuel pressure regulator and holding pressure	257
3	Engine control unit	260
3.1	Reading and erasing engine control unit fault memory	260
3.2	Removing and installing engine control unit - up to 10.2008	261
3.3	Removing and installing engine control unit - from 11.2008 for Jetta up to MY 2010 and Golf Variant	264
3.4	Removing and installing engine control unit - Jetta from MY 2011	268
26 - Exhaust system	271
1	Parts of the exhaust system	271
1.1	Assembly overview - exhaust manifold with attachments, Jetta up to MY 2010 and Golf Variant	273



1.2	Assembly overview - exhaust manifold with attachments, Jetta from MY 2011	274
1.3	Assembly overview - front exhaust pipe with catalytic converter and attachments, engine codes BGP, BTK, CBTA, CCCA	275
1.4	Assembly overview - front exhaust pipe with catalytic converter and attachments, engine codes BGQ, CBUA and Jetta from MY 2011 with CCCA and automatic gearbox	277
1.5	Assembly overview - silencers with mountings	279
1.6	Removing and installing front exhaust pipe with catalytic converter	279
1.7	Separating and joining centre and rear silencers	281
1.8	Aligning exhaust system free of stress	282
2	Secondary air system	284
2.1	Function	284
2.2	Assembly overview - secondary air system	284
2.3	Removing and installing secondary air pump motor V101	286
2.4	Checking secondary air inlet valve N112	286
28	- Ignition system	288
1	Ignition system	288
1.1	General notes on ignition system	288
1.2	Safety precautions	288
1.3	Assembly overview - ignition system	288
1.4	Removing and installing ignition coils with output stage	290
1.5	Test data, spark plugs	291