



Contents

| | |
|---|------------|
| 27 - Starter, current supply, CCS | 1 |
| 1 Battery | 1 |
| 1.1 Types of battery | 1 |
| 1.2 Battery - general notes | 1 |
| 1.3 Assembly overview - battery | 2 |
| 1.4 Removing and installing battery | 4 |
| 1.5 Disconnecting and reconnecting battery | 7 |
| 1.6 Removing and installing battery tray | 11 |
| 1.7 Checking battery | 12 |
| 1.8 Charging battery | 12 |
| 1.9 Removing and installing earth wire with battery monitor control unit J367 | 12 |
| 2 Alternator | 16 |
| 2.1 Assembly overview - alternator | 16 |
| 2.2 Removing and installing alternator | 26 |
| 2.3 Checking alternator | 49 |
| 2.4 Checking poly V-belt | 49 |
| 2.5 Removing and installing poly V-belt pulley | 49 |
| 2.6 Removing and installing voltage regulator | 55 |
| 3 Starter | 58 |
| 3.1 Assembly overview - starter | 58 |
| 3.2 Removing and installing starter | 61 |
| 3.3 Checking starter | 102 |
| 4 Cruise control system (CCS) | 103 |
| 5 Start/Stop system | 104 |
| 5.1 Safety precautions when working on vehicles with start/stop system | 104 |
| 5.2 General description - start/stop system | 104 |
| 5.3 Removing and installing voltage stabiliser | 106 |
| 90 - Gauges, instruments | 108 |
| 1 Dash panel insert | 108 |
| 1.1 Assembly overview - dash panel insert | 108 |
| 1.2 Removing and installing dash panel insert | 113 |
| 1.3 Multi-pin connector pin assignment on dash panel insert | 114 |
| 1.4 Removing and installing ambient temperature sensor G17 | 114 |
| 2 Horn | 116 |
| 2.1 Assembly overview - horn | 116 |
| 2.2 Removing and installing horn | 116 |
| 92 - Windscreen wash/wipe system | 118 |
| 1 Windscreen wiper system | 118 |
| 1.1 Assembly overview - windscreen wiper system | 118 |
| 1.2 Moving wipers to service position | 119 |
| 1.3 Removing and installing wiper blade | 119 |
| 1.4 Removing and installing windscreen wiper arms | 120 |
| 1.5 Adjusting windscreen wiper arms | 121 |
| 1.6 Removing and installing windscreen wiper motor V | 123 |
| 1.7 Removing and installing rain and light sensor G397 | 125 |
| 2 Windscreen washer system | 129 |
| 2.1 Assembly overview - windscreen washer system | 129 |
| 2.2 Removing and installing washer fluid reservoir | 130 |
| 2.3 Removing and installing windscreen washer fluid level sender G33 | 131 |
| 2.4 Removing and installing windscreen washer pump V5 | 132 |



| | | |
|-----------|---|------------|
| 2.5 | Removing and installing washer jets | 133 |
| 2.6 | Adjusting spray jets | 133 |
| 3 | Headlight washer system | 134 |
| 3.1 | Assembly overview - headlight washer system | 134 |
| 3.2 | Removing and installing headlight washer system pump V11 | 134 |
| 3.3 | Removing and installing washer jets | 135 |
| 3.4 | Adjusting spray jets | 136 |
| 3.5 | Removing and installing pop-up cylinder | 136 |
| 4 | Washer fluid lines | 138 |
| 4.1 | Repairing washer fluid lines | 138 |
| 94 | Lights, bulbs, switches - exterior | 139 |
| 1 | Headlight | 139 |
| 1.1 | Operation and safety notes for gas discharge bulbs | 139 |
| 1.2 | Assembly overview - headlight | 142 |
| 1.3 | Removing and installing headlight | 146 |
| 1.4 | Adjusting headlights | 147 |
| 1.5 | Adjusting headlight installation position | 148 |
| 1.6 | Removing and installing front turn signal bulb | 149 |
| 1.7 | Installing repair kit for headlight housing | 151 |
| 1.8 | Changing headlights over from driving on right to driving on left | 155 |
| 1.9 | Changing headlights over from driving on left to driving on right | 156 |
| 1.10 | Removing and installing headlight range control actuator | 157 |
| 1.11 | Renewing headlight dipped beam bulb | 159 |
| 1.12 | Renewing headlight main beam bulb | 159 |
| 1.13 | Removing and installing gas discharge bulb | 160 |
| 1.14 | Removing and installing bulb for daytime running light/side light | 162 |
| 1.15 | Removing and installing daytime running light | 164 |
| 1.16 | Removing and installing headlight screen adjustment solenoid | 165 |
| 1.17 | Removing and installing swivel module position sensor | 165 |
| 1.18 | Removing and installing static cornering light bulb | 166 |
| 1.19 | Removing and installing gas discharge bulb control unit | 167 |
| 1.20 | Removing and installing power output module for headlight | 168 |
| 2 | Fog lights | 170 |
| 2.1 | Assembly overview - fog lights | 170 |
| 2.2 | Removing and installing fog light | 171 |
| 2.3 | Removing and installing fog light bulb | 173 |
| 2.4 | Adjusting fog lights | 174 |
| 3 | Side marker light | 175 |
| 3.1 | Removing and installing side marker light bulb | 175 |
| 4 | Lights in exterior mirror | 177 |
| 4.1 | Assembly overview - lights in exterior mirror | 177 |
| 4.2 | Removing and installing turn signal repeater bulb | 177 |
| 4.3 | Removing and installing entry light in exterior mirror | 178 |
| 5 | Tail lights | 179 |
| 5.1 | Assembly overview - tail lights in body | 179 |
| 5.2 | Assembly overview - tail lights in rear lid | 182 |
| 5.3 | Removing and installing bulb carrier | 183 |
| 5.4 | Removing and installing tail light in rear lid | 184 |
| 5.5 | Removing and installing tail light in body | 185 |
| 5.6 | Removing and installing tail light bulb | 185 |
| 5.7 | Removing and installing rear fog light bulb | 186 |
| 5.8 | Removing and installing bulb for brake light and tail light | 186 |
| 5.9 | Removing and installing reversing light bulb | 187 |
| 5.10 | Removing and installing turn signal bulb | 188 |



| | | |
|-----------|---|------------|
| 6 | High-level brake light | 190 |
| 6.1 | Assembly overview - high-level brake light | 190 |
| 6.2 | Removing and installing high-level brake light | 190 |
| 6.3 | Removing and installing high-level brake light bulb M25 | 191 |
| 7 | Number plate light | 192 |
| 7.1 | Removing and installing number plate light | 192 |
| 8 | Entry and start authorisation | 193 |
| 8.1 | Assembly overview - entry and start authorisation system | 193 |
| 8.2 | Removing and installing entry and start authorisation control unit J518 | 195 |
| 8.3 | Removing and installing interior aerial for entry and start authorisation | 198 |
| 8.4 | Removing and installing front passenger side aerial for entry and start authorisation | 199 |
| 8.5 | Removing and installing driver side aerial for entry and start authorisation | 199 |
| 8.6 | Removing and installing luggage compartment aerial for entry and start authorisation R137 | 200 |
| 8.7 | Removing and installing rear bumper aerial for entry and start authorisation R136 | 200 |
| 8.8 | Checking entry and start system aerials and sensors | 201 |
| 8.9 | Removing and installing entry and start authorisation switch | 204 |
| 9 | Steering column switch module | 205 |
| 9.1 | Assembly overview - steering column switch module | 205 |
| 9.2 | Removing and installing steering column electronics control unit J527 | 209 |
| 9.3 | Removing and installing steering column combination switch E595 | 212 |
| 9.4 | Removing and installing steering column switch base | 221 |
| 9.5 | Removing and installing electronic steering column lock control unit J764 | 229 |
| 9.6 | Removing and installing ignition/starter switch D | 231 |
| 9.7 | Removing and installing ignition key withdrawal lock solenoid N376 | 234 |
| 10 | Parking aid | 236 |
| 10.1 | Assembly overview - parking aid | 236 |
| 10.2 | Removing and installing parking aid control unit J446 | 239 |
| 10.3 | Removing and installing front parking aid warning buzzer H22 | 241 |
| 10.4 | Removing and installing rear parking aid warning buzzer H15 | 243 |
| 10.5 | Removing and installing front parking aid senders | 244 |
| 10.6 | Removing and installing rear parking aid senders | 248 |
| 11 | Main beam assist | 253 |
| 11.1 | Overview - main beam assist | 253 |
| 11.2 | Overview of fitting locations - main beam assist | 253 |
| 11.3 | Removing and installing main beam assist control unit J844 | 254 |
| 11.4 | Renewing main beam assist control unit J844 | 255 |
| 11.5 | Coding main beam assist control unit J844 | 255 |
| 11.6 | Removing and installing light sensor G399 | 255 |
| 12 | Automatic headlight range control | 257 |
| 12.1 | Assembly overview - automatic headlight range control | 257 |
| 12.2 | Removing and installing cornering light and headlight range control unit J745 | 258 |
| 13 | Towing bracket | 260 |
| 13.1 | Assembly overview - towing bracket socket | 260 |
| 13.2 | Removing and installing trailer detector control unit J345 | 260 |
| 13.3 | Removing and installing trailer socket U10 | 261 |
| 96 | Lights, bulbs, switches - interior | 263 |
| 1 | Lights | 263 |
| 1.1 | Overview of fitting locations - lights in dash panel | 263 |
| 1.2 | Overview of fitting locations - lights in luggage compartment | 265 |
| 1.3 | Overview of fitting locations - lights in roof trim | 266 |
| 1.4 | Removing and installing glove compartment light W6 | 266 |
| 1.5 | Removing and installing central locking SAFELOCK function warning lamp K133 | 268 |
| 1.6 | Removing and installing luggage compartment light W3 | 269 |



| | | |
|----------|--|------------|
| 1.7 | Removing and installing illuminated vanity mirrors | 270 |
| 1.8 | Renewing bulb of front interior light W1 | 271 |
| 1.9 | Removing and installing centre reading lights | 273 |
| 1.10 | Replacing bulb of rear interior light W43 | 273 |
| 2 | Controls | 276 |
| 2.1 | Overview of fitting locations - controls in dash panel | 277 |
| 2.2 | Overview of fitting locations - controls in front doors | 278 |
| 2.3 | Fitting locations overview - controls in rear doors | 279 |
| 2.4 | Fitting locations overview - controls in centre console | 280 |
| 2.5 | Fitting locations overview - controls in roof trim | 281 |
| 2.6 | Removing and installing light switch E1 | 281 |
| 2.7 | Removing and installing regulator for switch and instrument illumination E20 | 283 |
| 2.8 | Removing and installing key-operated switch to deactivate front passenger side airbag E224 | 284 |
| 2.9 | Removing and installing tyre pressure monitor display button E492 | 285 |
| 2.10 | Removing and installing rear central switch for interior locking E286 | 285 |
| 2.11 | Removing and installing driver side interior locking button for central locking system E308 | 286 |
| 2.12 | Removing and installing front passenger side interior locking button for central locking system E309 | 287 |
| 2.13 | Removing and installing remote release button for fuel filler flap and rear lid E463 | 288 |
| 2.14 | Removing and installing start/stop operating mode switch E693 | 289 |
| 2.15 | Removing and installing TCS and ESP button E256 | 290 |
| 2.16 | Removing and installing parking aid button E266 | 291 |
| 2.17 | Removing and installing the starter button E378 | 293 |
| 2.18 | Removing and installing button for electric drive E656 , high-voltage vehicle | 294 |
| 2.19 | Removing and installing warning lamp for airbag deactivated on front passenger side K145 | 295 |
| 2.20 | Removing and installing hazard warning light button E229 | 296 |
| 2.21 | Removing and installing glove compartment light switch E26 | 297 |
| 2.22 | Removing and installing mirror adjustment switch E43 | 297 |
| 2.23 | Removing and installing operating unit for window regulator in driver door E512 | 298 |
| 2.24 | Removing and installing window regulator switch in front passenger door E107 | 299 |
| 2.25 | Removing and installing interior monitoring deactivation switch E267 | 301 |
| 2.26 | Removing and installing rear window regulator switch in door | 302 |
| 2.27 | Removing and installing rear lid contact switch | 303 |
| 2.28 | Removing and installing button 1 for tilting roof E582 | 303 |
| 2.29 | Removing and installing front interior light/reading light | 304 |
| 2.30 | Removing and installing rear interior light/reading light | 306 |
| 2.31 | Removing and installing garage door operating unit E284 | 307 |
| 3 | Immobiliser | 309 |
| 3.1 | Overview - immobiliser | 309 |
| 3.2 | Immobiliser control unit J362 | 310 |
| 3.3 | Immobiliser reader coil D2 | 311 |
| 3.4 | Ignition key | 311 |
| 4 | Anti-theft alarm system | 313 |
| 4.1 | Assembly overview - interior monitor | 313 |
| 4.2 | Activating and deactivating anti-theft alarm system | 314 |
| 4.3 | Central locking and anti-theft alarm system aerial R47 | 315 |
| 4.4 | Removing and installing alarm horn H12 | 315 |
| 4.5 | Removing and installing interior monitoring sensor G273 | 316 |
| 4.6 | Removing and installing bonnet contact switch F266 | 316 |
| 4.7 | Adaptations of anti-theft alarm system | 316 |
| 5 | Cigarette lighter, socket | 318 |
| 5.1 | Removing and installing AC/DC converter with socket | 318 |



| | |
|--|------------|
| 97 - Wiring | 321 |
| 1 Relay carriers, fuse holders, electronics boxes | 321 |
| 1.1 Fitting locations overview - relay carriers, fuse holders, electronics boxes | 321 |
| 1.2 Removing and installing electronics box (E-box) | 322 |
| 1.3 Removing and installing relay and fuse holder in electronics box | 323 |
| 1.4 Removing and installing relay and fuse holder behind dash panel on driver side | 324 |
| 1.5 Removing and installing fuse holder on battery A , high-voltage vehicle | 326 |
| 2 Control units | 327 |
| 2.1 Fitting locations overview - control units | 327 |
| 2.2 Removing and installing onboard supply control unit J519 | 328 |
| 2.3 Removing and installing data bus diagnostic interface J533 | 335 |
| 2.4 Removing and installing garage door operation control unit J530 | 338 |
| 3 Connectors | 339 |
| 3.1 Separating left door connector | 339 |
| 3.2 Separating right door connector | 340 |
| 3.3 Repairing electrical wiring harnesses and plug-in connections | 340 |
| 4 Vehicle diagnostic, testing and information systems | 341 |