



## Contents

|   |           |
|---|-----------|
| <b>93 - Electric drive systems</b> .....  | <b>1</b>  |
| <b>1 General warnings for working on high-voltage system</b> .....                            | <b>1</b>  |
| 1.1 General warnings for working on high-voltage system .....                                 | 1         |
| 1.2 Warning stickers .....  | 5         |
| <b>2 Overview of fitting locations - high-voltage components</b> .....                        | <b>7</b>  |
| <b>3 Description of high-voltage system</b> .....   | <b>9</b>  |
| 3.1 Operating modes for high-voltage vehicle .....  | 9         |
| 3.2 Maintenance connector for high-voltage system -TW- .....                                  | 10        |
| <b>4 High-voltage battery unit</b> .....  | <b>12</b> |
| 4.1 General description - high-voltage battery unit .....                                     | 12        |
| 4.2 Assembly overview - high-voltage battery .....  | 12        |
| 4.3 Removing and installing high-voltage battery .....  | 15        |
| 4.4 Removing and installing battery regulation control unit .....                             | 24        |
| 4.5 Renewing battery regulation control unit .....  | 31        |
| 4.6 Removing and installing battery fan .....   | 32        |
| 4.7 Removing and installing air supply ducts for battery fan .....                            | 33        |
| 4.8 Charging high-voltage battery .....   | 37        |
| <b>5 Power and control electronics for electric drive</b> .....                               | <b>39</b> |
| 5.1 General description - power and control electronics for electric drive .....              | 39        |
| 5.2 Fitting locations overview - power and control electronics for electric drive .....       | 40        |
| 5.3 Removing and installing power and control electronics for electric drive .....            | 42        |
| 5.4 Renewing power and control electronics for electric drive .....                           | 48        |
| <b>6 Electric drive motor</b> .....   | <b>50</b> |
| 6.1 General description - electric drive motor .....  | 50        |
| 6.2 Removing and installing electric drive motor .....  | 50        |
| <b>7 High-voltage cables</b> .....  | <b>52</b> |
| 7.1 General description - high-voltage cables .....   | 52        |
| 7.2 Overview of fitting locations - high-voltage cables .....                                 | 53        |
| 7.3 Removing and installing high-voltage wiring harness for high-voltage battery .....        | 54        |
| 7.4 Removing and installing high-voltage wiring harness for drive motor .....                 | 58        |
| 7.5 Removing and installing high-voltage wire for electrical air conditioner compressor ..... | 61        |
| <b>8 Cooling system for high-voltage system</b> .....   | <b>64</b> |
| <b>9 De-energising the high-voltage system</b> .....  | <b>65</b> |
| <b>10 Recommissioning high-voltage system</b> .....   | <b>66</b> |
| <b>11 Potential equalisation lines</b> .....  | <b>67</b> |