



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	2
1.2 Safety measures when working with pyrotechnic components	3
1.3 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	4
1.4 Additional safety regulations for side airbag	5
1.5 Additional safety instructions for curtain airbag	5
1.6 Safety regulations for crash sensors (pressure sensors) for front side airbags	6
1.7 Additional safety instructions for repair work on seat occupied recognition for front passenger airbag deactivation - country-specific	6
1.8 Measures for seat occupied recognition for front passenger airbag deactivation following an accident - country-specific	7
1.9 Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident	7
1.10 Checking airbag securing parts after an accident	9
1.11 Accident without airbag triggering	9
1.12 Checking seat belts	10
1.13 Check belt webbing	10
1.14 Checking inertia reel (locking mechanism)	11
1.15 Visually checking belt buckle	11
1.16 Check operation of belt buckle	11
1.17 Checking belt relays, and buckle tongues	12
1.18 Checking securing parts and anchorage points after an accident	12
1.19 Checking child seat anchors after an accident	12
1.20 Safety instructions for automatic anti-dazzle interior mirror	13
2 Repair notes	14
2.1 Contact corrosion	14
2.2 Pipe/wire routing and attachment	14
68 - Interior equipment	15
1 Compartments/covers	15
1.1 Removing and installing storage compartment	15
1.2 Removing and installing steering column trim	15
1.3 Removing and installing left dash panel cover on driver side	17
1.4 Removing and installing glove compartment	18
1.5 Removing and installing glove compartment lock cylinder	20
1.6 Removing and installing decorative trim on glove compartment	21
1.7 Removing and installing spectacles holder	22
2 Equipment	24
2.1 Removing and installing sun visor	24
2.2 Removing and installing roof grab handle	25
2.3 Removing and installing roof grab handle bracket	27
3 Centre console	28
3.1 Removing and installing »Basic« centre console	28
3.2 Removing and installing »Comfort and Highline« centre console	32
3.3 Removing and installing rear trim of »Comfort and Highline« centre console	36
3.4 Removing and installing rear trim bracket of »Comfort and Highline« centre console	38
3.5 Removing and installing lid of rear storage compartment of centre console, »Comfort and Highline«	39
3.6 Removing and installing centre console securing bracket	39
4 On inside	43
4.1 Assembly overview - interior mirror	43



4.2	Removing and installing interior mirror	46
4.3	Repairing interior mirror retaining plate	52
4.4	Automatic anti-dazzle interior mirror - functional description	55
69 - Passenger protection	57
1	Seat belts	57
1.1	Assembly overview - front three-point seat belt	57
1.2	Assembly overview - rear three-point seat belt	59
1.3	Removing and installing front three-point seat belt	59
1.4	Removing and installing rear outer three-point seat belt	65
1.5	Removing and installing rear centre three-point seat belt	67
1.6	Removing and installing front belt height adjuster	70
1.7	Removing and installing front belt buckle with belt switch E24 / E25	74
1.8	Removing and installing rear double belt buckle	77
2	Child seat anchors	79
2.1	Points to check	79
2.2	Child seat anchors in rear shelf	79
3	Airbag system	80
3.1	Overview of fitting locations - airbag system	80
3.2	Adapting components	81
4	Airbag control unit	82
4.1	Assembly overview - airbag control unit	82
4.2	Removing and installing airbag control unit J234	82
5	Driver's airbag	85
5.1	Removing and installing driver side airbag igniter N95	85
6	Front passenger side airbag	89
6.1	"Advanced Airbag System" (only for USA/Canada)	89
6.2	Removing and installing front passenger airbag unit with front passenger side airbag igniter 1 N131 / N132	89
6.3	Removing and installing key-operated switch to deactivate front passenger side airbag E224	93
7	Side airbags	95
7.1	Removing and installing front side airbag with side airbag igniter N199 / N200	95
7.2	Removing and installing side airbag with rear side airbag igniter N201 / N202	97
8	Curtain airbags	100
8.1	Removing and installing curtain airbag with curtain airbag igniter N251 / N252	100
9	Airbag crash sensors	106
9.1	Removing and installing front airbag crash sensor, driver side G283 (USA)	106
9.2	Front airbag crash sensor, front passenger side G284 (USA)	108
9.3	Removing and installing side airbag crash sensor, driver side G179	109
9.4	Removing and installing side airbag crash sensor, front passenger side G180	113
9.5	Removing and installing rear side airbag crash sensor, driver side G256	113
9.6	Removing and installing rear side-airbag crash sensor, front passenger side G257	116
10	Seat belt verification	117
10.1	Removing and installing Seat occupied sensor, front passenger side G128	117
10.2	Removing and installing seat occupied sensor, front passenger side G128 , from model year 2012 ➤	121
11	Seat occupied recognition (USA)	127
11.1	Safety precautions for when working on seat occupied recognition	127
11.2	Procedure after an accident when belt tensioner and/or airbag was triggered	127
11.3	Assembly overview - front seat "Basic"	128
11.4	Assembly overview - front seat "Comfort"	130
11.5	Assembly overview - front seat "Sport"	131
11.6	Removing and installing seat occupied recognition sensor	132
11.7	Removing and installing seat occupied recognition control unit J706	142



11.8	Removing and installing bracket for seat occupied recognition control unit J706	145
11.9	Importers reporting obligation	147
70 - Trim, insulation	149
1	Door trims	149
1.1	Tools	149
1.2	Removing and installing driver door trim	150
1.3	Removing and installing front passenger door trim	154
1.4	Removing and installing front door trim bracket	158
1.5	Removing and installing rear door trim	160
1.6	Removing and installing rear door trim bracket	164
1.7	Removing and installing front inner mirror cover	166
2	Dash panel	168
2.1	Removing and installing covers on side of dash panel	168
2.2	Removing and installing dash panel insert trim, with left and middle dash panel vents	169
2.3	Removing and installing dash panel vents on right	172
2.4	Removing and installing left decorative trim panel on driver side	173
2.5	Removing and installing middle trim of dash panel (vehicles without Climatronic)	174
2.6	Removing and installing trim in middle of dash panel (vehicles with Climatronic)	175
2.7	Removing and installing dash panel	177
2.8	Deformation elements for dash panel USA	185
2.9	Aligning dash panel in vehicle	186
3	Dash panel central tube	189
3.1	Assembly overview - dash panel central tube	189
3.2	Removing and installing dash panel central tube	190
3.3	Removing and installing bracket for dash panel central tube, LHD vehicles	194
4	Interior trims	196
4.1	Removing and installing upper A-pillar trim	196
4.2	Removing and installing centre A-pillar trim	197
4.3	Removing and installing lower A-pillar trim on driver side	199
4.4	Removing and installing lower A-pillar trim on front passenger side	200
4.5	Releasing and securing upper B-pillar trim	202
4.6	Removing and installing upper B-pillar trim	204
4.7	Removing and installing lower B-pillar trim	207
4.8	Removing and installing C-pillar trim	209
4.9	Removing and installing sill panel moulding	211
4.10	Removing and installing wheel housing trim for vehicles with side airbag	213
4.11	Removing and installing wheel housing trim for vehicles without side airbag	214
4.12	Removing and installing rear shelf	216
4.13	Removing and installing rear shelf USA	218
5	Luggage compartment trims	221
5.1	Removing and installing luggage compartment floor covering	221
5.2	Removing and installing luggage compartment floor covering, hybrid vehicles	222
5.3	Removing and installing rear panel trim	223
5.4	Removing and installing high-voltage battery cover, hybrid vehicles	225
5.5	Removing and installing luggage compartment side trim	227
5.6	Removing and installing side panel trim in luggage compartment, hybrid vehicles	229
5.7	Removing and installing rear lid trim	232
6	Roof trims	235
6.1	Detaching and fastening moulded headliner	235
6.2	Removing and installing moulded headlining	238
6.3	Removing and installing insulation/roof reinforcements	243
72 - Seat frames	249
1	Front seats	249



1.1	Assembly overview - front seat	249
1.2	Assembly overview - seat pan	253
1.3	Assembly overview - seat height adjustment	255
1.4	Removing and installing front seat	255
1.5	Removing and installing backrest adjusting lever	260
1.6	Removing and installing lumbar adjustment lever	261
1.7	Removing and installing left trim on seat without height adjustment	261
1.8	Removing and installing left trim on seat with manual height adjustment	263
1.9	Removing and installing left trim on seat with electrical height adjustment	265
1.10	Removing and installing right trim on seat	268
1.11	Removing and installing front seat drawer together with mounting	269
1.12	Removing and installing front seat bar and operating lever	270
1.13	Removing and installing bar of electrically adjustable seat	271
1.14	Removing and installing head restraint guides	273
1.15	Removing and installing backrest	274
1.16	Removing and installing manually adjustable lumbar support frame	276
1.17	Removing and installing fire extinguisher holder	278
1.18	Removing and installing fire extinguisher holder on seat frame	279
1.19	Removing and installing drive for backrest adjustment (electrically adjustable seat)	280
2	Rear seats	281
2.1	Removing and installing rear bench seat	281
2.2	Removing and installing rear seat backrest	282
2.3	Removing and installing backrest release mechanism	285
2.4	Removing and installing side padding with side airbag	286
2.5	Removing head restraint guides	289
74 - Seat - padding, covers	291	
1	Front seat covers and padding	291
1.1	Removing and installing seat pan cover and padding	291
1.2	Removing and installing backrest cover and padding	297
2	Rear seat covers and padding	304
2.1	Removing and installing bench seat cover and padding	304
2.2	Removing and installing cover and padding for 1/3 backrest	308
2.3	Removing and installing cover and padding for 2/3-section of backrest	312
2.4	Removing and installing through loading unit with centre armrest	316