



Contents

50 - Body - front	1
1 Lock carrier	1
1.1 Tools	1
1.2 Lock carrier - add-on parts	1
1.3 Service position	5
1.4 Removing and installing lock carrier with attachments	8
1.5 Removing and installing pressure hoses	11
2 Wings	14
2.1 Tools	14
2.2 Assembly overview - front wing	14
2.3 Removing and installing front wing	15
2.4 Insulation and foam elements for wing and wing end plate	18
2.5 Wing end plate	18
2.6 Removing and installing wing bracket	19
3 Plenum chamber cover	21
3.1 Assembly overview - plenum chamber cover	21
3.2 Removing and installing plenum chamber covers	21
4 Underbody cladding	25
4.1 Tools	25
4.2 Assembly overview - underbody cladding	25
4.3 Rear right underbody cladding	26
5 Bulkhead	28
5.1 Tools	28
5.2 Materials	28
5.3 Assembly overview - bulkhead	29
6 Tunnel cross-piece	30
6.1 Tools	30
6.2 Assembly overview - tunnel cross-piece	30
55 - Bonnet, rear lid	32
1 Bonnet	32
1.1 Tools	32
1.2 Assembly overview - bonnet	32
1.3 Removing and installing bonnet	33
1.4 Removing and installing bonnet hinge	35
1.5 Removing and installing insulation	37
1.6 Assembly overview - seals	39
1.7 Removing and installing bonnet stay	40
1.8 Assembly overview - bonnet lock and release components	42
1.9 Removing and installing bonnet lock	43
1.10 Removing and installing Bowden cable	46
1.11 Removing and installing striker pin	47
1.12 Removing and installing release lever	49
1.13 Adjusting bonnet	52
2 Rear lid	55
2.1 Tools	55
2.2 Assembly overview - rear lid	55
2.3 Removing and installing rear lid	56
2.4 Assembly overview - gas strut	57
2.5 Removing and installing gas strut	58
2.6 Releasing gas from gas strut	60
2.7 Assembly overview - rear lid hinge	61



2.8	Removing and installing rear lid hinge	62
2.9	Removing and installing hinge covers	63
2.10	Removing and installing striker plate	65
2.11	Adjusting rear lid	66
2.12	Removing and installing rear lid handle release button E234	67
2.13	Removing and installing bonnet lock	68
2.14	Rear lid seal	70
2.15	Removing and installing rear lid seal	71
2.16	Number plate carrier	72
3	Tank flap unit	74
3.1	Tools	74
3.2	Assembly overview - tank flap unit	74
3.3	Removing and installing tank flap unit	75
3.4	Removing and installing tank filler flap locking motor V155	78
57	- Front doors, door components, central locking	80
1	Rear door	80
1.1	Tools	80
1.2	Assembly overview - door hinges	81
1.3	Removing and installing door	83
1.4	Installing after renewing A-pillar	85
1.5	Door alignment	86
2	Door components	89
2.1	Tools	89
2.2	Assembly overview - front door	89
2.3	Removing and installing door cover	91
2.4	Removing and installing door retaining strap	93
2.5	Removing and installing striker pin	94
2.6	Assembly overview - door handle and door lock	95
2.7	Removing and installing lock cylinder cover cap	97
2.8	Removing and installing lock cylinder	98
2.9	Removing and installing cover cap (without lock cylinder)	101
2.10	Removing and installing door handle	104
2.11	Removing and installing door lock	106
2.12	Removing and installing mounting bracket	109
2.13	Removing and installing inner window slot seal	111
2.14	Removing and installing outer window slot seal	114
2.15	Removing and installing inner door seal	115
2.16	Removing and installing outer door seal	118
2.17	Assembly overview - insulation	119
3	Central locking	121
3.1	Fitting location overview - central locking components	121
3.2	Adapting keys with remote control	123
3.3	Assembly overview - battery for folding key with remote control	123
3.4	Removing and installing battery for folding key with remote control	124
3.5	Assembly overview - battery for folding key with cover cap	126
3.6	Removing and installing battery for folding key with cover cap	127
58	- Rear doors, door components	129
1	Rear door	129
1.1	Tools	129
1.2	Assembly overview - door hinges	130
1.3	Removing and installing door	132
1.4	Installing after renewing B-pillar	134
1.5	Door alignment	135



2	Door components	137
2.1	Tools	137
2.2	Assembly overview - rear door	137
2.3	Removing and installing cover	139
2.4	Removing and installing door retaining strap	141
2.5	Removing and installing striker pin	142
2.6	Assembly overview - door handle and door lock	143
2.7	Removing and installing cap	144
2.8	Removing and installing door handle	147
2.9	Removing and installing door lock	149
2.10	Removing and installing mounting bracket	152
2.11	Removing and installing inner window slot seal	154
2.12	Removing and installing outer window slot seal	156
2.13	Removing and installing inner door seal	159
2.14	Removing and installing outer door seal	162
2.15	Assembly overview - insulation	164
60	Sunroof	166
1	Sunroof with glass panel	166
1.1	Tools	166
1.2	Functional check	166
1.3	Assembly overview	167
1.4	Removing and installing sliding/tilting sunroof glass panel	169
1.5	Height-adjustment of glass panel	170
1.6	Checking parallel running of glass panel	172
1.7	Adjusting parallel running of glass panel	173
1.8	Renewing panel seal	173
1.9	Removing and installing wind deflector	174
1.10	Removing and installing sliding headliner	175
1.11	Removing and installing sliding/tilting sunroof drive	176
1.12	Setting drive for sliding/tilting sunroof to zero position	177
1.13	Performing programming run for drive for sliding/tilting sunroof	177
1.14	Removing pre-selector control for sliding/tilting sunroof	178
1.15	Removing and installing carrier unit	178
1.16	Cleaning water drain hoses	181
63	Bumpers	183
1	Front bumper cover	183
1.1	Tools	183
1.2	Repairing front bumper cover	183
1.3	Installing brackets for parking aid system	183
1.4	Assembly overview - front bumper cover	188
1.5	Removing and installing front bumper cover	189
1.6	Front bumper cover add-on parts	191
1.7	Installing front number plate carrier	192
1.8	Assembly overview - guides for front bumper cover	193
1.9	Assembly overview - front bumper carrier	194
2	Rear bumper cover	196
2.1	Tools	196
2.2	Repairing rear bumper cover	196
2.3	Installing brackets for parking aid system	196
2.4	Assembly overview - rear bumper cover	201
2.5	Removing and installing rear bumper cover	202
2.6	Assembly overview - guides for rear bumper cover	204
2.7	Assembly overview - rear bumper carrier	204
2.8	Assembly overview - towing bracket	205



64 - Glazing	207
1 Flush bonded windows	207
1.1 Tools	207
1.2 Materials	208
1.3 Repairing windscreen	209
1.4 Assembly overview - windscreen	209
1.5 Remove windscreen	210
1.6 Install windscreen	212
1.7 Assembly overview - rear window	212
1.8 Removing undamaged rear window	213
1.9 Removing broken rear window	215
1.10 Installing rear window	215
1.11 Preparing old undamaged window for glazing	216
1.12 Preparing new window without precoating for glazing	217
1.13 Preparing body flange for glazing	217
1.14 Fitting instructions	218
1.15 Minimum curing period	219
1.16 Touching up paint damage	220
1.17 Removing soiling caused by adhesive sealant	220
2 Front door window	221
2.1 Tools	221
2.2 Assembly overview - front door window	221
2.3 Removing and installing door window	222
2.4 Removing and installing window regulator motor	228
2.5 Removing and installing window regulator	234
2.6 Removing and installing window channel	236
3 Rear door window	239
3.1 Tools	239
3.2 Assembly overview - rear door windows	239
3.3 Removing and installing door window	240
3.4 Removing and installing window regulator motor	244
3.5 Removing and installing window regulator	249
3.6 Removing and installing window channel	251
3.7 Removing and installing fixed door-window	253
66 - Exterior equipment	257
1 Wheel housing liner	257
1.1 Tools	257
1.2 Assembly overview - front wheel housing liner	257
1.3 Removing and installing front wheel housing liner	258
1.4 Assembly overview - rear wheel housing liner	260
1.5 Removing and installing rear wheel housing liner	261
2 Exterior mirror	265
2.1 Tools	265
2.2 Assembly overview - exterior mirror (manual operation)	265
2.3 Assembly overview - exterior mirror, electrically operated, without turn signal repeater	266
2.4 Assembly overview - exterior mirror, electrically operated, with turn signal repeater	267
2.5 Removing and installing mirror glass	269
2.6 Removing and installing exterior mirror trim, without turn signal repeater	270
2.7 Removing and installing exterior mirror trim, with turn signal repeater	272
2.8 Removing and installing exterior mirror housing, without turn signal repeater	274
2.9 Removing and installing exterior mirror housing, with turn signal repeater	275
2.10 Removing and installing adjustment unit with motor for exterior mirror	277
2.11 Removing and installing assembly bracket	280



2.12	Removing and installing exterior mirror (manual operation)	281
2.13	Removing and installing exterior mirror (electrical operation)	285
3	Radiator grille	290
3.1	Tools	290
3.2	Removing and installing radiator grille	290
3.3	Removing and installing emblem	292
4	Rear spoiler	297
4.1	Removing and installing rear spoiler	297
5	Mouldings and trims	304
5.1	Water deflector	304
5.2	Assembly overview - side member cover	308
5.3	Assembly overview - B-pillar trim	309
5.4	Removing and installing B-pillar trim	310
5.5	Side member extension	312
6	Lettering	317
6.1	Tools	317
6.2	Installation instructions for lettering and emblems	317
6.3	Dimensions - lettering on rear lid	318
6.4	Dimensions - lettering on wing	320
7	Noise insulation	322
7.1	Assembly overview - noise insulation	322
7.2	Removing and installing noise insulation	324