



Contents

00 - Technical data	1
1 Identification of gearbox	1
1.1 Location on gearbox	1
1.2 Identification code, assembly allocation and capacities	2
2 Overview - power transmission	4
3 Calculating overall gear ratio "i"	6
4 General repair instructions	7
4.1 Components	7
30 - Clutch	12
1 Fault finding, power transmission	12
2 Repairing clutch mechanism	13
2.1 Overview	13
2.2 Assembly overview - pedal cluster	13
2.3 Removing and installing over-centre spring (left-hand drive)	15
2.4 Removing and installing over-centre spring (right-hand drive)	21
2.5 Removing and installing clutch pedal (LHD)	27
2.6 Removing and installing clutch pedal (RHD)	34
2.7 Removing and installing mounting bracket (LHD)	41
2.8 Removing and installing mounting bracket (RHD)	48
2.9 Removing and installing clutch master cylinder	56
2.10 Removing and installing clutch position sender G476	58
2.11 Assembly overview - hydraulics (LHD)	62
2.12 Assembly overview - hydraulics (RHD)	64
2.13 Removing and installing clutch slave cylinder	66
3 Bleeding clutch mechanism	69
4 Repairing clutch release mechanism	71
4.1 Assembly overview - clutch release mechanism	71
4.2 Removing and installing clutch release lever, release bearing and guide sleeve	72
5 Repairing clutch	74
34 - Controls, housing	80
1 Repairing selector mechanism	80
1.1 Installation position of selector mechanism	80
1.2 Overview of selector mechanism	81
1.3 Assembly overview – gear knob and cover	81
1.4 Removing and installing gaiter with gear knob and noise insulation	82
1.5 Assembly overview - Gear lever and selector housing	84
1.6 Assembly overview – selector cables	94
1.7 Removing cable end-piece from relay lever and installing	99
1.8 Removing and installing selector mechanism	101
1.9 Removing and installing gear selector cable and gate selector cable	109
1.10 Adjusting selector mechanism	111
2 Removing and installing gearbox, Jetta 2005 ►, Golf Variant 2007 ► and Golf Variant 2010 ►	115
2.1 Removing gearbox	115
2.2 Installing gearbox	127
3 Removing and installing gearbox, Jetta 2011 ►	136
3.1 Removing gearbox, Jetta 2011 with 1.2 l engine and 1.4 l engine	136
3.2 Installing gearbox, Jetta 2011 with 1.2 l engine and 1.4 l engine	149
4 Transporting gearbox	159



5	Checking gear oil	161
6	Dismantling and assembling gearbox	163
6.1	Overview - gearbox	163
6.2	Assembly overview	163
6.3	Assembly overview - Removing and installing cover for gearbox housing and 5th and 6th gears	164
6.4	Assembly overview - removing and installing clutch housing	166
6.5	Assembly overview - removing and installing input shaft, output shaft, differential, selector mechanism and selector forks	167
6.6	Assembly sequence	169
7	Repairing gearbox housing and clutch housing	192
8	Repairing gearbox housing cover	196
9	Repairing selector unit	199
10	Dismantling and assembling selector forks	202
35 - Gears, shafts		208
1	Input shaft	208
1.1	Dismantling and assembling input shaft	208
2	Output shaft	222
2.1	Dismantling and assembling output shaft	222
39 - Final drive - differential		233
1	Renewing flange shaft oil seals with gearbox installed	233
1.1	Renewing oil seal for left flange shaft	233
1.2	Renewing seal for right flange shaft	235
2	Differential	238
2.1	Dismantling and assembling differential	238
2.2	Adjusting differential	246