



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Gearbox identification - front-wheel drive</b>	<b>1</b>
1.1 Location on gearbox	1
1.2 Identification code, assembly allocation and capacities - front-wheel drive	2
<b>2 Gearbox identification - all-wheel drive</b>	<b>7</b>
2.1 Location on gearbox	7
2.2 Identification code, assembly allocation and capacities - all-wheel drive	8
<b>3 Overview - power transmission - front-wheel drive</b>	<b>10</b>
<b>4 Overview - power transmission - all-wheel drive</b>	<b>12</b>
<b>5 Calculating overall gear ratio "i"</b>	<b>14</b>
<b>6 All-wheel drive - notes on performance test</b>	<b>15</b>
<b>7 General repair instructions</b>	<b>16</b>
7.1 Safety precautions for vehicles with a start-stop system	16
7.2 Contact corrosion	16
7.3 Special tool	16
7.4 Components	16
<b>30 - Clutch</b>	<b>22</b>
<b>1 Fault finding, power transmission</b>	<b>22</b>
<b>2 Repairing clutch mechanism</b>	<b>23</b>
2.1 Overview	23
2.2 Assembly overview - pedal cluster	23
2.3 Removing and installing over-centre spring	25
2.4 Removing and installing clutch pedal	31
2.5 Removing and installing mounting bracket	38
2.6 Removing and installing clutch master cylinder	46
2.7 Removing and installing clutch position sender G476	48
2.8 Assembly overview - hydraulics (LHD)	52
2.9 Assembly overview - hydraulics (RHD)	55
2.10 Bleeding clutch mechanism	57
<b>3 Repairing clutch release mechanism</b>	<b>60</b>
3.1 Removing and installing pipe/hose assembly and bleeder on clutch slave cylinder	62
3.2 Removing and installing clutch slave cylinder together with release bearing	63
3.3 Removing and installing pipe/hose line or pipe	65
3.4 Renewing input shaft seal	67
<b>4 Repairing clutch - vehicles with diesel engine</b>	<b>70</b>
4.1 Determining clutch manufacturer	71
4.2 Removing and installing "Sachs" clutch	72
4.3 Repairing "Sachs" clutch	76
4.4 Removing and installing "LuK" clutch	77
4.5 Repairing "LuK" clutch	81
<b>5 Repairing clutch - vehicles with petrol engine</b>	<b>82</b>
5.1 Repairing clutch	83
5.2 Removing and installing clutch	83
<b>34 - Controls, housing</b>	<b>88</b>
<b>1 Repairing selector mechanism</b>	<b>88</b>
1.1 Installation position of selector mechanism	88
1.2 Overview of selector mechanism	89
1.3 Assembly overview – gear knob and cover	89
1.4 Removing and installing gaiter with gear knob and noise insulation	90



1.5	Assembly overview - selector lever and selector housing (up to 10.06)	92
1.6	Assembly overview - selector lever and selector housing (from 11.06)	95
1.7	Assembly overview – selector cables	104
1.8	Plastic relay lever	109
1.9	Removing and installing selector mechanism	114
1.10	Removing and installing gear selector cable and gate selector cable	119
1.11	Adjusting selector mechanism	122
<b>2</b>	<b>Removing and installing gearbox, Jetta 2005 ▶, Golf Estate 2007 ▶, Golf Estate 2010 ▶ vehicles with diesel engine and front-wheel drive</b>	<b>126</b>
2.1	Removing gearbox	126
2.2	Installing gearbox	142
2.3	Specified torques	153
<b>3</b>	<b>Removing and installing gearbox, Jetta 2005 ▶, Golf Estate 2007 ▶, Golf Estate 2010 ▶ vehicles with petrol engine and front-wheel drive</b>	<b>155</b>
3.1	Removing gearbox	155
3.2	Installing gearbox	170
3.3	Specified torques	181
<b>4</b>	<b>Removing and installing gearbox, Jetta 2011 ▶ vehicles with diesel engine and vehicles with petrol engine</b>	<b>183</b>
4.1	Removing gearbox	183
4.2	Installing gearbox	199
4.3	Specified torques	209
<b>5</b>	<b>Removing and installing gearbox, Jetta 2005 ▶, Golf Estate 2007 ▶, Golf Estate 2010 ▶ vehicles with all-wheel drive</b>	<b>211</b>
5.1	Removing and installing gearbox in vehicles with turbo diesel engine	211
<b>6</b>	<b>Transporting gearbox</b>	<b>243</b>
6.1	Front-wheel drive - transporting gearbox	243
6.2	All-wheel drive - transporting gearbox	244
<b>7</b>	<b>Secure gearbox on engine and gearbox support</b>	<b>246</b>
<b>8</b>	<b>Checking gear oil</b>	<b>248</b>
8.1	Checking gear oil level, gearboxes with oil filler plug	248
8.2	Checking gear oil level, gearboxes without oil filler plug	249
8.3	Draining and filling gear oil (only for gearboxes “without” oil filler plug)	249
8.4	Specified torque for oil filler and oil drain plugs	251
<b>9</b>	<b>Removing and installing bevel box</b>	<b>253</b>
9.1	Removing and installing bevel box, vehicles with turbo diesel engine without particulate filter	253
9.2	Removing and installing bevel box, vehicles with turbo diesel engine and particulate filter, to approx. 10.09	264
9.3	Removing and installing bevel box, vehicles with turbo diesel engine and particulate filter, from approx. 11.09	279
<b>10</b>	<b>Checking or topping up gear oil in bevel box</b>	<b>289</b>
10.1	Checking gear oil in bevel box	290
10.2	Topping up gear oil in bevel box	291
<b>11</b>	<b>Dismantling and assembling gearbox</b>	<b>296</b>
11.1	Front-wheel drive - gearbox overview	296
11.2	Overview - gearbox, all-wheel drive	296
11.3	Assembly overview - front-wheel drive	297
11.4	Assembly overview - all-wheel drive	299
11.5	Assembly overview - removing and installing gearbox housing and selector mechanism	301
11.6	Assembly overview, front-wheel drive - removing and installing input shaft, output shafts, differential and selector rods	304
11.7	Assembly overview, four-wheel drive - removing and installing input shaft, output shafts, differential, bevel box and selector rods	306
11.8	Assembly order, gearbox »without« circlip A for input shaft cover made from sheet metal	308



11.9	Assembly sequence: I = gearbox »with« circlip A for input shaft cover made of sheet metal; II = gearbox with input shaft cover made of plastic	327
<b>12</b>	<b>Repairing gearbox housing</b>	<b>348</b>
<b>13</b>	<b>Repairing clutch housing</b>	<b>360</b>
<b>14</b>	<b>Repairing selector unit</b>	<b>365</b>
14.1	Renewing selector shaft seal	367
<b>15</b>	<b>Repairing selector forks</b>	<b>370</b>
<b>35</b>	<b>- Gears, shafts</b>	<b>373</b>
<b>1</b>	<b>Input shaft</b>	<b>373</b>
1.1	Assembly overview - input shaft	373
1.2	Dismantling and assembling input shaft	375
<b>2</b>	<b>Output shaft for 1st to 4th gears</b>	<b>382</b>
2.1	Assembly overview - output shaft for 1st to 4th gears	382
2.2	Dismantling and assembling output shaft for 1st to 4th gears	385
2.3	Adjusting output shaft for 1st to 4th gears	414
<b>3</b>	<b>Output shaft for 5th, 6th and reverse gears</b>	<b>420</b>
3.1	Assembly overview - output shaft for 5th, 6th and reverse gears	420
3.2	Dismantling and assembling output shaft for 5th, 6th and reverse gears	422
3.3	Adjusting output shaft for 5th, 6th and reverse gears	434
<b>39</b>	<b>- Final drive - differential</b>	<b>440</b>
<b>1</b>	<b>Front-wheel drive - renewing flange shaft seals with manual gearbox installed</b>	<b>440</b>
1.1	Renewing oil seal for left flange shaft	440
1.2	Renewing seal for right flange shaft	442
<b>2</b>	<b>Four-wheel drive - renewing flange shaft seals and bevel box (manual gearbox installed)</b>	<b>446</b>
2.1	Renewing oil seal for left flange shaft	446
2.2	Renewing seal for right flange shaft	446
2.3	Renewing bevel box seal with manual gearbox installed	450
<b>3</b>	<b>Assembly overview - seals, flange shaft mounting and output flange mounting in bevel box</b>	<b>453</b>
3.1	Removing and installing bevel box (with manual gearbox removed)	456
3.2	Renewing seal on bevel box between manual gearbox and bevel box	458
3.3	Renewing bevel box output flange oil seal (bevel box removed)	459
3.4	Renewing output flange and redetermining thickness of shim (bevel box removed)	471
3.5	Renewing polygon needle bearing and seal on right flange shaft	472
<b>4</b>	<b>Adjustment overview</b>	<b>479</b>
<b>5</b>	<b>Differential</b>	<b>480</b>
5.1	Front-wheel drive - dismantling and assembling differential	480
5.2	All-wheel drive - dismantling and assembling differential	488
5.3	Adjusting differential	497