



Contents

00 - Technical data	1
1 General repair notes	1
1.1 Torque converter	1
1.2 ATF	1
1.3 Automatic gearbox control unit J217 with fuzzy logic	1
1.4 Control units in vehicle	1
1.5 Information on "09G gearbox"	1
1.6 Tools	1
1.7 Gearbox	2
1.8 Gaskets, seals and oil	3
1.9 Nuts and bolts	3
1.10 Electrical components	4
1.11 Guided fault finding, vehicle self-diagnosis and testing	4
1.12 Safety precautions	4
2 Gearbox identification	5
2.1 Gearbox codes	5
3 Capacities	6
3.1 Planetary gearbox and final drive	6
4 Code - engine allocation	7
32 - Torque converter	8
1 Assembly overview - torque converter	8
1.1 Removing and installing torque converter	9
1.2 Checking torque converter	9
1.3 Draining torque converter	10
1.4 Removing and installing torque converter oil seal	10
37 - Controls, housing	12
1 Connecting »tester«	12
2 Electrical and electronic components and their locations	13
3 Multifunction switch F125	18
3.1 Removing multifunction switch F125	18
3.2 Installing multifunction switch F125	19
3.3 Adjusting multifunction switch F125	20
4 Selector mechanism up to 02.2009	22
4.1 Overview of selector mechanism up to 02.2009	22
4.2 Removing and installing selector mechanism with selector lever up to 02.2009	23
4.3 Removing and installing selector lever cable up to 02.2009	25
4.4 Checking selector lever cable	33
4.5 Adjusting selector lever cable	34
4.6 Emergency release of selector lever	35
4.7 Removing and installing selector lever knob	36
4.8 Moving push button to installation position in the handle	38
4.9 Checking selector mechanism	40
5 Selector mechanism from 03.2009 onwards	42
5.1 Overview of selector mechanism in vehicles from 03.2009 onwards	42
5.2 Removing and installing selector mechanism - vehicles as of 03.2009	43
6 Removing and installing gearbox, Jetta 2005 ▶, Bora 2006 ▶, Golf Estate 2007 ▶, Jetta Wagon 2008 ▶	50
6.1 Removing gearbox, vehicles with 1.6 l - 75 kW; 2.0 l - 85 kW; and 2.0 l - 110 kW engines	50



6.2	Installing gearbox, vehicles with 1.6 l - 75 kW; 2.0 l - 85 kW; and 2.0 l - 110 kW engines	57
6.3	Removing gearbox, vehicles with 2.5 l - 110 kW and 2.5 l - 125 kW engines	59
6.4	Installing gearbox, vehicles with 2.5 l - 110 kW and 2.5 l - 125 kW engines	66
6.5	Torque settings, gearbox to engine	68
7	Removing and installing gearbox, Jetta 2011 ▶	70
7.1	Removing gearbox, Jetta 2011 with 1.6 l - 77 kW engine	70
7.2	Removing gearbox, Jetta 2011 with 2.0 l - 85 kW engine	78
7.3	Removing gearbox, Jetta 2011 with 2.5 l - 125 kW engine	87
7.4	Installing gearbox, Jetta 2011	98
7.5	Torque settings, gearbox to engine	100
8	Transporting gearbox	104
9	Attaching gearbox on engine and gearbox support	105
10	ATF cooler	107
10.1	ATF cooler, round design – assembly view	107
10.2	ATF cooler, rectangular design – assembly view	108
11	Checking ATF level and topping up	111
11.1	Checking ATF level	113
11.2	Topping up ATF	114
11.3	Draining and filling ATF	115
38 - Gears, control		117
1	Renewing oil seal for selector shaft	117
2	Sump	118
2.1	Removing and installing sump	118
3	ATF strainer	121
3.1	Removing and installing ATF strainer	121
4	Valve body	122
4.1	Assembly overview	122
4.2	Removing and installing valve body	127
4.3	Removing and installing wiring harness for solenoid valves (14-pin connector)	135
4.4	Removing and installing wiring harness for sender (8-pin connector)	136
4.5	Removing and installing gearbox input speed sender G182	137
4.6	Removing and installing gearbox output speed sender G195	137
39 - Final drive - differential		139
1	Renewing oil seals for flange shafts	139
1.1	Overview of fitting locations - seals	139
1.2	Renewing oil seal for left flange shaft	139
1.3	Renewing seal for right flange shaft	141