



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification of gearbox</b>	<b>1</b>
<b>2 Overview - power transmission</b>	<b>2</b>
<b>3 Code, engine allocation</b>	<b>3</b>
<b>4 Capacities</b>	<b>4</b>
<b>5 Safety information</b>	<b>5</b>
5.1 General safety provisions	5
5.2 Safety measures when working on vehicles with a start/stop system	5
5.3 Safety precautions when using testers and measuring instruments during a road test	6
<b>6 Notes on tow-starting/towing</b>	<b>7</b>
<b>7 General repair instructions</b>	<b>8</b>
7.1 Tools	8
7.2 Gearbox	8
7.3 Working with vehicle diagnostic testers	13
<b>30 - Clutch</b>	<b>15</b>
<b>1 Removing and installing dual clutch, gearboxes made up to 05.2011</b>	<b>15</b>
1.1 Assembly overview - dual clutch, gearboxes manufactured up to 05.2011	15
1.2 Removing dual clutch, gearboxes manufactured up to 05.2011	17
1.3 Adjusting position of engagement bearings for clutches "K 1" and "K 2", gearboxes made up to 05.2011	21
1.4 Installing dual clutch, gearboxes made as of 05.2011	33
<b>2 Removing and installing dual clutch, gearboxes made from 06.2011 onwards</b>	<b>40</b>
2.1 Assembly overview - dual clutch, gearboxes made as of 06.2011	40
2.2 Removing dual clutch, gearboxes made as of 06.2011	42
2.3 Adjusting position of engagement bearings for clutches "K 1" and "K 2", gearboxes made as of 06.2011	46
2.4 Installing dual clutch, gearbox date from 06.2011	59
<b>3 Removing and installing oil seals at clutch end</b>	<b>65</b>
<b>34 - Controls, housing</b>	<b>68</b>
<b>1 Gear oil</b>	<b>68</b>
1.1 Renewing gear oil	68
1.2 Draining and filling hydraulic fluid for mechatronic unit	72
<b>2 Selector mechanism</b>	<b>75</b>
2.1 Overview - selector mechanism in vehicles up to 02.2009	75
2.2 Removing and installing selector lever cable - vehicles up to 02.2009	77
2.3 Overview of selector mechanism - vehicles from 03.2009 onwards	85
2.4 Removing and installing selector mechanism - vehicles as of 03.2009	86
2.5 Checking selector lever cable	93
2.6 Adjusting selector lever cable	93
2.7 Emergency release of selector lever	96
2.8 Removing and installing selector lever knob	96
2.9 Moving push-button in the handle to installation position	99
2.10 Checking selector mechanism	100
<b>3 Mechatronic unit for dual clutch gearbox J743</b>	<b>102</b>
3.1 Safety note on mechatronic unit for dual clutch gearbox J743	102
3.2 Overview - mechatronic unit	103
3.3 Removing mechatronic unit for dual clutch gearbox J743 with gearbox installed	104
3.4 Moving mechatronic unit for dual clutch gearbox J743 into »removal position« by hand	115
3.5 Installing mechatronic unit for dual clutch gearbox J743	119
3.6 View of selector forks with mechatronic unit removed	125



3.7	Renewing clutch actuator	126
<b>4</b>	<b>Removing and installing gearbox, Jetta 2005 ▶, Golf Variant 2007 ▶, Golf Variant 2010 ▶</b>	<b>132</b>
4.1	Information about gearboxes with different output shafts	132
4.2	Removing gearbox, vehicles with 1.2 l/77 kW TSI engine, 1.4 l/90 kW TFSI engine, and 1.4 l/118 kW TSI engine	132
4.3	Removing gearbox, vehicles with 1.6 l/75 kW MPI engine	141
4.4	Removing gearbox - vehicles with 1.9 l/77 kW TDI PD engine	151
4.5	Removing gearbox - vehicles with 1.6 l/77 kW TDI CR engine	159
4.6	Installing gearbox, Jetta 2005 ▶, Golf Variant 2007 ▶, Golf Variant 2010 ▶	167
4.7	Torque settings »Gearbox to engine« and notes on assembly mounting	171
<b>5</b>	<b>Removing and installing gearbox, Jetta 2011 ▶</b>	<b>176</b>
5.1	Removing gearbox, Jetta 2011 with 1.2 l/77 kW TSI engine, 1.4 l/90 kW TFSI engine, and 1.4 l/118 kW TSI engine	176
5.2	Removing gearbox, Jetta 2011 with 1.6 l/77 kW TDI CR engine	187
5.3	Installing gearbox, Jetta 2011	196
5.4	Specified torques	200
<b>6</b>	<b>Transporting gearbox and securing to assembly stand</b>	<b>203</b>
<b>35</b>	<b>Gears, shafts</b>	<b>207</b>
1	Dismantling and assembling gears and shafts	207
<b>2</b>	<b>Parking lock</b>	<b>208</b>
2.1	Removing and installing cover for parking lock	208
2.2	Removing and installing parking lock	209
<b>39</b>	<b>Final drive - front differential</b>	<b>211</b>
<b>1</b>	<b>Oil seals</b>	<b>211</b>
1.1	Overview of fitting locations - seals	211
1.2	Renewing oil seal for right stub shaft	212
1.3	Renewing oil seal for left stub shaft	214
1.4	Renewing seal for right flange shaft	217
1.5	Renewing oil seal for left flange shaft	220