



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on ignition system	2
2 Identification	3
2.1 Engine number/engine data	3
3 Repair notes	5
3.1 Rules for cleanliness	5
3.2 Foreign bodies in engine	5
3.3 Contact corrosion	5
3.4 Routing and attachment of lines	5
3.5 Fitting radiators and condensers	6
10 - Removing and installing engine	7
1 Removing and installing engine	7
1.1 Removing engine	7
1.2 Separating engine and gearbox	20
1.3 Securing engine on engine and gearbox support	22
1.4 Installing engine	24
2 Assembly mountings	28
2.1 Assembly overview – assembly mountings	28
2.2 Removing and installing engine mounting	31
2.3 Removing and installing gearbox mounting	33
2.4 Removing and installing pendulum support	34
2.5 Supporting engine in installation position	35
2.6 Adjusting assembly mountings	44
2.7 Checking adjustment of assembly mountings	47
13 - Crankshaft group	48
1 Cylinder block (pulley end)	48
1.1 Assembly overview - poly V-belt drive	48
1.2 Assembly overview - sealing flange, belt pulley end	52
1.3 Removing and installing poly-V belt	54
1.4 Removing and installing tensioner for poly V-belt	58
1.5 Removing and installing vibration damper	59
1.6 Removing and installing engine support	61
1.7 Renewing crankshaft oil seal for pulley end	64
1.8 Removing and installing sealing flange on pulley end	67
2 Cylinder block, gearbox end	70
2.1 Assembly overview - cylinder block, gearbox end	70
2.2 Assembly overview - drive plate	71
2.3 Removing and installing drive plate	73
2.4 Removing and installing flywheel	75
2.5 Removing and installing sealing flange on gearbox side	76
3 Crankshaft	87
3.1 Crankshaft dimensions	87
3.2 Renewing needle bearing in crankshaft	87
3.3 Measuring axial clearance of crankshaft	90
4 Pistons and conrods	92



4.1	Assembly overview - pistons and conrods	92
4.2	Removing and installing pistons	95
4.3	Checking pistons and cylinder bores	96
4.4	Separating new conrod	98
4.5	Checking radial clearance of conrods	99
4.6	Removing and installing oil spray jets	99
15	Cylinder head, valve gear	102
1	Cylinder head	102
1.1	Assembly overview - cylinder head	102
1.2	Assembly overview - camshaft housing	104
1.3	Removing and installing cylinder head	108
1.4	Removing and installing camshaft housing	113
1.5	Checking compression	118
2	Toothed belt drive	121
2.1	Assembly overview - toothed belt cover	121
2.2	Assembly overview - toothed belt	122
2.3	Removing and installing toothed belt guard	126
2.4	Removing and installing toothed belt	127
2.5	Checking valve timing	141
2.6	Adjusting valve timing	148
2.7	Removing toothed belt from camshaft	165
3	Valve gear	175
3.1	Assembly overview - valve gear	175
3.2	Measuring axial play of camshaft	177
3.3	Removing and installing camshaft oil seal	178
3.4	Removing and installing camshaft adjuster	184
3.5	Removing and installing camshaft control valve 1 N205	201
3.6	Removing and installing exhaust camshaft control valve 1 N318	202
3.7	Removing and installing valve stem oil seals	203
3.8	Removing and installing toothed belt pulley	213
4	Inlet and exhaust valves	216
4.1	Checking valve guides	216
4.2	Checking valves	217
4.3	Valve dimensions	217
17	Lubrication	218
1	Sump, oil pump	218
1.1	Assembly overview - sump/oil pump	218
1.2	Engine oil:	222
1.3	Removing and installing lower part of sump	222
1.4	Removing and installing upper part of sump	227
1.5	Removing and installing oil pump	234
1.6	Removing and installing oil level and oil temperature sender G266	235
2	Engine oil cooler	237
2.1	Assembly overview - engine oil cooler	237
2.2	Removing and installing engine oil cooler	237
3	Crankcase ventilation	239
3.1	Assembly overview - crankcase breather system	239
3.2	Removing and installing oil separator	240
4	Oil filter, oil pressure switch	244
4.1	Assembly overview - oil filter/oil pressure switch	244
4.2	Removing and installing oil pressure switch F1	245
4.3	Removing and installing oil pressure switch for reduced oil pressure F378	246
4.4	Checking oil pressure	247



4.5	Removing and installing oil pressure regulating valve N428	249
19	Cooling	250
1	Cooling system/coolant	250
1.1	Connection diagram - coolant hoses	250
1.2	Assembly overview - engine preheater	251
1.3	Checking cooling system for leaks	252
1.4	Draining and adding coolant	255
1.5	Removing and installing engine preheating element Z97	264
2	Coolant pump, regulation of cooling system	267
2.1	Assembly overview - coolant pump, thermostat	267
2.2	Assembly overview - electric coolant pump	270
2.3	Assembly overview - coolant temperature sender	271
2.4	Removing and installing electric coolant pump	272
2.5	Removing and installing coolant pump	274
2.6	Removing and installing thermostat	280
2.7	Removing and installing toothed belt pulley for coolant pump	283
2.8	Removing and installing coolant temperature sender G62	285
2.9	Removing and installing radiator outlet coolant temperature sender G83	286
3	Coolant pipes	288
3.1	Assembly overview - coolant pipes	288
3.2	Removing and installing coolant pipes	288
4	Radiator, radiator fan	293
4.1	Assembly overview - radiator/radiator fan	293
4.2	Assembly overview - radiator cowl and radiator fan	295
4.3	Removing and installing radiator	296
4.4	Removing and installing water radiator for charge air cooling circuit	298
4.5	Removing and installing radiator cowl	301
4.6	Removing and installing radiator fan V7	303
4.7	Removing and installing radiator fan 2 V177	304
21	Turbocharging/supercharging	305
1	Turbocharger	305
1.1	Assembly overview - turbocharger	305
1.2	Removing and installing turbocharger	309
1.3	Removing and installing charge pressure positioner V465	315
1.4	Removing and installing connection for turbocharger	319
2	Charge air system	323
2.1	Assembly overview - charge air system	323
2.2	Removing and installing charge air cooler	326
2.3	Removing and installing charge pressure sender GX26	329
2.4	Checking charge air system for leaks	330
2.5	Removing and installing air intake pipe	331
24	Mixture preparation - injection	334
1	Injection system	334
1.1	Overview of fitting locations - injection system	334
2	Injectors	339
2.1	Assembly overview - fuel rail with injectors	339
2.2	Removing and installing fuel rail	341
2.3	Removing and installing injectors	341
2.4	Cleaning injectors	348
3	Air filter	350
3.1	Assembly overview - air filter housing	350
3.2	Removing and installing air filter housing	351



3.3	Removing and installing resonator for intake air	352
4	Intake manifold	354
4.1	Assembly overview – intake manifold	354
4.2	Removing and installing intake manifold	356
4.3	Removing and installing throttle valve module GX3	360
4.4	Cleaning throttle valve module GX3	361
5	Senders and sensors	363
5.1	Removing and installing fuel pressure sender G247	363
5.2	Checking fuel pressure sender G247	364
5.3	Removing and installing intake manifold sender GX9	366
6	Engine/motor control unit	368
6.1	Removing and installing engine control unit J623	368
7	High-pressure pump	373
7.1	Assembly overview – high-pressure pump	373
7.2	Removing and installing high-pressure pump	377
7.3	Removing and installing high-pressure pipe	379
8	Lambda probe	382
8.1	Assembly overview – lambda probe	382
8.2	Removing and installing lambda probe	384
26 - Exhaust system		389
1	Exhaust pipes and silencers	389
1.1	Assembly overview – silencers	389
1.2	Separating exhaust pipes from silencers	390
1.3	Removing and installing rear silencer	391
1.4	Aligning exhaust system free of stress	392
1.5	Checking exhaust system for leaks	393
1.6	Installation position of clamp	393
2	Emission control	396
2.1	Assembly overview – emission control	396
2.2	Removing and installing catalytic converter	398
28 - Ignition system		404
1	Ignition system	404
1.1	Assembly overview – ignition system	404
1.2	Test data, spark plugs	406
1.3	Removing and installing ignition coils with output stage	406
1.4	Removing and installing knock sensor 1 G61	409
1.5	Removing and installing Hall sender	409
1.6	Removing and installing engine speed sender G28	410