



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures for working on vehicles with high-voltage system	1
1.2 Safety regulations for working on fuel supply	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	3
1.5 Safety precautions when working on ignition system	3
<b>2 Identification</b>	<b>4</b>
2.1 Engine number/engine data	4
<b>3 Repair notes</b>	<b>6</b>
3.1 Rules for cleanliness	6
3.2 Foreign bodies in engine	6
3.3 Contact corrosion	6
3.4 Routing and attachment of lines	7
3.5 Fitting radiator and condensers	7
3.6 Checking vacuum system	7
<b>10 - Removing and installing engine</b>	<b>8</b>
<b>1 Removing and installing engine</b>	<b>8</b>
1.1 Removing engine	8
1.2 Separating engine and gearbox	23
1.3 Separating electric drive motor V141 and engine	28
1.4 Securing engine on engine and gearbox support	38
1.5 Connecting electric drive motor V141 and engine	40
1.6 Installing engine	63
<b>2 Assembly mountings</b>	<b>69</b>
2.1 Assembly overview – assembly mountings	69
2.2 Removing and installing engine mounting	72
2.3 Removing and installing gearbox mounting	79
2.4 Removing and installing pendulum support	86
2.5 Adjusting assembly mountings	87
2.6 Checking adjustment of assembly mountings	99
<b>3 Engine cover panel</b>	<b>101</b>
3.1 Removing and installing engine cover	101
<b>13 - Crankshaft group</b>	<b>102</b>
<b>1 Cylinder block (pulley end)</b>	<b>102</b>
1.1 Assembly overview - sealing flange, belt pulley end	102
1.2 Removing and installing vibration damper	103
1.3 Removing and installing engine bracket	105
1.4 Renewing crankshaft oil seal - pulley end	106
1.5 Removing and installing sealing flange on pulley end	109
<b>2 Cylinder block, gearbox end</b>	<b>113</b>
2.1 Assembly overview - cylinder block, gearbox end	113
2.2 Removing and installing sealing flange on gearbox side	116
<b>3 Crankshaft</b>	<b>129</b>
3.1 Crankshaft dimensions	129
3.2 Measuring axial clearance of crankshaft	129
<b>4 Pistons and conrods</b>	<b>131</b>
4.1 Assembly overview - pistons and conrods	131
4.2 Removing and installing pistons	134
4.3 Checking pistons and cylinder bores	136



4.4	Checking radial clearance of conrods	138
4.5	Removing and installing oil spray jets	138
<b>15</b>	<b>- Cylinder head, valve gear</b>	<b>140</b>
<b>1</b>	<b>Cylinder head</b>	<b>140</b>
1.1	Assembly overview - cylinder head	140
1.2	Assembly overview - camshaft housing	142
1.3	Removing and installing cylinder head	144
1.4	Removing and installing camshaft housing	149
1.5	Checking compression	155
<b>2</b>	<b>Toothed belt drive</b>	<b>157</b>
2.1	Assembly overview - toothed belt cover	157
2.2	Assembly overview - toothed belt	157
2.3	Removing and installing toothed belt guard	159
2.4	Removing and installing toothed belt	160
2.5	Checking valve timing	168
2.6	Adjusting valve timing	175
2.7	Removing toothed belt from camshaft	184
<b>3</b>	<b>Valve gear</b>	<b>190</b>
3.1	Assembly overview - valve gear	190
3.2	Measuring axial play of camshaft	191
3.3	Removing and installing camshaft oil seal	192
3.4	Removing and installing camshaft adjuster	201
3.5	Removing and installing camshaft control valve 1 N205	212
3.6	Removing and installing exhaust camshaft control valve 1 N318	213
3.7	Removing and installing valve stem oil seals	214
<b>4</b>	<b>Inlet and exhaust valves</b>	<b>223</b>
4.1	Checking valve guides	223
4.2	Checking valves	224
4.3	Valve dimensions	224
<b>17</b>	<b>- Lubrication</b>	<b>225</b>
<b>1</b>	<b>Sump, oil pump</b>	<b>225</b>
1.1	Assembly overview - sump/oil pump	225
1.2	Engine oil:	229
1.3	Removing and installing lower part of sump	229
1.4	Removing and installing upper part of sump	234
1.5	Removing and installing oil pump	241
1.6	Removing and installing oil level and oil temperature sender G266	243
<b>2</b>	<b>Engine oil cooler</b>	<b>244</b>
2.1	Assembly overview - engine oil cooler	244
2.2	Removing and installing engine oil cooler	244
<b>3</b>	<b>Crankcase ventilation</b>	<b>246</b>
3.1	Assembly overview - crankcase breather system	246
3.2	Removing and installing oil separator	247
<b>4</b>	<b>Oil filter, oil pressure switch</b>	<b>250</b>
4.1	Assembly overview - oil filter/oil pressure switch	250
4.2	Removing and installing oil pressure switch F22	251
4.3	Removing and installing oil pressure switch for reduced oil pressure F378	252
4.4	Checking oil pressure	253
4.5	Removing and installing oil pressure regulating valve N428	255
<b>19</b>	<b>- Cooling</b>	<b>257</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>257</b>
1.1	Connection diagram - coolant hoses	257



1.2	Checking cooling system for leaks	258
1.3	Draining and adding coolant	262
<b>2</b>	<b>Coolant pump, regulation of cooling system</b>	<b>271</b>
2.1	Assembly overview - coolant pump, thermostat	271
2.2	Assembly overview - electric coolant pump	276
2.3	Assembly overview - coolant temperature sender	277
2.4	Removing and installing electric coolant pump	278
2.5	Removing and installing coolant pump	283
2.6	Removing and installing thermostat	290
2.7	Removing and installing toothed belt pulley for coolant pump	294
2.8	Removing and installing coolant temperature sender G62	298
2.9	Removing and installing radiator outlet coolant temperature sender G83	299
<b>3</b>	<b>Coolant pipes</b>	<b>301</b>
3.1	Assembly overview - coolant pipes	301
3.2	Removing and installing coolant pipes	301
<b>4</b>	<b>Radiator, radiator fan</b>	<b>304</b>
4.1	Assembly overview - radiator/radiator fan	304
4.2	Removing and installing radiator	306
4.3	Removing and installing radiator cowl	308
4.4	Removing and installing radiator fan	310
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>312</b>
<b>1</b>	<b>Turbocharger</b>	<b>312</b>
1.1	Assembly overview - turbocharger	312
1.2	Removing and installing turbocharger	316
1.3	Removing and installing charge pressure positioner V465	323
1.4	Removing and installing connection for turbocharger	326
<b>2</b>	<b>Charge air system</b>	<b>330</b>
2.1	Assembly overview - charge air system	330
2.2	Removing and installing charge air cooler	333
2.3	Removing and installing charge pressure sender GX26	337
2.4	Checking charge air system for leaks	337
2.5	Removing and installing air intake pipe	339
<b>24</b>	<b>Mixture preparation - injection</b>	<b>342</b>
<b>1</b>	<b>Injectors</b>	<b>342</b>
1.1	Assembly overview - fuel rail with injectors	342
1.2	Removing and installing fuel rail	344
1.3	Removing and installing injectors	344
1.4	Cleaning injectors	351
<b>2</b>	<b>Air filter</b>	<b>353</b>
2.1	Assembly overview - air filter housing	353
2.2	Removing and installing air filter housing	355
2.3	Removing and installing resonator for intake air	356
<b>3</b>	<b>Intake manifold</b>	<b>358</b>
3.1	Assembly overview - intake manifold	358
3.2	Removing and installing intake manifold	360
3.3	Removing and installing throttle valve module GX3	364
3.4	Cleaning throttle valve module GX3	365
<b>4</b>	<b>Senders and sensors</b>	<b>367</b>
4.1	Removing and installing fuel pressure sender G247	367
4.2	Checking fuel pressure sender G247	368
4.3	Removing and installing intake manifold sender GX9	372
<b>5</b>	<b>Engine/motor control unit</b>	<b>374</b>



5.1	Removing and installing engine control unit J623	374
<b>6</b>	<b>High-pressure pump</b>	<b>378</b>
6.1	Assembly overview - high-pressure pump	378
6.2	Removing and installing high-pressure pump	379
6.3	Removing and installing high-pressure pipe	382
<b>7</b>	<b>Lambda probe</b>	<b>385</b>
7.1	Assembly overview - Lambda probe	385
7.2	Removing and installing lambda probe	387
<b>26</b>	<b>- Exhaust system</b>	<b>393</b>
<b>1</b>	<b>Exhaust pipes and silencers</b>	<b>393</b>
1.1	Assembly overview – silencers	393
1.2	Removing and installing rear silencer	394
1.3	Aligning exhaust system free of stress	396
1.4	Checking exhaust system for leaks	397
1.5	Installation position of clamp	397
<b>2</b>	<b>Emission control</b>	<b>401</b>
2.1	Assembly overview – emission control	401
2.2	Removing and installing catalytic converter	403
<b>3</b>	<b>Secondary air system</b>	<b>409</b>
3.1	Assembly overview - secondary air system	409
3.2	Removing and installing secondary air pump motor V101	410
3.3	Removing and installing secondary air inlet valve N112	410
<b>28</b>	<b>- Ignition system</b>	<b>412</b>
<b>1</b>	<b>Ignition system</b>	<b>412</b>
1.1	Assembly overview - ignition system	412
1.2	Test data, spark plugs	414
1.3	Removing and installing ignition coils with output stage	414
1.4	Removing and installing knock sensor 1 G61	417
1.5	Removing and installing Hall sender	418
1.6	Removing and installing engine speed sender G28	420