



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on ignition system	2
<b>2 Identification</b>	<b>3</b>
2.1 Engine number/engine data	3
<b>3 Repair instructions</b>	<b>5</b>
3.1 Rules for cleanliness	5
3.2 General notes	5
3.3 General repair notes	6
3.4 Checking vacuum system	6
<b>10 - Removing and installing engine</b>	<b>8</b>
<b>1 Removing and installing engine</b>	<b>8</b>
1.1 Removing engine	8
1.2 Separating engine and gearbox	20
1.3 Securing engine on engine and gearbox support	22
1.4 Installing engine	24
<b>2 Assembly mountings</b>	<b>28</b>
2.1 Assembly overview - assembly mountings	28
2.2 Removing and installing engine mounting	31
2.3 Removing and installing gearbox mounting	33
2.4 Removing and installing pendulum support	34
2.5 Supporting engine in installation position	35
2.6 Adjusting assembly mountings	44
2.7 Checking adjustment of assembly mountings	46
<b>3 Engine cover panel</b>	<b>47</b>
3.1 Removing and installing engine cover	47
<b>13 - Crankshaft group</b>	<b>48</b>
<b>1 Cylinder block (pulley end)</b>	<b>48</b>
1.1 Assembly overview - cylinder block (pulley end)	48
1.2 Removing and installing poly-V belt	50
1.3 Removing and installing tensioner for poly V-belt	52
1.4 Removing and installing vibration damper	52
1.5 Removing and installing bracket for ancillaries	60
1.6 Removing and installing engine support	64
<b>2 Cylinder block, gearbox end</b>	<b>66</b>
2.1 Assembly overview - cylinder block, gearbox end	66
2.2 Assembly overview - drive plate	67
2.3 Removing and installing drive plate	68
2.4 Removing and installing flywheel	70
2.5 Removing and installing sealing flange on gearbox side	72
<b>3 Crankshaft</b>	<b>81</b>
3.1 Assembly overview - crankshaft	81
3.2 Crankshaft dimensions	83
3.3 Allocation of main bearing shells	83
3.4 Renewing needle bearing in crankshaft	85
3.5 Measuring axial clearance of crankshaft	88



3.6	Measuring radial clearance of crankshaft .....	89
3.7	Removing and installing sender wheel .....	90
<b>4</b>	<b>Balancer shaft .....</b>	<b>92</b>
4.1	Assembly overview - balance shaft .....	92
4.2	Removing and installing balance shaft .....	93
4.3	Renewing oil seal for balance shaft (inlet side) .....	98
<b>5</b>	<b>Pistons and conrods .....</b>	<b>100</b>
5.1	Assembly overview - pistons and conrods .....	100
5.2	Removing and installing pistons .....	102
5.3	Checking pistons and cylinder bores .....	103
5.4	Separating new conrod .....	105
5.5	Checking radial clearance of conrods .....	106
<b>15 - Cylinder head, valve gear .....</b>	<b>108</b>	
<b>1</b>	<b>Cylinder head .....</b>	<b>108</b>
1.1	Assembly overview - cylinder head .....	108
1.2	Assembly overview - camshaft housing .....	111
1.3	Removing and installing cylinder head .....	113
1.4	Removing and installing vacuum pump .....	118
1.5	Checking compression .....	120
<b>2</b>	<b>Cover for timing chain .....</b>	<b>123</b>
2.1	Assembly overview - cover for timing chain .....	123
2.2	Removing and installing timing chain cover .....	126
2.3	Renewing seal for vibration damper .....	134
<b>3</b>	<b>Chain drive .....</b>	<b>138</b>
3.1	Assembly overview - camshaft timing chains .....	138
3.2	Assembly overview - drive chain for balance shaft .....	142
3.3	Removing and installing camshaft timing chain .....	145
3.4	Removing and installing drive chain for balance shaft .....	162
3.5	Checking timing chain .....	162
3.6	Checking valve timing .....	163
<b>4</b>	<b>Valve gear .....</b>	<b>167</b>
4.1	Assembly overview - valve gear .....	167
4.2	Removing and installing camshaft .....	169
4.3	Removing and installing camshaft control valve 1 N205 .....	186
4.4	Removing and installing valve stem seals .....	187
<b>5</b>	<b>Inlet and exhaust valves .....</b>	<b>200</b>
5.1	Checking valve guides .....	200
5.2	Checking valves .....	201
5.3	Valve dimensions .....	201
<b>17 - Lubrication .....</b>	<b>202</b>	
<b>1</b>	<b>Sump, oil pump .....</b>	<b>202</b>
1.1	Assembly overview - sump/oil pump .....	202
1.2	Engine oil: .....	205
1.3	Removing and installing lower part of sump .....	205
1.4	Removing and installing upper part of sump .....	208
1.5	Removing and installing oil pump .....	213
1.6	Removing and installing oil level and oil temperature sender G266 .....	215
<b>2</b>	<b>Engine oil cooler .....</b>	<b>217</b>
2.1	Assembly overview - engine oil cooler .....	217
2.2	Removing and installing engine oil cooler .....	217
2.3	Removing and installing mechanical switching valve .....	219
<b>3</b>	<b>Crankcase ventilation .....</b>	<b>220</b>



3.1	Assembly overview - crankcase breather system .....	220
3.2	Removing and installing oil separator .....	221
<b>4</b>	<b>Oil filter, oil pressure switch .....</b>	<b>222</b>
4.1	Assembly overview - oil filter .....	222
4.2	Assembly overview - oil pressure switches/oil pressure control .....	222
4.3	Removing and installing oil pressure switch F1 .....	223
4.4	Removing and installing oil pressure switch for reduced oil pressure F378 .....	225
4.5	Checking oil pressure and oil pressure switch .....	226
4.6	Removing and installing oil pressure regulating valve N428 .....	229
<b>19 - Cooling .....</b>		<b>231</b>
<b>1</b>	<b>Cooling system/coolant .....</b>	<b>231</b>
1.1	Connection diagram - coolant hoses .....	231
1.2	Checking cooling system for leaks .....	233
1.3	Draining and adding coolant .....	236
<b>2</b>	<b>Coolant pump, regulation of cooling system .....</b>	<b>244</b>
2.1	Assembly overview - coolant pump, thermostat .....	244
2.2	Assembly overview - electric coolant pump .....	246
2.3	Assembly overview - coolant temperature sender .....	247
2.4	Removing and installing continued coolant circulation pump V51 .....	248
2.5	Removing and installing coolant pump .....	251
2.6	Removing and installing toothed belt for coolant pump .....	252
2.7	Removing and installing thermostat housing .....	255
2.8	Removing and installing coolant temperature sender G62 .....	258
2.9	Removing and installing radiator outlet coolant temperature sender G83 .....	259
<b>3</b>	<b>Coolant pipes .....</b>	<b>261</b>
3.1	Assembly overview - coolant pipes .....	261
3.2	Removing and installing coolant pipes .....	261
3.3	Removing and installing upper coolant pipes .....	263
<b>4</b>	<b>Radiator, radiator fan .....</b>	<b>265</b>
4.1	Assembly overview - radiator/radiator fan .....	265
4.2	Assembly overview – radiator cowl and radiator fan .....	266
4.3	Assembly overview - radiator blind .....	267
4.4	Removing and installing radiator .....	270
4.5	Removing and installing radiator cowl .....	271
4.6	Removing and installing radiator fan .....	272
4.7	Removing and installing auxiliary radiator .....	272
4.8	Removing and installing radiator blind .....	274
4.9	Removing and installing radiator blind control motor V544 .....	276
<b>21 - Turbocharging/supercharging .....</b>		<b>282</b>
<b>1</b>	<b>Turbocharger .....</b>	<b>282</b>
1.1	Assembly overview - turbocharger .....	282
1.2	Removing and installing turbocharger .....	288
<b>2</b>	<b>Charge air system .....</b>	<b>298</b>
2.1	Assembly overview - charge air system .....	298
2.2	Removing and installing charge air cooler .....	300
2.3	Removing and installing charge pressure sender G31 .....	302
2.4	Checking charge air system for leaks .....	302
<b>24 - Mixture preparation - injection .....</b>		<b>305</b>
<b>1</b>	<b>Injection system .....</b>	<b>305</b>
1.1	Overview of fitting locations - injection system .....	305
<b>2</b>	<b>Injectors .....</b>	<b>309</b>
2.1	Assembly overview - fuel rail with injectors .....	309



2.2	Removing and installing fuel rail .....	311
2.3	Removing and installing injectors .....	312
2.4	Renewing seals on injectors .....	314
2.5	Cleaning injectors .....	317
<b>3</b>	<b>Air filter .....</b>	<b>320</b>
3.1	Assembly overview - air filter housing .....	320
3.2	Removing and installing air filter housing .....	322
<b>4</b>	<b>Intake manifold .....</b>	<b>324</b>
4.1	Assembly overview – intake manifold .....	324
4.2	Removing and installing intake manifold .....	326
4.3	Removing and installing throttle valve module GX3 .....	332
4.4	Cleaning throttle valve module GX3 .....	333
<b>5</b>	<b>Senders and sensors .....</b>	<b>335</b>
5.1	Assembly overview - actuator for structure-borne sound and control unit for structure-borne sound .....	335
5.2	Control unit for structure-borne sound J869 and actuator for structure-borne sound R214 .....	336
5.3	Removing and installing fuel pressure sender G247 .....	337
5.4	Checking fuel pressure sender G247 .....	339
5.5	Removing and installing intake manifold sender GX9 .....	342
<b>6</b>	<b>Engine control unit .....</b>	<b>343</b>
6.1	Removing and installing engine control unit J623 .....	343
<b>7</b>	<b>High-pressure pump .....</b>	<b>347</b>
7.1	Assembly overview - high-pressure pump .....	347
7.2	Removing and installing high-pressure pump .....	349
<b>8</b>	<b>Lambda probe .....</b>	<b>353</b>
8.1	Assembly overview - Lambda probe .....	353
8.2	Removing and installing Lambda probe 1 before catalytic converter GX10 .....	353
8.3	Removing and installing Lambda probe 1 after catalytic converter GX7 .....	355
<b>26</b>	<b>- Exhaust system .....</b>	<b>357</b>
<b>1</b>	<b>Exhaust pipes and silencers .....</b>	<b>357</b>
1.1	Assembly overview – silencers .....	357
1.2	Removing and installing rear silencer .....	358
1.3	Aligning exhaust system free of stress .....	360
1.4	Checking exhaust system for leaks .....	361
1.5	Installation position of clamp .....	361
<b>2</b>	<b>Emission control .....</b>	<b>364</b>
2.1	Assembly overview – emission control .....	364
2.2	Removing and installing catalytic converter .....	364
<b>3</b>	<b>Secondary air system .....</b>	<b>369</b>
3.1	Assembly overview - secondary air system .....	369
3.2	Removing and installing secondary air pump motor V101 .....	371
3.3	Removing and installing secondary air inlet valve N112 .....	371
<b>28</b>	<b>- Ignition system .....</b>	<b>373</b>
<b>1</b>	<b>Ignition system .....</b>	<b>373</b>
1.1	Assembly overview - ignition system .....	373
1.2	Test data, spark plugs .....	374
1.3	Removing and installing ignition coils with output stage .....	375
1.4	Removing and installing knock sensor 1 G61 .....	376
1.5	Removing and installing Hall sender .....	378
1.6	Removing and installing engine speed sender G28 .....	378