



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety regulations for working on fuel supply	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when working on the cooling system	2
1.4 Safety precautions when working on ignition system	2
<b>2 Identification</b>	<b>3</b>
2.1 Engine number/engine data	3
<b>3 Repair notes</b>	<b>5</b>
3.1 Rules for cleanliness	5
3.2 Foreign objects in engine	5
3.3 Contact corrosion	5
3.4 Routing and attachment of lines	5
3.5 Fitting radiator and condensers	6
<b>10 - Removing and installing engine</b>	<b>7</b>
<b>1 Removing and installing engine</b>	<b>7</b>
1.1 Removing engine	7
1.2 Separating engine and gearbox	16
1.3 Securing engine on engine and gearbox support	18
1.4 Installing engine	19
<b>2 Assembly mountings</b>	<b>22</b>
2.1 Assembly overview - assembly mountings	22
2.2 Removing and installing engine mounting	24
2.3 Supporting engine in installation position	28
2.4 Adjusting assembly mountings	32
2.5 Checking adjustment of assembly mountings (engine and gearbox mountings)	34
<b>3 Engine cover panel</b>	<b>35</b>
3.1 Removing and installing engine cover	35
<b>13 - Crankshaft group</b>	<b>36</b>
<b>1 Cylinder block (pulley end)</b>	<b>36</b>
1.1 Assembly overview - poly V-belt drive	36
1.2 Removing and installing poly-V belt	38
1.3 Removing and installing tensioner for poly V-belt	39
1.4 Removing and installing vibration damper	43
1.5 Renewing seal for vibration damper	44
1.6 Removing and installing bracket for ancillaries	46
<b>2 Cylinder block, gearbox end</b>	<b>49</b>
2.1 Assembly overview - cylinder block, gearbox end	49
2.2 Removing and installing flywheel	50
2.3 Removing and installing sealing flange on gearbox side	52
<b>3 Crankshaft</b>	<b>58</b>
3.1 Assembly overview - crankshaft	58
3.2 Crankshaft dimensions	59
3.3 Allocation of main bearing shells	60
3.4 Renewing needle bearing in crankshaft	61
3.5 Measuring axial clearance of crankshaft	63
3.6 Measuring radial clearance of crankshaft	64
3.7 Removing and installing sender wheel	65
<b>4 Pistons and conrods</b>	<b>66</b>
4.1 Assembly overview - pistons and conrods	66



4.2	Checking pistons and cylinder bores	67
4.3	Separating new conrod	70
<b>15</b>	<b>- Cylinder head, valve gear</b>	<b>71</b>
<b>1</b>	<b>Cylinder head</b>	<b>71</b>
1.1	Assembly overview - cylinder head	71
1.2	Removing and installing cylinder head	75
1.3	Removing and installing vacuum pump	91
1.4	Checking compression	92
<b>2</b>	<b>Cover for timing chain</b>	<b>95</b>
2.1	Assembly overview - cover for timing chain	95
2.2	Removing and installing upper timing chain cover	96
2.3	Removing and installing timing chain cover (bottom)	98
<b>3</b>	<b>Chain drive</b>	<b>106</b>
3.1	Assembly overview - camshaft timing chains	106
3.2	Assembly overview - drive chain for balance shaft	107
3.3	Removing and installing camshaft timing chain	109
3.4	Removing and installing drive chain for balance shaft	121
3.5	Removing and installing balance shaft for inlet camshaft	124
3.6	Removing and installing balance shaft for exhaust camshaft	127
3.7	Checking valve timing	130
<b>4</b>	<b>Valve gear</b>	<b>132</b>
4.1	Assembly overview - valve gear	132
4.2	Measuring axial play of camshaft	133
4.3	Removing and installing camshaft	134
4.4	Removing and installing camshaft control valve 1 N205	142
4.5	Removing and installing valve stem seals	143
<b>5</b>	<b>Inlet and exhaust valves</b>	<b>148</b>
5.1	Checking valve guides	148
5.2	Valve dimensions	149
<b>17</b>	<b>- Lubrication</b>	<b>150</b>
<b>1</b>	<b>Sump, oil pump</b>	<b>150</b>
1.1	Assembly overview - sump/oil pump	150
1.2	Engine oil:	153
1.3	Removing and installing lower part of sump	154
1.4	Removing and installing upper part of sump	156
1.5	Removing and installing oil pump	161
<b>2</b>	<b>Crankcase ventilation</b>	<b>164</b>
2.1	Removing and installing oil separator	164
<b>3</b>	<b>Oil filter, oil pressure switch</b>	<b>165</b>
3.1	Assembly overview - oil filter housing, oil pressure switch F1	165
3.2	Assembly overview - oil filter housing, oil pressure switch F22 and oil pressure switch for reduced oil pressure F378	166
3.3	Removing and installing engine oil cooler	167
3.4	Checking oil pressure and oil pressure switch F1	168
3.5	Checking oil pressure and oil pressure switch for reduced oil pressure F378	171
3.6	Removing and installing oil pressure switch F22	175
3.7	Removing and installing oil pressure switch for reduced oil pressure F378	176
3.8	Removing and installing oil pressure regulating valve N428	177
<b>19</b>	<b>- Cooling</b>	<b>179</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>179</b>
1.1	Connection diagram - coolant hoses	179
1.2	Checking cooling system for leaks	181



1.3	Draining and adding coolant	183
<b>2</b>	<b>Coolant pump, regulation of cooling system</b>	<b>189</b>
2.1	Assembly overview - coolant pump, thermostat	189
2.2	Assembly overview - electric coolant pump	191
2.3	Removing and installing electric coolant pump	191
2.4	Removing and installing coolant pump	192
2.5	Removing and installing thermostat	193
2.6	Removing and installing toothed belt for coolant pump	196
2.7	Renewing seal for coolant pump drive	199
2.8	Removing and installing coolant temperature sender G62	200
<b>3</b>	<b>Coolant pipes</b>	<b>204</b>
3.1	Assembly overview - coolant pipes	204
3.2	Removing and installing front coolant pipes	205
3.3	Removing and installing small coolant pipe	208
<b>4</b>	<b>Radiator, radiator fan</b>	<b>210</b>
4.1	Assembly overview - radiator/radiator fan	210
4.2	Removing and installing radiator	211
4.3	Removing and installing radiator cowl with radiator fan	212
4.4	Removing and installing radiator fan V7 and radiator fan 2 V177	214
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>215</b>
<b>1</b>	<b>Exhaust turbocharger</b>	<b>215</b>
1.1	Assembly overview - turbocharger	215
1.2	Removing and installing turbocharger	221
1.3	Checking vacuum unit for turbocharger	227
1.4	Renewing vacuum unit for turbocharger	229
<b>2</b>	<b>Charge air system</b>	<b>231</b>
2.1	Schematic overview - charge air system	231
2.2	Assembly overview - charge air system	232
2.3	Removing and installing charge air cooler	233
2.4	Checking charge air system for leaks	235
<b>24</b>	<b>Mixture preparation - injection</b>	<b>239</b>
<b>1</b>	<b>Injection system</b>	<b>239</b>
1.1	Overview of fitting locations - injection system	239
1.2	Releasing high pressure in fuel system	245
<b>2</b>	<b>Injectors</b>	<b>246</b>
2.1	Removing and installing injectors	246
2.2	Renewing seals on injectors	249
2.3	Cleaning injectors	251
<b>3</b>	<b>Air filter</b>	<b>253</b>
3.1	Assembly overview - air filter housing	253
3.2	Removing and installing air filter housing	254
3.3	Removing and installing air filter element	256
<b>4</b>	<b>Intake manifold</b>	<b>259</b>
4.1	Assembly overview - intake manifold	259
4.2	Removing and installing intake manifold with fuel rail	261
4.3	Removing and installing throttle valve module J338	268
4.4	Cleaning throttle valve module J338	270
4.5	Checking intake manifold change-over	270
<b>5</b>	<b>Senders and sensors</b>	<b>273</b>
5.1	Removing and installing fuel pressure sender G247	273
5.2	Checking fuel pressure sender G247	275
5.3	Removing and installing air mass meter	277



<b>6</b>	<b>Engine (motor) control unit</b> .....	<b>279</b>
6.1	Removing and installing engine (motor) control unit J623 .....	279
<b>7</b>	<b>High-pressure pump</b> .....	<b>281</b>
7.1	Assembly overview - high-pressure pump .....	281
7.2	Assembly overview - fuel rail with injectors .....	282
7.3	Removing and installing high-pressure pump .....	284
<b>26 - Exhaust system</b> .....		<b>288</b>
<b>1</b>	<b>Exhaust pipes and silencers</b> .....	<b>288</b>
1.1	Assembly overview - silencers .....	288
1.2	Removing and installing front exhaust pipe .....	290
1.3	Separating exhaust pipes from silencers .....	292
1.4	Aligning exhaust system free of stress .....	294
1.5	Check exhaust system for leaks .....	296
<b>2</b>	<b>Secondary air system</b> .....	<b>297</b>
2.1	Assembly overview - secondary air system .....	297
2.2	Removing and installing secondary air pump motor V101 .....	297
2.3	Removing and installing secondary air inlet valve N112 .....	298
<b>28 - Ignition system</b> .....		<b>300</b>
<b>1</b>	<b>Ignition system</b> .....	<b>300</b>
1.1	Assembly overview - ignition system .....	300
1.2	Test data, spark plugs .....	301
1.3	Removing and installing ignition coils with output stage .....	302
1.4	Removing and installing knock sensor 1 G61 .....	303
1.5	Removing and installing engine speed sender G28 .....	304