



Contents

00 - Technical data	1
1 Safety instructions	1
1.1 Safety precautions when working on fuel supply system	1
1.2 Safety precautions during road tests in which test and measuring equipment is used	2
1.3 Safety precautions when working on cooling system	2
1.4 Safety precautions when working on ignition system	3
2 Identification	4
2.1 Engine number, engine data	4
3 General notes	6
3.1 Numbering of cylinders	6
4 Repair instructions	7
4.1 Rules for cleanliness	7
4.2 Foreign objects in engine	7
10 - Removing and installing engine	8
1 Removing and installing engine	8
1.1 Removing engine	8
1.2 Separating engine and gearbox	15
1.3 Securing engine on engine and gearbox support	20
1.4 Installing engine	22
2 Assembly mountings	24
2.1 Assembly overview - assembly mountings	24
2.2 Removing and installing engine mountings	24
2.3 Supporting engine in installation position	30
2.4 Adjusting assembly mountings	35
2.5 Checking adjustment of assembly mountings (engine and gearbox mountings)	39
3 Engine cover panel	40
13 - Crankshaft group	41
1 Cylinder block (pulley end)	41
1.1 Assembly overview - poly V-belt drive	41
1.2 Removing and installing poly V-belt	44
1.3 Removing and installing tensioner for poly V-belt	46
1.4 Removing and installing vibration damper	46
1.5 Removing and installing ancillary bracket	48
1.6 Removing and installing engine bracket	50
1.7 Renewing crankshaft oil seal - belt pulley end	50
2 Cylinder block, gearbox end	54
2.1 Assembly overview - cylinder block, gearbox end	54
2.2 Assembly overview - drive plate	55
2.3 Assembly overview - flywheel	56
2.4 Removing and installing drive plate	56
2.5 Removing and installing flywheel	57
2.6 Renewing crankshaft oil seal - gearbox end	58
2.7 Removing and installing sealing flange on gearbox side	60
3 Crankshaft	64
3.1 Assembly overview - crankshaft	64
3.2 Locking crankshaft	65
3.3 Crankshaft dimensions	67
3.4 Allocation of main bearing shells	68
3.5 Measuring axial clearance of crankshaft	68
3.6 Measuring radial clearance of crankshaft	69



4	Pistons and conrods	70
4.1	Assembly overview - pistons and conrods	70
4.2	Removing and installing pistons	72
4.3	Checking piston and cylinder bore	73
4.4	Separating new conrod	75
15 - Cylinder head, valve gear		77
1	Cylinder head	77
1.1	Assembly overview - cylinder head	77
1.2	Assembly overview - cylinder head cover	79
1.3	Removing and installing cylinder head	81
1.4	Removing and installing cylinder head cover	86
1.5	Removing and installing vacuum pump	87
1.6	Checking compression	89
2	Cover for timing chain	91
2.1	Removing and installing cover for timing chain	91
2.2	Renewing oil seal for timing chain cover	94
3	Chain drive	97
3.1	Assembly overview - camshaft timing chains	97
3.2	Assembly overview - timing chain	98
3.3	Exploded view - drive chain for valve gear	99
3.4	Checking valve timing	100
3.5	Adjusting valve timing	101
4	Valve gear	108
4.1	Assembly overview - valve gear	108
4.2	Removing and installing camshaft	110
4.3	Removing and installing valve stem seals	114
5	Inlet and exhaust valves	119
5.1	Checking valve guides	119
5.2	Valve dimensions	119
17 - Lubrication		120
1	Sump, oil pump	120
1.1	Engine oil	120
1.2	Assembly overview - sump and oil pump	120
1.3	Removing and installing bottom section of sump	122
1.4	Removing and installing top section of sump	124
1.5	Removing and installing oil pump	127
2	Oil filter, oil pressure switch	132
2.1	Assembly overview - oil filter housing, oil pressure switch	132
2.2	Draining oil filter housing	134
2.3	Checking oil pressure and oil pressure switch	135
2.4	Removing and installing oil filter housing	141
19 - Cooling		142
1	Cooling system, coolant	142
1.1	Coolant hose schematic diagram	142
1.2	Assembly overview - engine preheater	144
1.3	Checking cooling system for leaks	144
1.4	Draining and filling coolant	146
2	Coolant pump, regulation of cooling system	154
2.1	Assembly overview - coolant pump, thermostat	154
2.2	Removing and installing coolant pump	158
2.3	Removing and installing thermostat	164



3	Radiator and radiator fan	167
3.1	Assembly overview - radiator and radiator fan	167
3.2	Removing and installing radiator	169
3.3	Removing and installing radiator cowl	171
3.4	Removing and installing radiator fan	172
24	Mixture preparation - injection	173
1	Injection system	173
1.1	Overview of fitting locations - injection system	173
1.2	Filling and bleeding fuel system	174
2	Injectors	178
2.1	Assembly overview - fuel rail with injectors	178
2.2	Removing and installing injectors	178
2.3	Checking injectors	180
3	Air filter	185
3.1	Assembly overview - air filter housing	185
3.2	Removing and installing air filter housing	186
4	Intake manifold	187
4.1	Assembly overview - intake manifold	187
4.2	Removing and installing throttle valve module J338	188
4.3	Removing and installing intake manifold	189
5	Engine control unit	193
5.1	Removing and installing engine control unit J623	193
5.2	Removing and installing engine control unit J623 with protective housing	194
26	Exhaust system	197
1	Exhaust pipes, silencers	197
1.1	Assembly overview - silencers	197
1.2	Removing and installing silencer	198
1.3	Aligning exhaust system free of tension	200
2	Emission control	202
2.1	Assembly overview - emission control	202
2.2	Removing and installing catalytic converter	206
3	Secondary air system	209
3.1	Assembly overview - secondary air system	209
3.2	Removing and installing secondary air pump motor V101	210
3.3	Checking secondary air inlet valve	211
4	Exhaust manifold	213
4.1	Assembly overview - exhaust manifold	213
28	Ignition system	214
1	Ignition system	214
1.1	Assembly overview - ignition system	214
1.2	Removing and installing ignition coils with output stage	216
1.3	Removing and installing knock sensor I G61	217
1.4	Test data, spark plugs	218