



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on SCR system	3
2 Identification	4
2.1 Engine number/engine data	4
3 Repair instructions	6
3.1 Rules for cleanliness	6
3.2 Adapting learnt value for SCR system	6
3.3 Foreign objects in engine	6
3.4 Contact corrosion	7
3.5 Routing and attachment of lines	7
3.6 Fitting radiator and condensers	7
4 Technical data	8
4.1 Coolant	8
10 - Removing and installing engine	9
1 Removing and installing engine	9
1.1 Removing engine	9
1.2 Separating engine and gearbox	19
1.3 Securing engine on engine and gearbox support	20
1.4 Installing engine	22
2 Assembly mountings	26
2.1 Assembly overview - assembly mountings	26
2.2 Removing and installing engine mounting	28
2.3 Removing and installing gearbox mounting	29
2.4 Removing and installing pendulum support	30
2.5 Supporting engine in installation position	31
2.6 Adjusting assembly mountings	35
2.7 Checking adjustment of assembly mountings (engine and gearbox mountings)	36
3 Engine cover panel	37
3.1 Removing and installing engine cover	37
13 - Crankshaft group	38
1 Cylinder block (pulley end)	38
1.1 Assembly overview - cylinder block (pulley end)	38
1.2 Assembly overview - sealing flange, belt pulley end	40
1.3 Removing and installing poly-V belt	40
1.4 Removing and installing tensioner for poly V-belt	42
1.5 Removing and installing vibration damper	42
1.6 Removing and installing bracket for ancillaries	43
1.7 Removing and installing engine support	44
1.8 Removing and installing sealing flange on pulley end	45
2 Cylinder block, gearbox end	48
2.1 Assembly overview - cylinder block, gearbox end	48
2.2 Removing and installing flywheel	49
2.3 Removing and installing sealing flange on gearbox side	50
3 Crankshaft	59
3.1 Assembly overview - crankshaft	59



3.2	Crankshaft dimensions	60
3.3	Renewing needle bearing in crankshaft	60
3.4	Measuring axial clearance of crankshaft	62
4	Pistons and conrods	64
4.1	Assembly overview - pistons and conrods	64
4.2	Removing and installing pistons	66
4.3	Measuring piston projection at TDC	67
4.4	Checking pistons and cylinder bores	69
4.5	Separating new conrod	71
4.6	Checking radial clearance of conrods	71
4.7	Removing and installing oil spray jets	71
15	- Cylinder head, valve gear	73
1	Cylinder head	73
1.1	Assembly overview - cylinder head	73
1.2	Assembly overview - cylinder head cover	75
1.3	Removing and installing cylinder head	77
1.4	Removing and installing cylinder head cover	86
1.5	Removing and installing injector seals	88
1.6	Removing and installing camshaft housing	89
1.7	Checking compression	94
2	Toothed belt drive	96
2.1	Assembly overview - toothed belt cover	96
2.2	Assembly overview - toothed belt	97
2.3	Removing and installing toothed belt guard	98
2.4	Removing and installing toothed belt	101
2.5	Removing toothed belt from camshaft	112
3	Valve gear	117
3.1	Assembly overview - valve gear	117
3.2	Measuring axial play of camshaft	120
3.3	Removing and installing camshaft oil seal	121
3.4	Removing and installing camshaft adjuster	122
3.5	Removing and installing camshaft control valve 1 N205	125
3.6	Removing control valve from and installing on inlet camshaft control valve 1 N205	126
3.7	Checking hydraulic compensation elements	128
3.8	Removing and installing valve stem seals	129
4	Inlet and exhaust valves	136
4.1	Checking valve guides	136
4.2	Checking valves	137
4.3	Valve dimensions	137
17	- Lubrication	138
1	Sump, oil pump	138
1.1	Assembly overview - sump/oil pump	138
1.2	Engine oil:	143
1.3	Removing and installing sump	143
1.4	Removing and installing lower part of sump	146
1.5	Removing and installing upper part of sump	150
1.6	Removing and installing oil pump	154
1.7	Removing and installing oil level and oil temperature sender G266	155
2	Engine oil cooler	157
2.1	Removing and installing engine oil cooler	157
3	Oil filter, oil pressure switch	158
3.1	Assembly overview - oil filter housing, oil pressure switch	158
3.2	Removing and installing oil pressure switch F1	159



3.3	Removing and installing oil pressure switch for reduced oil pressure F378	160
3.4	Checking oil pressure	161
3.5	Removing and installing oil filter housing	161
3.6	Removing and installing oil pressure regulating valve N428	163
19 - Cooling	165
1	Cooling system/coolant	165
1.1	Connection diagram - coolant hoses	165
1.2	Assembly overview - engine preheater	171
1.3	Checking cooling system for leaks	171
1.4	Draining coolant	173
1.5	Filling with coolant	175
1.6	Checking electric vacuum pump VAS 6096/2	184
1.7	Flushing cooling system	184
1.8	Flushing cooling system, quick reference guide	205
2	Coolant pump, regulation of cooling system	207
2.1	Assembly overview - coolant pump, thermostat	207
2.2	Assembly overview - electric coolant pump	209
2.3	Assembly overview - coolant temperature sender	214
2.4	Removing and installing electric coolant pump	215
2.5	Removing and installing coolant pump	226
2.6	Removing and installing thermostat	227
2.7	Checking thermostat	227
2.8	Removing and installing coolant valve for cylinder head N489	228
2.9	Removing and installing coolant temperature sender G62	228
2.10	Removing and installing radiator outlet coolant temperature sender G83	229
3	Coolant pipes	231
3.1	Assembly overview - coolant pipes	231
3.2	Removing and installing coolant pipes	232
4	Radiator, radiator fan	242
4.1	Assembly overview - radiator/radiator fan	242
4.2	Removing and installing radiator	244
4.3	Removing and installing water radiator for charge air cooling circuit	245
4.4	Removing and installing radiator cowl with radiator fan	248
4.5	Removing and installing radiator fan	249
21 - Turbocharging/supercharging	250
1	Exhaust turbocharger	250
1.1	Assembly overview - turbocharger	250
1.2	Removing and installing turbocharger	252
1.3	Renewing vacuum unit for turbocharger	255
1.4	Removing and installing connection for turbocharger	260
2	Charge air system	262
2.1	Assembly overview - charge air system	262
2.2	Removing and installing charge pressure sender G31	264
2.3	Checking charge air system for leaks	264
23 - Mixture preparation - injection	267
1	Injection system	267
1.1	Schematic overview - fuel system	267
1.2	Overview of fitting locations - injection system	268
1.3	Filling/bleeding fuel system	274
1.4	Checking fuel system for leaks	274
2	Vacuum system	275
2.1	Connection diagram - vacuum system	275



2.2	Checking vacuum system	276
3	Injectors/high-pressure accumulator (rail)	277
3.1	Assembly overview - injectors	277
3.2	Assembly overview - fuel rail	279
3.3	Adapting correction values for injectors	280
3.4	Testing injectors	280
3.5	Checking return flow rate of injectors with engine running	280
3.6	Checking return flow rate of injectors at starter speed	283
3.7	Testing jammed-open injectors	284
3.8	Removing and installing injectors	285
3.9	Removing and installing high-pressure lines	288
3.10	Removing and installing fuel rail	290
4	Air filter	292
4.1	Assembly overview - air filter housing	292
4.2	Removing and installing air filter housing	293
5	Intake manifold	296
5.1	Assembly overview - intake manifold	296
5.2	Removing and installing intake manifold	298
5.3	Removing and installing throttle valve module J338	301
6	Senders and sensors	304
6.1	Removing and installing fuel pressure regulating valve N276	304
6.2	Checking fuel pressure regulating valve N276	310
6.3	Removing and installing fuel pressure sender G247	311
6.4	Removing and installing air mass meter G70	312
6.5	Removing and installing pressure differential sender G505	314
6.6	Removing and installing exhaust gas pressure sensor 1 G450	315
6.7	Removing and installing NOx sender 2 G687	316
6.8	Removing and installing control unit for NOx sender GX30	318
6.9	Removing and installing charge air temperature sender before charge air cooler G810 / charge air temperature sender after charge air cooler G811	323
6.10	Removing and installing fuel temperature sender G81	324
6.11	Removing and installing temperature and pressure sender for low-pressure fuel system GX20	325
7	Engine control unit	327
7.1	Removing and installing engine (motor) control unit J623	327
8	High-pressure pump	331
8.1	Assembly overview - high-pressure pump	331
8.2	Removing and installing high-pressure pump	331
9	Lambda probe	335
9.1	Assembly overview - Lambda probe	335
9.2	Removing and installing Lambda probe	337
26 - Exhaust system	341	
1	Exhaust pipes and silencers	341
1.1	Assembly overview - silencers	341
1.2	Assembly overview - front exhaust pipe	343
1.3	Removing and installing front exhaust pipe	344
1.4	Separating exhaust pipes from silencers	345
1.5	Removing and installing rear silencer	346
1.6	Aligning exhaust system free of stress	347
1.7	Checking exhaust system for leaks	347
1.8	Installation position of clamp	348
1.9	Align end exhaust pipes	348
2	Exhaust gas cleaning	350
2.1	Assembly overview - emission control	350



2.2	Removing and installing emission control module	352
2.3	Removing and installing exhaust flap control unit J883	358
3	SCR system (selective catalytic reduction)	360
3.1	Assembly overview - tank for reducing agent	360
3.2	Assembly overview - reducing agent delivery line	362
3.3	Assembly overview - delivery module for reducing agent	363
3.4	Assembly overview - injector for reducing agent	364
3.5	Removing and installing reducing agent tank	365
3.6	Removing and installing reducing agent supply line	367
3.7	Disconnecting reducing agent supply line	370
3.8	Removing and installing delivery module for reducing agent	374
3.9	Removing and installing injector for reduction agent N474	376
3.10	Removing and installing control unit for reducing-agent heater J891	377
3.11	Draining reducing agent tank	378
4	Exhaust gas temperature regulation	381
4.1	Assembly overview - exhaust gas temperature regulation	381
4.2	Removing and installing exhaust gas temperature sender 1 G235	384
4.3	Removing and installing exhaust gas temperature sender 2 G448	385
4.4	Removing and installing exhaust gas temperature sender 3 G495	388
4.5	Removing and installing exhaust gas temperature sender 4 G648	389
5	Exhaust gas recirculation	392
5.1	Assembly overview - exhaust gas recirculation	392
5.2	Assembly overview - exhaust gas recirculation valve 1 GX5	396
5.3	Removing and installing exhaust gas recirculation cooler	396
5.4	Checking exhaust gas recirculation cooler for leaks	399
5.5	Removing and installing exhaust gas recirculation valve 1 GX5	401
5.6	Removing and installing exhaust gas recirculation valve 2 GX6	402
5.7	Removing and installing exhaust gas recirculation temperature sensor G98	405
28 - Glow plug system	407	
1	Glow plug system	407
1.1	Assembly overview - glow plug system	407
1.2	Removing and installing glow plug	409
1.3	Removing and installing automatic glow period control unit J179	411
1.4	Removing and installing Hall sender G40	412
1.5	Removing and installing engine speed sender G28	412