



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine cover	3
1.2 Removing engine	4
1.3 Separating engine from gearbox	13
1.4 Separating engine from dual clutch gearbox	15
1.5 Securing engine to assembly stand	18
1.6 Installing engine	20
2 Assembly mounting, except Jetta 2011 ▶	24
2.1 Assembly overview - assembly mountings	24
2.2 Checking adjustment of engine assembly mountings	27
2.3 Adjusting assembly mountings	27
3 Assembly mounting, Jetta 2011 ▶	33
3.1 Assembly overview - assembly mountings	33
3.2 Removing and installing engine mounting	35
3.3 Removing and installing gearbox mounting	39
3.4 Removing and installing pendulum support	42
3.5 Supporting engine in installation position	43
3.6 Adjusting assembly mountings	48
3.7 Checking adjustment of assembly mountings	49
13 - Crankshaft group	51
1 Dismantling and assembling engine	51
1.1 Poly V-belt drive with tensioning element and air conditioner compressor	51
1.2 Poly V-belt drive with tensioning roller and air conditioner compressor	55
1.3 Poly V-belt drive without air conditioning compressor	59
1.4 Removing and installing bracket for ancillaries	61
1.5 Assembly overview - toothed belt drive	63
1.6 Removing and installing engine bracket	65
1.7 Assembly overview - crankcase	69
2 Removing and installing sealing flange and flywheel	71
2.1 Assembly overview - Sealing flange, belt pulley end	71
2.2 Renewing crankshaft oil seal, pulley end	73
2.3 Removing and installing sealing flange - pulley end	75
2.4 Assembly overview - Dual-mass flywheel and sealing flange	79
2.5 Removing and installing dual-mass flywheel	80
2.6 Renewing crankshaft sealing flange, flywheel end	81
2.7 Removing and installing engine speed sender G28	92
3 Pistons and conrods	94
3.1 Assembly overview - pistons and conrods	94
3.2 Piston and cylinder dimensions	98
3.3 Separating new conrods	98
3.4 Bearing shells - installation position	99
3.5 Piston and cylinder dimensions	100
3.6 Checking piston projection at TDC	100
3.7 Measuring radial clearance of conrods	102
4 Crankshaft	103



4.1	Assembly overview - crankshaft	103
4.2	Crankshaft dimensions	103
4.3	Pulling needle bearing out of and driving into crankshaft	104
15	Cylinder head, valve gear	107
1	Cylinder head	107
1.1	Assembly overview - cylinder head	107
1.2	Assembly overview - cylinder head cover	111
1.3	Assembly overview - toothed belt	113
1.4	Removing and installing cylinder head cover	116
1.5	Removing, installing and tensioning toothed belt	119
1.6	Removing and installing cylinder head	128
1.7	Removing and installing vacuum pump	140
1.8	Compression test	141
2	Valve gear	143
2.1	Assembly overview - valve gear	143
2.2	Removing and installing camshafts	145
2.3	Measuring axial clearance of camshaft	154
2.4	Measuring radial clearance of camshafts	155
2.5	Removing and installing camshaft oil seal	156
2.6	Checking hydraulic compensation elements	161
2.7	Renewing valve stem seals with cylinder head installed	162
2.8	Renewing valve stem seals with cylinder head removed	166
2.9	Valves	171
17	Lubrication	174
1	Engine oil:	174
1.1	Oil capacities	174
1.2	Checking engine oil level	174
2	Parts of lubrication system	175
2.1	Assembly overview - oil pump, sump	175
2.2	Removing and installing oil level and oil temperature sender G266	178
2.3	Removing and installing oil sump	178
2.4	Removing and installing oil pump	184
3	Oil filter bracket and engine oil cooler	186
3.1	Assembly overview - oil filter bracket and engine oil cooler	186
3.2	Removing and installing oil filter bracket with engine oil cooler	188
3.3	Removing and installing oil pressure switch F1	191
3.4	Checking oil pressure switch F1	192
3.5	Checking oil pressure	194
19	Cooling	196
1	Parts of cooling system	196
1.1	Assembly overview - parts of cooling system, body side	196
1.2	Assembly overview - parts of cooling system, engine side	197
1.3	Assembly overview - coolant pump and thermostat	199
1.4	Coolant hose connection diagram	199
2	Repairing cooling system	202
2.1	Removing and installing cowling together with radiator fan V7 and radiator fan on right of radiator V35	202
2.2	Removing and installing radiator	203
2.3	Removing and installing coolant pump	204
2.4	Removing and installing 4/2-way valve with thermostat	206
2.5	Draining and adding coolant	216
2.6	Coolant pipes, coolant temperature sender	222



2.7	Checking cooling system for leaks	236
20	Fuel supply system	239
1	Safety regulations for working on fuel supply	239
2	Rules for cleanliness	240
3	Procedure in event of misfuelling	241
3.1	Procedure for 1st scenario	241
3.2	Procedure for 2nd scenario	242
4	Parts of fuel supply system	245
4.1	Fuel tank, vehicles with front-wheel drive	245
4.2	Fuel tank, vehicles with four-wheel drive	254
4.3	Emptying fuel tank	263
4.4	Removing and installing fuel delivery unit	267
4.5	Removing and installing fuel gauge sender	269
5	Repairing fuel supply	270
5.1	Assembly overview - fuel filter	270
5.2	Removing and installing upper part of fuel filter	273
5.3	Removing and installing fuel filter	276
5.4	Checking fuel system pressurisation pump G6	277
5.5	Checking supplementary fuel pump V393 or fuel pump 2 V277 (in-line electronic fuel pump)	284
5.6	Removing and installing supplementary fuel pump V393 or fuel pump 2 V277 (in-line electronic fuel pump)	286
5.7	Assembly overview - accelerator mechanism	288
21	Turbocharging/supercharging	292
1	Turbocharger	292
1.1	Safety precautions	292
1.2	Rules for cleanliness	292
1.3	Assembly overview - turbocharger	293
1.4	Removing and installing turbocharger	295
1.5	Changing vacuum unit with position sender for charge pressure positioner G581.	299
2	Charge air system	307
2.1	Installing hose connections with corrugated pipe and hose clips	307
2.2	Assembly overview - parts of charge air cooling	308
2.3	Removing and installing charge air pressure sender G31/intake air temperature sender G42	310
2.4	Removing and installing charge air cooler	310
2.5	Checking charge air system for leaks	312
2.6	Vacuum hose connection diagram	316
2.7	Checking vacuum system	316
23	Mixture preparation - injection	321
1	Diesel direct injection system	321
1.1	Safety precautions	321
1.2	Rules for cleanliness	321
1.3	System layout	322
2	High-pressure pump	324
2.1	Assembly overview – high-pressure pump	324
2.2	Removing and installing high-pressure pump	326
2.3	Filling/bleeding fuel system	330
2.4	Checking for leaks in the fuel system	331
3	Injectors	332
3.1	Assembly overview - injectors	332
3.2	Carrying out adaptation for injector delivery calibration	335



3.3	Checking for injectors sticking open	336
3.4	Checking return flow rate of injectors with engine running	337
3.5	Checking return flow rate of injectors at starter speed	340
3.6	Removing and installing injectors	342
3.7	Installing high-pressure lines	346
3.8	Checking fuel pressure regulating valve N276	348
3.9	Checking low pressure fuel system	349
3.10	Removing and installing fuel pressure regulating valve N276	352
3.11	Removing and installing fuel pressure sender G247	354
3.12	Removing and installing fuel rail	356
4	Intake manifold	360
4.1	Assembly overview - intake manifold with attachments	360
4.2	Removing and installing throttle valve module J338	362
4.3	Removing and installing intake manifold	363
5	Air filter	368
5.1	Assembly overview - air filter	368
5.2	Removing and installing air filter housing	370
5.3	Removing and installing air mass meter G70	372
5.4	Checking changeover flap for intake air preheater	373
5.5	Removing and installing changeover flap for intake air preheater	374
6	Lambda probe and pressure differential sender	377
6.1	Removing and installing Lambda probe G391 with Lambda probe heater Z191	377
6.2	Removing and installing pressure difference sender G5051	378
7	Engine control unit J623	380
7.1	Reading and clearing engine control unit fault memory	380
7.2	Adapting functions and components	380
7.3	Removing and installing engine control unit J623 with no anti-theft device, all vehicles apart from Jetta from MY 2011	381
7.4	Removing and installing engine control unit J623 with anti-theft device, all vehicles apart from Jetta from MY 2011	383
7.5	Removing and installing engine control unit J623, only Jetta from MY 2011	387
26	- Exhaust system	390
1	Front exhaust pipe with particulate filter	390
1.1	Assembly overview - front exhaust pipe with particulate filter	390
1.2	Removing and installing particulate filter	393
2	Silencer	400
2.1	Silencer, Jetta, Golf Variant	400
2.2	Aligning exhaust system free of stress	401
2.3	Installation position and specified torque of clamp	402
3	Exhaust gas temperature regulation	405
3.1	Assembly overview - exhaust gas temperature regulation	405
3.2	Removing and installing exhaust gas temperature sender 1 G235	406
3.3	Removing and installing exhaust gas temperature sender 3 G495	408
3.4	Removing and installing exhaust gas temperature sender 4 G648	410
4	Exhaust gas recirculation	413
4.1	Assembly overview - exhaust gas recirculation	413
4.2	Removing and installing exhaust gas recirculation cooler	415
4.3	Checking changeover for exhaust gas recirculation cooler	418
4.4	Checking exhaust gas recirculation cooler for leaks	419
4.5	Cleaning exhaust gas recirculation system	424
28	- Glow plug system	432
1	Checking glow plug system	432
1.1	Automatic glow period control unit J179	432



1.2	Removing and installing glow plugs	432
1.3	Removing and installing automatic glow period control unit J179	435