

001 - Basic equipment, Low (AW0)	1-28
1. Basic equipment, Low (AW0)	1
2. Onboard supply control unit, Fuse 1 in fuse holder A, Fuse 4 in fuse holder A, Fuse holder B	2
3. Ignition/starter switch, Onboard supply control unit, Terminal 50 voltage supply relay, Converter box	3
4. Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	4
5. Onboard supply control unit, Fuse holder C	5
6. Onboard supply control unit, Terminal 75 voltage supply relay 1, Fuse holder C	6
7. Onboard supply control unit, Left fog light bulb, Right fog light bulb, Left side light bulb, Front left headlight, Front left turn signal bulb	7
8. Switch and instrument illumination regulator, Onboard supply control unit, Front right headlight, Right side light bulb, Front right turn signal bulb	8
9. Light switch, Fog light switch, Rear fog light switch, Onboard supply control unit, Fog light warning lamp, Automatic control of lights warning lamp	9
10. Onboard supply control unit, Rear left fog light bulb, Left tail light, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb, Right reversing light bulb	10
11. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, Rear lid central locking motor, Number plate light	11
12. Onboard supply control unit, Right tail light, Rear right turn signal bulb, Right brake light bulb, Additional brake light bulb, Tank filler flap locking motor	12
13. Reversing light switch, Onboard supply control unit, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb	13
14. Turn signal switch, Headlight dipper and flasher switch, Left steering column switch, Cruise control system switch, Cruise control system (CCS) SET button, Onboard supply control unit	14
15. Intermittent wiper switch, Washer pump switch (automatic wash/wipe and headlight washer system), Airbag coil connector and return ring with slip ring, Onboard supply control unit	15
16. Airbag coil connector and return ring with slip ring, Steering angle sender, Onboard supply control unit	16
17. Hazard warning lights button, Onboard supply control unit, Indicator lamp for hazard warning light, Windscreen wiper motor, Left washer jet heater element, Right washer jet heater element	17
18. Bonnet contact switch, Horn or dual tone horn, Onboard supply control unit, Heated rear window	18
19. Onboard supply control unit, Front interior light, Luggage compartment light, Front passenger reading light, Interior light with switch-off delay, Driver side reading light, Left centre reading light, Right centre reading light	19
20. Glove compartment light switch, Onboard supply control unit, Glove compartment light, Rear left reading light, Rear right reading light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Rear interior light	20
21. Brake light switch, Blocking diode, Onboard supply control unit, Cigarette lighter illumination bulb, Cigarette lighter, 12 V socket	21
22. Fresh air blower switch, Heater control unit, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower, Fresh air and air recirculation flap control motor	22
23. Immobiliser reader coil, Handbrake warning switch, Brake fluid level warning contact, Immobiliser control unit, Onboard supply control unit, Dash panel insert	23
24. Front left brake pad wear sender, Onboard supply control unit, Fuel pump control unit, Dash panel insert, Rear fog light warning lamp	24
25. Oil pressure switch, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit, Dash panel insert	25
26. Onboard supply control unit, Dash panel insert	26
27. Onboard supply control unit, Dash panel insert	27
28. Onboard supply control unit	28
002 - Convenience system, Low (AW0)	29-46
1. Convenience system, Low (AW0)	29
2. Battery, Fuse 4 in fuse holder A, Fuse holder B, Fuse 25 on fuse holder B, Fuse holder C	30
3. Fuse holder C	31
4. Front left window regulator switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Front right window regulator switch in driver door, Childproof lock button, Driver door control unit	32
5. Rear lid remote release button, Driver side interior locking button for central locking system, Driver door control unit, Onboard supply control unit, Button illumination bulb	33
6. Mirror adjustment switch, Mirror adjustment changeover switch, Exterior mirror heater button, Fold-in mirror switch, Driver door control unit, Onboard supply control unit, Mirror adjustment switch illumination bulb	34
7. Driver door control unit, Onboard supply control unit, Driver side exterior mirror, Driver side mirror adjustment motor	35
8. Driver door contact switch. Driver side central locking lock unit. Onboard supply control unit.	36

Driver door central locking motor	
9. Window regulator switch in front passenger door, Front passenger door contact switch, Front passenger side central locking lock unit, Front passenger door control unit, Onboard supply control unit, Front passenger seat central locking motor, Front passenger side window regulator motor	37
10. Front passenger side interior locking button for central locking system, Onboard supply control unit, Front passenger side turn signal repeater bulb, Front passenger side exterior mirror	38
11. Rear lid handle release button, Rear central switch for interior locking, Rear lid lock unit, Onboard supply control unit, Rear lid central locking motor	39
12. Onboard supply control unit, Tank filler flap locking motor, Luggage compartment light	40
13. Rear left window regulator switch, in door, Rear left door control unit, Onboard supply control unit, Rear left window regulator motor	41
14. Rear left door contact switch, Rear left central locking lock unit, Onboard supply control unit, Rear left door central locking motor, lock	42
15. Rear right window regulator switch, in door, Rear right door control unit, Onboard supply control unit, Rear right window regulator motor	43
16. Rear right door contact switch, Rear right central locking lock unit, Rear right door control unit, Onboard supply control unit, Rear right door central locking motor, lock	44
17. Sliding sunroof adjustment regulator, Button 1 for tilting roof, Bonnet contact switch, Sliding sunroof adjustment control unit, Onboard supply control unit, Sliding sunroof motor	45
18. Terminal 15 voltage supply relay, Onboard supply control unit, Data bus diagnostic interface, Terminal 15 voltage supply relay 2, Automatic anti-dazzle interior mirror	46
003 - Basic equipment, High (AW1)	47-74
1. Basic equipment, High (AW1)	47
2. Wiper motor switch-over relay 1, Wiper motor switch-over relay 2, Onboard supply control unit, Fuse 1 in fuse holder A, Fuse 4 in fuse holder A, Fuse holder B	48
3. Onboard supply control unit, Terminal 15 voltage supply relay 2, Fuse holder B, Fuse holder C	49
4. Onboard supply control unit, Fuse holder C	50
5. Onboard supply control unit, Terminal 75 voltage supply relay 1, Right fog light bulb, Right cornering light bulb, Fuse holder C	51
6. Onboard supply control unit, Left fog light bulb, Left cornering light bulb, Left daytime running light bulb, Left side light bulb, Front left headlight, Front left turn signal bulb, Left headlight range control motor	52
7. Switch and instrument illumination regulator, Headlight range control regulator, Onboard supply control unit, Front right headlight, Right side light bulb, Front right turn signal bulb, Right headlight range control motor	53
8. Light switch, Fog light switch, Rear fog light switch, Onboard supply control unit, Fog light warning lamp, Automatic control of lights warning lamp	54
9. Onboard supply control unit, Rear left fog light bulb, Right tail light bulb, Left tail light, Left tail light bulb, Rear left turn signal bulb, Left brake light bulb, Right reversing light bulb	55
10. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, Rear lid central locking motor, Number plate light	56
11. Brake light switch, Onboard supply control unit, Right tail light, Rear right turn signal bulb, Right brake light bulb, Additional brake light bulb	57
12. Reversing light switch, Driver door control unit, Front passenger door control unit, Onboard supply control unit, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb, Tank filler flap locking motor	58
13. Right steering column switch, Intermittent wiper switch, Intermittent wiper regulator, Washer pump switch (automatic wash/wipe and headlight washer system), Onboard supply control unit, Steering column electronics control unit	59
14. Ignition/starter switch, Turn signal switch, Headlight dipper and flasher switch, Left steering column switch, Cruise control system switch, Cruise control system (CCS) SET button, Onboard supply control unit, Steering column electronics control unit	60
15. Airbag coil connector and return ring with slip ring, Onboard supply control unit, Steering column electronics control unit	61
16. Glove compartment light switch, Bonnet contact switch, Onboard supply control unit, Windscreen wiper motor, Glove compartment light, Left washer jet heater element, Right washer jet heater element	62
17. Horn or dual tone horn, Dual tone horn relay, Heated rear window relay, Onboard supply control unit, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Heated rear window	63
18. Onboard supply control unit, Front interior light, Luggage compartment light, Right centre reading light, Automatic anti-dazzle interior mirror	64
19. Hazard warning lights button, Onboard supply control unit, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Rear interior light	65
20. Blocking diode, Onboard supply control unit, Cigarette lighter illumination bulb, Cigarette lighter. 12 V socket. DC/AC converter with socket. 12 V - 230 V	66

21. Fresh air blower switch, Heater control unit, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower, Fresh air and air recirculation flap control motor	67
22. Immobiliser reader coil, Handbrake warning switch, Brake fluid level warning contact, Immobiliser control unit, Onboard supply control unit, Dash panel insert	68
23. Fuel system pressurisation pump, Front left brake pad wear sender, Onboard supply control unit, Fuel pump control unit, Dash panel insert	69
24. Oil pressure switch, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit, Dash panel insert	70
25. Onboard supply control unit, Dash panel insert	71
26. Onboard supply control unit, Data bus diagnostic interface, Dash panel insert	72
27. Onboard supply control unit, Data bus diagnostic interface	73
28. Onboard supply control unit, Data bus diagnostic interface	74
004 - Convenience system, High (AW1)	75-93
1. Convenience system, High (AW1)	75
2. Battery, Fuse 1 in fuse holder A, Fuse 4 in fuse holder A, Fuse 25 on fuse holder B, Fuse holder C	76
3. Front left window regulator switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Front right window regulator switch in driver door, Childproof lock button, Driver door control unit	77
4. Rear lid remote release button, Driver side interior locking button for central locking system, Driver door control unit, Central locking SAFELock function warning lamp	78
5. Mirror adjustment switch, Mirror adjustment changeover switch, Exterior mirror heater button, Fold-in mirror switch, Fuel tank flap release button, Driver door control unit, Mirror adjustment switch illumination bulb	79
6. Driver door control unit, Driver side exterior mirror, Driver side fold-in mirror motor, Driver side mirror adjustment motor	80
7. Driver door contact switch, Driver side central locking lock unit, Driver door control unit, Driver door central locking motor	81
8. Window regulator switch in front passenger door, Front passenger door contact switch, Front passenger side central locking lock unit, Front passenger door control unit, Front passenger seat central locking motor, Front passenger side window regulator motor	82
9. Front passenger door control unit, Front passenger side exterior mirror, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor	83
10. Interior monitoring deactivation switch, Front passenger side interior locking button for central locking system, Deactivation button for vehicle inclination sender, Front passenger door control unit, Onboard supply control unit, Front interior light	84
11. Rear lid handle release button, Luggage compartment light switch, Rear lid lock unit, Onboard supply control unit, Tank filler flap locking motor, Rear lid electric opener motor, Luggage compartment light	85
12. Interior monitoring sensor, Vehicle inclination sender, Alarm horn, Onboard supply control unit	86
13. Rear left window regulator switch, in door, Rear left door control unit, Onboard supply control unit, Rear left window regulator motor	87
14. Rear central switch for interior locking, Rear left door contact switch, Rear left central locking lock unit, Rear left door control unit, Onboard supply control unit, Rear left door central locking motor, lock	88
15. Rear right window regulator switch, in door, Rear right door control unit, Onboard supply control unit, Rear right window regulator motor	89
16. Rear right door contact switch, Rear right central locking lock unit, Rear right door control unit, Onboard supply control unit, Rear right door central locking motor, lock	90
17. Sliding sunroof adjustment regulator, Button 1 for tilting roof, Sliding sunroof adjustment control unit, Onboard supply control unit, Sliding sunroof motor	91
18. Bonnet contact switch, Onboard supply control unit, Terminal 15 voltage supply relay 2, Automatic anti-dazzle interior mirror	92
19. Onboard supply control unit	93
005 - Earthing concept	94-120
1. Earthing concept	94
2. Earth strap, battery - body, Earth point, in front left footwell	95
3. Earth connection, in rear right door wiring harness	96
4. Earth point, lower part of right A-pillar, Earth connection 3, in seat heating wiring harness, Earth connection, in rear right door wiring harness, Earth connection 1, in main wiring harness, Earth connection 14, in main wiring harness	97
5. Earth connection 3, in seat heating wiring harness, Earth connection 1, in main wiring harness, Earth connection 14, in main wiring harness	98
6. Earth connection 3, in seat heating wiring harness, Earth connection 4, in seat heating wiring harness. Earth connection 1. in main wiring harness	99

7. Diagnostic connection, Earth connection 1, in main wiring harness	100
8. Earth connection 1, in main wiring harness, Earth connection 23, in main wiring harness	101
9. Earth connection 23, in main wiring harness	102
10. Earth point, on right in engine compartment, Earth point, on right A-pillar	103
11. Earth point (audio), front below centre console	104
12. Earth connection 1, in engine compartment wiring harness, Earth connection 2, in engine compartment wiring harness, Earth point, on left headlight	105
13. Earth connection 1, in engine compartment wiring harness, Earth connection 2, in engine compartment wiring harness, Earth connection 3, in engine compartment wiring harness	106
14. Earth connection 1, in engine compartment wiring harness, Earth connection 2, in engine compartment wiring harness	107
15. Earth connection, in driver door wiring harness, Earth connection 21, in main wiring harness	108
16. Earth point, lower part of left A-pillar, Earth connection 1, in seat heating wiring harness, Earth connection, in external mirror wiring harness, Earth connection, in driver door wiring harness, Earth connection 2, in main wiring harness, Earth connection 21, in main wiring harness, Earth point, on top end of steering column	109
17. Earth connection 1, in seat adjustment wiring harness, Earth connection 1, in seat heating wiring harness, Earth connection 2, in main wiring harness, Earth connection 21, in main wiring harness	110
18. Earth connection 1, in seat heating wiring harness, Earth connection 2, in main wiring harness	111
19. Earth connection 2, in main wiring harness	112
20. Earth connection 2, in main wiring harness, Earth connection 3, in main wiring harness, Earth connection 24, in main wiring harness	113
21. Earth connection 24, in main wiring harness	114
22. Earth connection, in roof wiring harness, Earth connection 24, in main wiring harness	115
23. Earth point, on left in engine compartment	116
24. Earth connection 1, in engine compartment wiring harness	117
25. Earth connection 1, in rear wiring harness, Earth point, rear left side panel, Earth connection 1, in hybrid system wiring harness	118
26. Earth connection 1, in rear wiring harness, Earth connection, in number plate wiring harness, Earth point 2, left in engine compartment	119
27. Earth point 1, in rear right side panel, Earth point 2, in rear right side panel	120
006 - 1.6l petrol engine , CFNA,CFNB	121-140
1. 1.6l petrol engine , CFNA,CFNB	121
2. Battery, Starter, Alternator, Fuse 1 in fuse holder A, Fuse 4 in fuse holder A, Fuse holder B	122
3. Main relay, Onboard supply control unit, Fuse holder B	123
4. Onboard supply control unit, Fuse holder B	124
5. Onboard supply control unit, Terminal 15 voltage supply relay 2, Terminal 50 voltage supply relay	125
6. Fuse holder C	126
7. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump relay, Fuel supply relay, Fuse holder C	127
8. Engine control unit	128
9. Engine control unit, Spark plug connector, Spark plugs	129
10. Accelerator position sender, Accelerator position sender 2, Throttle valve drive for electric throttle, Throttle valve module, Engine control unit	130
11. Hall sender, Knock sensor 1, Coolant temperature sender, Engine control unit	131
12. Engine speed sender, Intake air temperature sender, Intake manifold pressure sender, Engine control unit, Activated charcoal filter solenoid valve 1	132
13. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	133
14. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	134
15. Brake light switch, Brake pedal switch, Onboard supply control unit, Engine control unit	135
16. Clutch position sender, Onboard supply control unit, Engine control unit	136
17. Radiator outlet coolant temperature sender, Onboard supply control unit, Engine control unit	137
18. Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface	138
19. Fuel gauge, Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Onboard supply control unit, Alternator warning lamp, Coolant temperature and coolant shortage warning lamp, Cruise control system warning lamp, Reserve fuel warning lamp, Electronic power control fault lamp	139
20. Oil pressure switch, Control unit in dash panel insert, Onboard supply control unit	140
007 - Electromechanical steering	141-142
1. Electromechanical steering	141
2. Steering angle sender, Steering moment sender, Power steering control unit, Data bus diagnostic interface, Fuse 3 in fuse holder A, Fuse 14 on fuse holder C, Electromechanical power steering motor	142
008 - Dual clutch gearbox 02E	143-148

1. Dual clutch gearbox 02E	143
2. Mechatronic unit for dual clutch gearbox	144
3. Gearbox input speed sender, Clutch temperature sender, Mechatronic unit for dual clutch gearbox	145
4. Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox	146
5. Selector lever sensors control unit, Selector lever display illumination bulb, Selector lever lock solenoid, Selector lever position display	147
6. Control unit in dash panel insert, Data bus diagnostic interface	148
009 - Dual clutch gearbox 0AM	149-153
1. Dual clutch gearbox 0AM	149
2. Engine control unit, Mechatronic unit for dual clutch gearbox	150
3. Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox	151
4. Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Selector lever display illumination bulb, Selector lever position display	152
5. Power and control electronics for electric drive, Control unit in dash panel insert, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox	153
010 - Air conditioning system , (9AP),(KH6)	154-158
1. Air conditioning system , (9AP),(KH6)	154
2. High-pressure sender, Air conditioning system control unit	155
3. Footwell vent temperature sender, Potentiometer for left temperature flap control motor, Evaporator output temperature sender, Air conditioning system control unit, Temperature flap control motor	156
4. Centre vent temperature sender, Potentiometer for air distribution flap control motor, Air conditioning system control unit, Air conditioner compressor regulating valve, Air distribution flap control motor	157
5. Fresh air blower switch, Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	158
011 - Climatronic , (9AK),(AW1)	159-165
1. Climatronic , (9AK),(AW1)	159
2. Battery, Terminal 15 voltage supply relay 2	160
3. High-pressure sender, Climatronic control unit	161
4. Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender, Left footwell vent temperature sender, Evaporator temperature sensor, Climatronic control unit	162
5. Potentiometer for defroster flap control motor, Potentiometer for left temperature flap control motor, Right footwell vent temperature sender, Climatronic control unit, Defroster flap control motor, Left temperature flap control motor	163
6. Potentiometer for centre flap servomotor, Potentiometer for right temperature flap control motor, Potentiometer for fresh air/recirculated air, air flow flap control motor, Climatronic control unit, Centre flap control motor, Right temperature flap control motor, Fresh air/recirculated air, air flow flap control motor	164
7. Fresh air blower control unit, Climatronic control unit, Onboard supply control unit, Air conditioner compressor regulating valve, Fresh air blower	165
012 - Anti-lock brake system (ABS)	166-172
1. Anti-lock brake system (ABS)	166
2. Battery, Onboard supply control unit, Terminal 15 voltage supply relay 2	167
3. Traction control system switch, ABS control unit	168
4. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	169
5. Tyre Pressure Loss Indicator button, ABS control unit	170
6. Front left brake pad wear sender, Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface	171
7. Handbrake warning switch, Brake fluid level warning contact, Buzzer and gong, Control unit in dash panel insert, ABS warning lamp, Brake system warning lamp, ESP and TCS warning lamp	172
013 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) and electronic stabilisation program (ESP)	173-179
1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) and electronic stabilisation program (ESP)	173
2. Battery, Terminal 15 voltage supply relay 2, Fuse holder C	174
3. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	175
4. Lateral acceleration sender, Yaw rate sender, ESP sensor unit, Vacuum sender, ABS control unit	176
5. Tyre Pressure Loss Indicator button, ABS control unit	177
6. Onboard supply control unit, Data bus diagnostic interface	178
7. Handbrake warning switch, Brake fluid level warning contact, Front left brake pad wear sender, Buzzer and gong, Control unit in dash panel insert, ABS warning lamp, Brake system warning lamp, ESP and TCS warning lamp, Tyre Pressure Loss Indicator warning lamp	179
014 - Front and rear parking aid (PDC)	180-186

1. Front and rear parking aid (PDC)	180
2. Rear parking aid warning buzzer, Parking aid control unit, Terminal 15 voltage supply relay 2	181
3. Parking aid button, Parking aid control unit, Parking aid warning lamp, Button illumination bulb	182
4. Front centre left parking aid sender, Front left parking aid sender, Front parking aid warning buzzer, Parking aid control unit	183
5. Front right parking aid sender, Front centre right parking aid sender, Parking aid control unit	184
6. Rear left parking aid sender, Rear centre left parking aid sender, Parking aid control unit	185
7. Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	186
015 - Trailer coupling	187-189
1. Trailer coupling	187
2. Trailer detector control unit, Onboard supply control unit, Fuse 24 on fuse holder B, Fuse holder C	188
3. Trailer detector control unit, Onboard supply control unit, Trailer socket	189
016 - Radio navigation system RNS 315	190-194
1. Radio navigation system RNS 315	190
2. Fuse 4 in fuse holder A, Fuse holder C	191
3. Control unit with display for radio and navigation, Onboard supply control unit, Front left treble loudspeaker, Front left bass loudspeaker	192
4. Control unit with display for radio and navigation, Front right treble loudspeaker, Front right bass loudspeaker	193
5. Control unit with display for radio and navigation, Left aerial module, Right aerial module, Satellite aerial, Heated rear window	194
017 - Mobile telephone systems	195-200
1. Mobile telephone systems	195
2. Telephone transmitter and receiver unit, Fuse holder B, Fuse holder C	196
3. Operating unit for preparation for mobile telephone, Onboard supply control unit, Telephone transmitter and receiver unit	197
4. Telephone transmitter and receiver unit	198
5. Control unit with display for radio and navigation, Radio, Roof aerial, Telephone transmitter and receiver unit, Telephone microphone, GPS aerial, Telephone aerial	199
6. Onboard supply control unit, Data bus diagnostic interface	200
018 - Headlight washer system , (AW1)	201-203
1. Headlight washer system , (AW1)	201
2. Headlight washer system relay, Onboard supply control unit, Headlight washer system pump	202
3. Intermittent wiper switch, Washer pump switch (automatic wash/wipe and headlight washer system), Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	203
019 - Heated seats	204-208
1. Heated seats	204
2. Onboard supply control unit, Fuse holder B, Fuse holder C	205
3. Driver seat temperature sensor, Heated front seats control unit, Heated backrest for driver seat	206
4. Front passenger seat temperature sensor, Heated front seats control unit, Heated backrest for front passenger seat	207
5. Heated driver seat regulator, Heated front passenger seat regulator	208
020 - Electric seat adjustment with no memory function	209-212
1. Electric seat adjustment with no memory function	209
2. Fuse holder A, Fuse 53 on fuse holder C	210
3. Seat longitudinal adjustment button, Rake adjustment button, Seat height adjustment button, Backrest adjustment button, Driver seat longitudinal adjustment motor, Driver seat backrest adjustment motor, Driver seat height adjustment motor, Seat rake adjustment motor	211
4. Driver seat lumbar support adjustment switch, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	212
021 - Adjustable lumbar support	213-215
1. Adjustable lumbar support	213
2. Fuse 1 in fuse holder A, Fuse 4 in fuse holder A, Fuse 53 on fuse holder C	214
3. Driver seat lumbar support adjustment switch, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	215
022 - Compass	216-219
1. Compass	216
2. Battery, Voltage stabiliser, Fuse holder B, Fuse holder C	217
3. Magnetic field sender for compass, Onboard supply control unit, Data bus diagnostic interface	218
4. Multifunction indicator, Control unit in dash panel insert, Data bus diagnostic interface	219
023 - Airbag systems with no rear side airbags	220-225
1. Airbag systems with no rear side airbags	220
2. Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag deactivated warning lamp, Driver side airbag igniter	221
3. Driver side belt switch. Front passenger side belt switch. Airbaa control unit. Front passenger	222

side airbag igniter 1, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	
4. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Side airbag igniter on driver side, Side airbag igniter on front passenger side	223
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on front passenger side, Airbag control unit	224
6. Airbag control unit, Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface, Dash panel insert	225
024 - Airbag systems with rear side airbags	226-233
1. Airbag systems with rear side airbags	226
2. Airbag coil connector and return ring with slip ring, Airbag control unit, Steering column electronics control unit, Front passenger side airbag deactivated warning lamp, Driver side airbag igniter	227
3. Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag igniter 1	228
4. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit, Side airbag igniter on front passenger side	229
5. Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on front passenger side, Rear side airbag igniter on front passenger side	230
6. Driver side belt switch, Front passenger side belt switch, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on front passenger side, Airbag control unit	231
7. Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	232
8. Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface, Airbag warning lamp	233
025 - Front camera for driver assist systems , (8G1)	234-236
1. Front camera for driver assist systems , (8G1)	234
2. Fuse 13 on fuse holder C, Front interior light, Automatic anti-dazzle interior mirror	235
3. Steering column electronics control unit, Data bus diagnostic interface, Automatic anti-dazzle interior mirror	236
026 - 6-speed automatic gearbox with Tiptronic	237-243
1. 6-speed automatic gearbox with Tiptronic	237
2. Multifunction switch, Automatic gearbox control unit, Onboard supply control unit, Fuse 20 on fuse holder C	238
3. Automatic gearbox control unit, Solenoid valve 1, Solenoid valve 2, Solenoid valve 3, Solenoid valve 4, Solenoid valve 5, Solenoid valve 6, Solenoid valve 9, Solenoid valve 10	239
4. Gearbox oil temperature sender, Gearbox input speed sender, Gearbox output speed sender, Automatic gearbox control unit, Fuse 25 on fuse holder C	240
5. Tiptronic switch, Selector lever locked in position P switch, Automatic gearbox control unit	241
6. Tiptronic switch, Automatic gearbox control unit, Selector lever display illumination bulb, Selector lever lock solenoid, Selector lever position display	242
7. Multifunction indicator, Control unit in dash panel insert, Data bus diagnostic interface	243
027 - Multimedia socket MEDIA-IN	244-245
1. Multimedia socket MEDIA-IN	244
2. Control unit with display for radio and navigation, Onboard supply control unit, Multimedia system control unit, Radio, Connection for external audio sources	245
028 - Radiator fan	246-248
1. Radiator fan	246
2. Battery, Main relay	247
3. Radiator fan control unit, Radiator fan, Right radiator fan, Radiator fan 2	248
029 - Actuator for structure-borne sound	249-251
1. Actuator for structure-borne sound	249
2. Control unit for structure-borne sound, Actuator for structure-borne sound, Fuse 15 on fuse holder C	250
3. Onboard supply control unit, Data bus diagnostic interface	251
030 - Auxiliary heater with remote control and air conditioning system	252-259
1. Auxiliary heater with remote control and air conditioning system	252
2. Battery, Heated rear window relay, Fuse 4 in fuse holder A	253
3. Fresh air blower relay, Terminal 75 voltage supply relay 1, Terminal 15 voltage supply relay 2	254
4. Auxiliary heater control unit, Fuel shut-off valve, Heater coolant shut-off valve, Combustion air blower, Fuel pre-heating heater element	255
5. Temperature sensor, Auxiliary heater control unit, Glow plug with flame monitor, Circulation pump	256
6. Overheating sensor, Auxiliary heater control unit, Roof aerial, Remote control receiver for auxiliary coolant heater, Auxiliary heater aerial, Metering pump	257
7. Air conditioning system control unit	258

8. Multifunction display call-up button, Reset button, Control unit in dash panel insert, Steering column electronics control unit, Data bus diagnostic interface	259
031 - Auxiliary heater with remote control and air conditioning system , (9AK)	260-265
1. Auxiliary heater with remote control and air conditioning system , (9AK)	260
2. Auxiliary heater control unit, Heater coolant shut-off valve, Combustion air blower, Fuel pre-heating heater element	261
3. Temperature sensor, Auxiliary heater control unit, Glow plug with flame monitor, Circulation pump	262
4. Overheating sensor, Auxiliary heater control unit, Roof aerial, Remote control receiver for auxiliary coolant heater, Auxiliary heater aerial, Metering pump	263
5. Climatronic control unit	264
6. Multifunction display call-up button, Reset button, Control unit in dash panel insert, Steering column electronics control unit, Data bus diagnostic interface	265
032 - Air conditioning system with manual regulation , (9AB)	266-270
1. Air conditioning system with manual regulation , (9AB)	266
2. High-pressure sender, Air conditioning system control unit	267
3. Air conditioning system control unit	268
4. Air conditioning system control unit, Air conditioner compressor regulating valve	269
5. Fresh air blower switch, Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	270
033 - Manually controlled heater , (9AA)	271-274
1. Manually controlled heater , (9AA)	271
2. Fuse 4 in fuse holder A, Fuse holder C	272
3. Heater control unit, Onboard supply control unit	273
4. Fresh air blower switch, Heater control unit, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower, Fresh air and air recirculation flap control motor	274
034 - "Volkswagen Sound" sound system	275-279
1. "Volkswagen Sound" sound system	275
2. Voltage stabiliser, Amplifier, Fuse holder B	276
3. Control unit with display for radio and navigation, Radio, Amplifier, Front left treble loudspeaker, Front left bass loudspeaker, Front left mid-range loudspeaker	277
4. Amplifier, Front right treble loudspeaker, Front right bass loudspeaker, Front right mid-range loudspeaker	278
5. Onboard supply control unit, Data bus diagnostic interface, Amplifier, Rear left bass loudspeaker, Rear right bass loudspeaker, Subwoofer	279
035 - "Keyless access" locking and starting system , (AW0)	280-286
1. "Keyless access" locking and starting system , (AW0)	280
2. Fuse holder B, Fuse holder C	281
3. Terminal 15 voltage supply relay 2, Terminal 50 voltage supply relay	282
4. Entry and start authorisation control unit, Rear bumper aerial for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	283
5. Driver door exterior handle contact sensor, Front passenger door exterior handle contact sensor, Entry and start authorisation control unit, Onboard supply control unit, Driver side aerial for entry and start system, Passenger side aerial for entry and start system	284
6. Starter button, Entry and start authorisation control unit, Control unit for electronic steering column lock, Converter box	285
7. Immobiliser reader coil, Multifunction indicator, Immobiliser control unit, Dash panel insert	286
036 - "Keyless access" locking and starting system , (AW1)	287-293
1. "Keyless access" locking and starting system , (AW1)	287
2. Fuse holder B, Fuse holder C	288
3. Terminal 15 voltage supply relay 2, Terminal 50 voltage supply relay	289
4. Entry and start authorisation control unit, Rear bumper aerial for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	290
5. Driver door exterior handle contact sensor, Front passenger door exterior handle contact sensor, Entry and start authorisation control unit, Onboard supply control unit, Driver side aerial for entry and start system, Passenger side aerial for entry and start system	291
6. Starter button, Entry and start authorisation control unit, Control unit for electronic steering column lock	292
7. Immobiliser reader coil, Multifunction indicator, Immobiliser control unit, Data bus diagnostic interface, Dash panel insert	293
037 - Multifunction steering wheel , (AW0)	294-298
1. Multifunction steering wheel , (AW0)	294
2. Airbag coil connector and return ring with slip ring, Airbag control unit, Driver side airbag initiator. Fuse 35 on fuse holder C	295

3. Airbag coil connector and return ring with slip ring, Horn plate, Multifunction steering wheel control unit, Onboard supply control unit	296
4. Multifunction buttons on left in steering wheel, Multifunction steering wheel control unit, Onboard supply control unit	297
5. Multifunction indicator, Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface, Diagnostic connection	298
038 - Multifunction steering wheel , (AW1)	299-304
1. Multifunction steering wheel , (AW1)	299
2. Steering column electronics control unit	300
3. Cruise control system switch, Airbag coil connector and return ring with slip ring, Horn plate, Airbag control unit, Multifunction steering wheel control unit, Steering column electronics control unit, Driver side airbag igniter	301
4. Ignition/starter switch, Multifunction steering wheel control unit, Steering column electronics control unit, Ignition key withdrawal lock solenoid	302
5. Multifunction steering wheel control unit	303
6. Multifunction indicator, Control unit in dash panel insert, Data bus diagnostic interface	304
039 - Basic equipment, Low (AW0) , (8Q1),(B1P)	305-332
1. Basic equipment, Low (AW0) , (8Q1),(B1P)	305
2. Onboard supply control unit, Fuse 1 in fuse holder A, Fuse 4 in fuse holder A, Fuse holder B	306
3. Ignition/starter switch, Onboard supply control unit, Terminal 50 voltage supply relay, Converter box	307
4. Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	308
5. Onboard supply control unit, Fuse holder C	309
6. Onboard supply control unit, Terminal 75 voltage supply relay 1, Fuse holder C	310
7. Onboard supply control unit, Left fog light bulb, Right fog light bulb, Left side light bulb, Front left headlight, Front left turn signal bulb, Left headlight range control motor	311
8. Switch and instrument illumination regulator, Headlight range control regulator, Onboard supply control unit, Front right headlight, Right side light bulb, Front right turn signal bulb, Right headlight range control motor	312
9. Light switch, Fog light switch, Rear fog light switch, Onboard supply control unit, Fog light warning lamp	313
10. Onboard supply control unit, Rear left fog light bulb, Left tail light, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb, Right reversing light bulb	314
11. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, Rear lid central locking motor, Number plate light	315
12. Onboard supply control unit, Right tail light, Rear right turn signal bulb, Right brake light bulb, Additional brake light bulb, Tank filler flap locking motor	316
13. Reversing light switch, Onboard supply control unit, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb	317
14. Turn signal switch, Headlight dipper and flasher switch, Left steering column switch, Cruise control system switch, Cruise control system (CCS) SET button, Onboard supply control unit	318
15. Intermittent wiper switch, Washer pump switch (automatic wash/wipe and headlight washer system), Airbag coil connector and return ring with slip ring, Onboard supply control unit	319
16. Airbag coil connector and return ring with slip ring, Steering angle sender, Onboard supply control unit	320
17. Hazard warning lights button, Onboard supply control unit, Indicator lamp for hazard warning light, Windscreen wiper motor, Left washer jet heater element, Right washer jet heater element	321
18. Bonnet contact switch, Horn or dual tone horn, Onboard supply control unit, Heated rear window	322
19. Glove compartment light switch, Onboard supply control unit, Front interior light, Luggage compartment light, Glove compartment light, Left centre reading light, Right centre reading light	323
20. Onboard supply control unit, Rear left reading light, Rear right reading light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Rear interior light	324
21. Brake light switch, Blocking diode, Onboard supply control unit, Cigarette lighter illumination bulb, Cigarette lighter, 12 V socket	325
22. Fresh air blower switch, Heater control unit, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower, Fresh air and air recirculation flap control motor	326
23. Immobiliser reader coil, Handbrake warning switch, Brake fluid level warning contact, Immobiliser control unit, Onboard supply control unit, Dash panel insert	327
24. Front left brake pad wear sender, Onboard supply control unit, Fuel pump control unit, Dash panel insert, Rear fog light warning lamp	328
25. Oil pressure switch, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit, Dash panel insert	329
26. Right steering column switch, Multifunction display call-up button, Multifunction display memory switch, Multifunction indicator, Onboard supply control unit, Dash panel insert	330
27. Onboard supply control unit. Dash panel insert	331

28. Onboard supply control unit	332
040 - Radio system , (8DM),(8UY)	333-338
1. Radio system , (8DM),(8UY)	333
2. Fuse 4 in fuse holder A, Fuse holder C	334
3. Onboard supply control unit, Data bus diagnostic interface, Radio	335
4. Radio, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	336
5. Radio, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	337
6. Radio, Aerial, Radio aerial 2, Left aerial module, Right aerial module, Heated rear window	338
041 - Radio navigation system RNS 510 , (7T4)	339-344
1. Radio navigation system RNS 510 , (7T4)	339
2. Fuse 4 in fuse holder A, Fuse holder C	340
3. Control unit with display for radio and navigation, Onboard supply control unit, Data bus diagnostic interface	341
4. Control unit with display for radio and navigation, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	342
5. Control unit with display for radio and navigation, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	343
6. Control unit with display for radio and navigation, Roof aerial, Aerial, GPS aerial, Radio aerial 2, Left aerial module, Right aerial module, Heated rear window	344
042 - Vehicle location system	345-346
1. Vehicle location system	345
2. Control unit in dash panel insert, Control unit for vehicle location system, Fuse 14 on fuse holder C, Fuse 20 on fuse holder C	346
043 - Radiator fan with no air conditioning system	347-348
1. Radiator fan with no air conditioning system	347
2. Radiator fan thermal switch, Fuse 27 on fuse holder B, Radiator fan	348
044 - Electrically adjustable and heated exterior mirror , (AW1)	349-352
1. Electrically adjustable and heated exterior mirror , (AW1)	349
2. Driver door control unit, Fuse holder C	350
3. Driver door control unit, Driver side exterior mirror	351
4. Front passenger door control unit, Front passenger side exterior mirror	352
045 - Anti-theft alarm system , (7AZ)	353-356
1. Anti-theft alarm system , (7AZ)	353
2. Fuse holder C	354
3. Onboard supply control unit	355
4. Onboard supply control unit	356
046 - Auxiliary air heater (PTC) , CAVA,CAVD,CAXA,CBZB,CMSB,CTHA,CTHD	357-360
1. Auxiliary air heater (PTC) , CAVA,CAVD,CAXA,CBZB,CMSB,CTHA,CTHD	357
2. Main relay, Low heat output relay, Auxiliary air heater element	358
3. High heat output relay, Auxiliary air heater element	359
4. Engine control unit	360
047 - Cigarette lighter and 12 V sockets	361-365
1. Cigarette lighter and 12 V sockets	361
2. Terminal 75 voltage supply relay 1, Fuse holder B	362
3. Terminal 15 voltage supply relay, Terminal 15 voltage supply relay 2	363
4. Blocking diode, Cigarette lighter, 12 V socket, 12 V socket 2	364
5. Electric socket warning lamp, DC/AC converter with socket, 12 V - 230 V, DC/AC converter with socket, 12 V - 115 V	365
048 - Tail light cluster with LED , (8SL)	366-370
1. Tail light cluster with LED , (8SL)	366
2. Onboard supply control unit, Right tail light bulb, Left tail light, Left tail light bulb, Left tail light 2, Right tail light 2, Left reversing light bulb, Right reversing light bulb, Rear left side marker bulb, Left brake and turn signal bulb	367
3. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, Rear lid central locking motor, Number plate light	368
4. Brake light switch, Onboard supply control unit, Right tail light bulb, Right tail light, Additional brake light bulb, Rear right side marker bulb, Right brake and turn signal bulb	369
5. Light switch, Onboard supply control unit	370
049 - Tail light cluster with LED	371-375
1. Tail light cluster with LED	371
2. Onboard supply control unit, Right tail light bulb, Left tail light, Left tail light bulb, Left tail light 2, Rear left turn signal bulb, Right tail light 2, Left brake light bulb, Left reversing light bulb, Right reversing light bulb	372
3. Rear lid handle release button. Rear lid lock unit. Onboard supply control unit. Rear lid central	373

locking motor, Number plate light	
4. Brake light switch, Onboard supply control unit, Right tail light bulb, Right tail light, Rear right turn signal bulb, Additional brake light bulb, Rear right side marker bulb	374
5. Onboard supply control unit	375
050 - Gas discharge headlights (bi-xenon) with automatic headlight range control, cornering light, LED daytime running lights	376-383
1. Gas discharge headlights (bi-xenon) with automatic headlight range control, cornering light, LED daytime running lights	376
2. Onboard supply control unit, Terminal 15 voltage supply relay 2, Fuse holder B, Fuse holder C	377
3. Left gas discharge bulb control unit, Onboard supply control unit, Left gas discharge (xenon) bulb, Left fog light bulb, Left LED module for daytime running light and side light, Front left turn signal bulb, Left static cornering light	378
4. Onboard supply control unit, Output module for left headlight, Left headlight range control motor, Left dip beam screen motor, Left dynamic cornering light control motor	379
5. Rear left vehicle level sender, Onboard supply control unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control	380
6. Onboard supply control unit, Output module for right headlight, Right headlight range control motor, Right dip beam screen motor, Right dynamic cornering light control motor	381
7. Right gas discharge bulb control unit, Onboard supply control unit, Right gas discharge (xenon) bulb, Right fog light bulb, Right LED module for daytime running light and side light, Front right turn signal bulb, Right static cornering light	382
8. Switch and instrument illumination regulator, Onboard supply control unit	383
051 - Reversing camera (Rear Assist)	384-385
1. Reversing camera (Rear Assist)	384
2. Control unit with display for radio and navigation, Reversing camera	385
052 - 1.4l petrol engine , CAXA,CMSB	386-406
1. 1.4l petrol engine , CAXA,CMSB	386
2. Battery, Starter, Alternator, Onboard supply control unit, Fuse 1 in fuse holder A, Fuse 4 in fuse holder A, Fuse holder B	387
3. Main relay, Additional coolant pump relay, Onboard supply control unit, Fuse holder B, Coolant circulation pump	388
4. Fuel gauge sender, Fuel system pressurisation pump, Onboard supply control unit, Fuel pump control unit, Fuse holder B	389
5. Onboard supply control unit, Terminal 15 voltage supply relay 2, Terminal 50 voltage supply relay	390
6. Fuse holder C	391
7. Engine control unit, Fuse holder C	392
8. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug connector, Spark plugs	393
9. Accelerator position sender, Accelerator position sender 2, Throttle valve module, Engine control unit	394
10. Knock sensor 1, Radiator outlet coolant temperature sender, Fuel pressure sender, Engine control unit	395
11. Hall sender, Intake air temperature sender, Intake manifold pressure sender, Engine control unit	396
12. Engine speed sender, Charge pressure sender, Intake air temperature sender 2, Engine control unit	397
13. Engine control unit	398
14. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	399
15. Lambda probe, Lambda probe after catalytic converter, Engine control unit	400
16. Brake light switch, Brake pedal switch, Clutch position sender, Onboard supply control unit, Engine control unit	401
17. Brake servo pressure sensor, Onboard supply control unit, Engine control unit, Vacuum pump for brakes	402
18. Onboard supply control unit, Engine control unit	403
19. Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface	404
20. Fuel gauge, Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Onboard supply control unit, Alternator warning lamp, Coolant temperature and coolant shortage warning lamp, Cruise control system warning lamp, Reserve fuel warning lamp, Electronic power control fault lamp	405
21. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert, Onboard supply control unit	406
053 - 1.4l petrol engine , CTHA,CTHD	407-427
1. 1.4l petrol engine , CTHA,CTHD	407
2. Battery, Starter, Alternator, Onboard supply control unit, Fuse 1 in fuse holder A, Fuse 4 in fuse holder A, Fuse holder B	408
3. Main relav. Additional coolant pump relav. Onboard supply control unit. Fuse holder B. Coolant	409

circulation pump	
4. Fuel gauge sender, Fuel system pressurisation pump, Onboard supply control unit, Fuel pump control unit, Fuse holder B	410
5. Onboard supply control unit, Terminal 15 voltage supply relay 2, Terminal 50 voltage supply relay	411
6. Fuse holder C	412
7. Engine control unit, Fuse holder C	413
8. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug connector, Spark plugs	414
9. Accelerator position sender, Accelerator position sender 2, Throttle valve module, Engine control unit	415
10. Intake air temperature sender, Knock sensor 1, Intake manifold pressure sender, Radiator outlet coolant temperature sender, Fuel pressure sender, Engine control unit	416
11. Hall sender, Intake air temperature sender 3, Intake manifold pressure sender 3, Regulating flap potentiometer, Engine control unit, Regulating flap control unit, Regulating flap position control motor	417
12. Engine speed sender, Charge pressure sender, Intake air temperature sender 2, Engine control unit	418
13. Engine control unit	419
14. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	420
15. Lambda probe, Lambda probe after catalytic converter, Engine control unit	421
16. Brake light switch, Brake pedal switch, Clutch position sender, Onboard supply control unit, Engine control unit	422
17. Brake servo pressure sensor, Onboard supply control unit, Engine control unit, Vacuum pump for brakes	423
18. Onboard supply control unit, Engine control unit	424
19. Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface	425
20. Fuel gauge, Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Onboard supply control unit, Alternator warning lamp, Coolant temperature and coolant shortage warning lamp, Cruise control system warning lamp, Reserve fuel warning lamp, Electronic power control fault lamp	426
21. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert, Onboard supply control unit	427
054 - Convenience system with rear manually operated window regulators , (4R8)	428-443
1. Convenience system with rear manually operated window regulators , (4R8)	428
2. Battery, Fuse 1 in fuse holder A, Fuse 4 in fuse holder A, Fuse holder C	429
3. Front left window regulator switch, Front right window regulator switch in driver door, Window regulator relay, Open window regulator relay, driver side, Close window regulator relay, driver side	430
4. Window regulator switch in front passenger door, Open window regulator relay, front passenger side, Close window regulator relay, front passenger side	431
5. Driver door control unit, Driver side window regulator motor	432
6. Rear lid remote release button, Driver side interior locking button for central locking system, Driver door control unit, Central locking SAFELOCK function warning lamp	433
7. Mirror adjustment switch, Mirror adjustment changeover switch, Exterior mirror heater button, Fold-in mirror switch, Fuel tank flap release button, Driver door control unit, Mirror adjustment switch illumination bulb	434
8. Driver door control unit, Driver side exterior mirror, Driver side fold-in mirror motor, Driver side mirror adjustment motor	435
9. Driver door contact switch, Driver side central locking lock unit, Driver door control unit, Driver door central locking motor	436
10. Front passenger door contact switch, Front passenger side central locking lock unit, Front passenger door control unit, Front passenger seat central locking motor, Front passenger side window regulator motor	437
11. Front passenger door control unit, Front passenger side exterior mirror, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor	438
12. Front passenger side interior locking button for central locking system, Rear left door contact switch, Rear left central locking lock unit, Front passenger door control unit, Onboard supply control unit, Rear left door central locking motor, lock	439
13. Rear right door contact switch, Rear right central locking lock unit, Onboard supply control unit, Rear right door central locking motor, lock	440
14. Rear lid handle release button, Luggage compartment light switch, Rear lid lock unit, Onboard supply control unit, Tank filler flap locking motor, Rear lid electric opener motor, Luggage compartment light	441
15. Bonnet contact switch, Onboard supply control unit	442
16. Onboard supply control unit	443
055 - Adjustable seat	444-447

1. Adjustable seat	444
2. Fuse holder A	445
3. Seat longitudinal adjustment button, Rake adjustment button, Seat height adjustment button, Backrest adjustment button, Driver seat longitudinal adjustment motor, Driver seat backrest adjustment motor, Driver seat height adjustment motor, Seat rake adjustment motor	446
4. Backrest adjustment button 2, Front passenger seat backrest adjustment motor	447
056 - Emergency call module	448-451
1. Emergency call module	448
2. Emergency assistance call button, Onboard supply control unit, Emergency call module control unit and communication unit, Telephone microphone	449
3. Mobile telephone operating electronics control unit, Control unit with display for radio and navigation, Emergency call module control unit and communication unit, Roof aerial, GPS aerial, Telephone aerial	450
4. Onboard supply control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit	451
057 - Radio systems/navigation systems	452-458
1. Radio systems/navigation systems	452
2. Fuse 4 in fuse holder A, Fuse holder C	453
3. Control unit with display for radio and navigation, Onboard supply control unit, Radio	454
4. Control unit with display for radio and navigation, Radio, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	455
5. Control unit with display for radio and navigation, Radio, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	456
6. Control unit with display for radio and navigation, Radio, Roof aerial, Aerial, GPS aerial, Radio aerial 2, Left aerial module, Right aerial module, Satellite aerial, Digital radio aerial, Heated rear window	457
7. Control unit in dash panel insert, Onboard supply control unit	458
058 - Radio systems/navigation systems , (I6E)	459-464
1. Radio systems/navigation systems , (I6E)	459
2. Fuse 4 in fuse holder A, Fuse holder C	460
3. Control unit with display for radio and navigation, Onboard supply control unit, Steering column electronics control unit, Radio	461
4. Control unit with display for radio and navigation, Radio, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	462
5. Control unit with display for radio and navigation, Radio, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	463
6. Radio, Aerial, Radio aerial 2, Left aerial module, Right aerial module, Heated rear window	464
059 - Radio system , (8DU),(I6F)	465-469
1. Radio system , (8DU),(I6F)	465
2. Data bus diagnostic interface, Radio	466
3. Radio, Rear right treble loudspeaker, Rear right bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	467
4. Radio, Rear left treble loudspeaker, Rear left bass loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	468
5. Onboard supply control unit, Radio, Aerial, Right aerial module, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Heated rear window	469