

001 - 2.0l diesel engine , CVCA,DEBA,DELA,(AW0)	1-24
1. 2.0l diesel engine , CVCA,DEBA,DELA,(AW0)	1
2. Battery, Starter, Alternator with voltage regulator, Fuse holder B	2
3. Main relay, Fuse holder B, Fuse 14 on fuse holder B	3
4. Low heat output relay, High heat output relay, Fuse holder B	4
5. Ignition/starter switch, Onboard supply control unit, Converter box	5
6. Terminal 15 voltage supply relay, Onboard supply control unit, Starter relay 1, Fuse holder C	6
7. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel pump relay, Fuse holder C	7
8. Engine/motor control unit	8
9. Cylinder 1 combustion chamber pressure sender, Cylinder 2 combustion chamber pressure sender, Cylinder 3 combustion chamber pressure sender, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3	9
10. Cylinder 4 combustion chamber pressure sender, Automatic glow period control unit, Engine/motor control unit, Glow plug 4	10
11. Accelerator pedal module, Ambient temperature sensor, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	11
12. Oil pressure switch for reduced oil pressure, Lambda probe, Water separator sender, Engine/motor control unit, Valve for oil pressure control, Coolant valve for cylinder head, Lambda probe heater	12
13. Charge pressure sender, Radiator outlet coolant temperature sender, Exhaust gas pressure sensor 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Charge air temperature sender after charge air cooler, Engine/motor control unit	13
14. Air mass meter, Pressure differential sender, Engine/motor control unit, Exhaust flap control unit, Charge air cooling pump	14
15. NOx sender, NOx sender 2, Control unit for NOx sender, Engine/motor control unit, Control unit for NOx sender 2	15
16. Engine/motor control unit, Control unit for NOx sender 2, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve, Auxiliary pump for heating	16
17. Throttle valve module, Exhaust gas recirculation valve 2, Fuel pressure sender, Engine/motor control unit, Camshaft control valve 1, Fuel metering valve	17
18. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine speed sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Engine/motor control unit, Charge pressure control solenoid valve, Heater element for crankcase breather	18
19. Delivery unit for reducing agent metering system, Intake air temperature sender, Coolant temperature sender, Fuel temperature sender, Temperature sensor 2 for exhaust recirculation, Reducing agent quality sensor, Engine/motor control unit, Relay for reducing agent metering system	19
20. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent metering system, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	20
21. Brake light switch, ABS control unit, Engine/motor control unit, Injector for reducing agent	21
22. Brake light switch, Hall sender, Clutch position sender, Position sender for charge pressure positioner, Engine/motor control unit	22
23. Rev counter, Speedometer, Oil level and oil temperature sender, Fuel pressure sender for low pressure, Control unit in dash panel insert, Engine/motor control unit, Alternator warning lamp, Coolant temperature and coolant shortage warning lamp, Cruise control system warning lamp, Electronic power control fault lamp	23
24. Oil pressure switch, Fuel gauge, Coolant temperature gauge, Control unit in dash panel insert, Reserve fuel warning lamp	24
002 - 2.0l diesel engine with start/stop system , CUUA,CUUB,(AW1)	25-45
1. 2.0l diesel engine with start/stop system , CUUA,CUUB,(AW1)	25
2. Battery, Starter, Alternator with voltage regulator, Fuse holder B, Fuse 14 on fuse holder B	26
3. Main relay, Fuse holder B	27
4. Low heat output relay, High heat output relay, Fuse holder B	28
5. Start/Stop operation button, Onboard supply control unit, Start/Stop operation warning lamp, Button illumination bulb	29
6. Terminal 15 voltage supply relay, Onboard supply control unit, Starter relay 1, Starter relay 2, Fuse holder C	30
7. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel pump relay, Fuse holder C	31
8. Cylinder 3 combustion chamber pressure sender, Automatic glow period control unit, Engine/motor control unit, Glow plug 3	32
9. Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 4	33
10. Accelerator pedal module, Ambient temperature sensor, Lambda probe, Accelerator position sender, Accelerator position sender 2. Engine/motor control unit. Radiator blind control motor	34

11. Lambda probe after catalytic converter, Engine/motor control unit, Valve for oil pressure control, Lambda probe heater, Lambda probe 1 heater after catalytic converter	35
12. Charge pressure sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Charge air temperature sender after charge air cooler, Engine/motor control unit, Coolant valve for cylinder head	36
13. Exhaust gas pressure sensor 1, Pressure differential sender, Engine/motor control unit, Exhaust flap control unit	37
14. Air mass meter, Control unit for NOx sender, Engine/motor control unit, Charge air cooling pump	38
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve, Fuel metering valve, Auxiliary pump for heating	39
16. Throttle valve module, Exhaust gas recirculation valve 2, Engine speed sender, Fuel pressure sender, Engine/motor control unit, Camshaft control valve 1	40
17. Exhaust gas recirculation valve 1, Hall sender, Position sender for charge pressure positioner, Engine/motor control unit, Charge pressure control solenoid valve, Heater element for crankcase breather	41
18. Oil pressure switch for reduced oil pressure, Intake air temperature sender, Coolant temperature sender, Fuel temperature sender, Exhaust gas temperature sender 1, Temperature sensor 2 for exhaust recirculation, Engine/motor control unit	42
19. Brake light switch, Clutch position sender, ABS control unit, Engine/motor control unit	43
20. Rev. counter, Speedometer, Oil level and oil temperature sender, Control unit in dash panel insert, Data bus diagnostic interface, Alternator warning lamp, Coolant temperature and coolant shortage warning lamp, Cruise control system warning lamp, Electronic power control fault lamp	44
21. Oil pressure switch, Fuel gauge, Coolant temperature gauge, Oil level and oil temperature sender, Control unit in dash panel insert, Coolant temperature and coolant shortage warning lamp, Reserve fuel warning lamp	45
003 - 2.5l petrol engine, Low (AW0) , CBTA,CCCA,(AW0)	46-62
1. 2.5l petrol engine, Low (AW0) , CBTA,CCCA,(AW0)	46
2. Battery, Starter, Alternator with voltage regulator, Voltage regulator, Fuse holder B, Fuse 14 on fuse holder B	47
3. Main relay, Fuse holder B	48
4. Ignition/starter switch, Converter box, Fuse holder B	49
5. Ignition/starter switch, Starter button, Terminal 15 voltage supply relay, Entry and start authorisation control unit, Control unit for electronic steering column lock, Starter relay 1	50
6. Terminal 15 voltage supply relay, Fuse holder C	51
7. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel pump relay, Engine/motor control unit	52
8. Engine/motor control unit, Ignition coil 1 with output stage, Spark plug connector, Spark plugs	53
9. Engine/motor control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Ignition coil 5 with output stage, Spark plug connector	54
10. Knock sensor 1, Coolant temperature sender, Knock sensor 2, Throttle valve drive for electric throttle, Throttle valve module, Engine/motor control unit	55
11. Hall sender, Intake air temperature sender, Intake manifold pressure sender, Radiator outlet coolant temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1	56
12. Engine speed sender, Hall sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5	57
13. Brake light switch, Accelerator pedal module, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Accelerator position sender, Lambda probe after catalytic converter, Accelerator position sender 2, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	58
14. Brake light switch, Clutch position sender, Onboard supply control unit, Engine/motor control unit	59
15. Onboard supply control unit	60
16. Rev. counter, Speedometer, Control unit in dash panel insert, Alternator warning lamp, Coolant temperature and coolant shortage warning lamp, Cruise control system warning lamp, Electronic power control fault lamp	61
17. Oil pressure switch, Fuel gauge, Coolant temperature gauge, Oil level and oil temperature sender, Control unit in dash panel insert, Reserve fuel warning lamp	62
004 - 2.5l petrol engine, High (AW1) , CBUA,CCCA	63-78
1. 2.5l petrol engine, High (AW1) , CBUA,CCCA	63
2. Battery, Starter, Alternator with voltage regulator, Fuse holder B	64
3. Main relay, Fuse holder B, Fuse 14 on fuse holder B	65
4. Secondary air pump relay, Starter relay 1, Fuse holder B, Secondary air pump motor	66
5. Fuel pump relay, Terminal 15 voltage supply relay, Fuse holder C	67
6. Fuel delivery unit. Fuel system pressurisation pump. Engine/motor control unit	68

7. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug connector, Spark plugs	69
8. Coolant temperature sender, Radiator outlet coolant temperature sender, Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Ignition coil 5 with output stage, Spark plug connector	70
9. Throttle valve module, Knock sensor 1, Throttle valve drive for electric throttle, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1	71
10. Hall sender, Intake air temperature sender, Knock sensor 2, Intake manifold pressure sender, Sender 1 for secondary air pressure, Engine/motor control unit	72
11. Engine speed sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5	73
12. Accelerator pedal module, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Accelerator position sender, Lambda probe after catalytic converter, Accelerator position sender 2, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	74
13. Brake light switch, Oil pressure switch for reduced oil pressure, Lambda probe 2 before catalytic converter, Lambda probe 2, Clutch position sender, Engine/motor control unit, Secondary air inlet valve, Lambda probe heater 2	75
14. Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	76
15. Speedometer, Control unit in dash panel insert, Data bus diagnostic interface, Alternator warning lamp, Cruise control system warning lamp, Electronic power control fault lamp	77
16. Oil pressure switch, Fuel gauge, Coolant temperature gauge, Rev. counter, Oil level and oil temperature sender, Control unit in dash panel insert, Coolant temperature and coolant shortage warning lamp, Reserve fuel warning lamp	78
005 - 2.0l petrol engine, Low (AW0) , CBPA,(AW0)	79-95
1. 2.0l petrol engine, Low (AW0) , CBPA,(AW0)	79
2. Battery, Starter, Alternator with voltage regulator, Fuse 1 on fuse holder A, Fuse 4 on fuse holder A, Fuse holder B	80
3. Main relay, Fuse holder B	81
4. Converter box, Fuse holder B	82
5. Ignition/starter switch, Converter box	83
6. Terminal 15 voltage supply relay, Starter relay 1, Fuse holder C	84
7. Fuel delivery unit, Fuel system pressurisation pump, Fuel pump relay, Fuse holder C	85
8. Engine/motor control unit	86
9. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Spark plug connector, Spark plugs	87
10. Accelerator pedal module, Accelerator position sender 2, Throttle valve drive for electric throttle, Throttle valve module, Engine/motor control unit	88
11. Engine speed sender, Hall sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Engine/motor control unit	89
12. Lambda probe 1 before catalytic converter, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Lambda probe heater	90
13. Brake light switch, Brake pedal switch, Lambda probe 1 after catalytic converter, Clutch position sender, Engine/motor control unit, Lambda probe 1 heater after catalytic converter	91
14. Radiator outlet coolant temperature sender, Vacuum pump relay, Engine/motor control unit, Fuel system diagnostic pump, Vacuum pump for brakes	92
15. Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	93
16. Oil pressure switch, Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Onboard supply control unit, Alternator warning lamp, Cruise control system warning lamp, Electronic power control fault lamp	94
17. Fuel gauge, Control unit in dash panel insert, Onboard supply control unit, Coolant temperature and coolant shortage warning lamp, Reserve fuel warning lamp	95
006 - 2.0l petrol engine, High (AW1) , CBPA,(AW1)	96-110
1. 2.0l petrol engine, High (AW1) , CBPA,(AW1)	96
2. Battery, Starter, Alternator with voltage regulator, Fuse 1 on fuse holder A, Fuse 4 on fuse holder A, Fuse holder B	97
3. Main relay, Fuse holder B	98
4. Terminal 15 voltage supply relay, Starter relay 1, Fuse holder B	99
5. Onboard supply control unit, Fuse holder C	100
6. Fuel delivery unit, Fuel system pressurisation pump, Fuel pump relay, Fuse holder C	101
7. Engine/motor control unit	102
8. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Spark plug connector, Spark plugs	103
9. Accelerator pedal module, Accelerator position sender 2, Throttle valve drive for electric throttle, Throttle valve module, Engine/motor control unit	104
10. Engine speed sender. Hall sender. Intake air temperature sender. Knock sensor 1. Coolant	105

temperature sender, Intake manifold pressure sender, Engine/motor control unit	
11. Lambda probe 1 before catalytic converter, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Lambda probe heater	106
12. Brake light switch, Brake pedal switch, Lambda probe 1 after catalytic converter, Clutch position sender, Engine/motor control unit, Lambda probe 1 heater after catalytic converter	107
13. Radiator outlet coolant temperature sender, Vacuum pump relay, Engine/motor control unit, Fuel system diagnostic pump, Vacuum pump for brakes	108
14. Engine/motor control unit	109
15. Oil pressure switch, Fuel gauge, Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Alternator warning lamp, Coolant temperature and coolant shortage warning lamp, Cruise control system warning lamp, Reserve fuel warning lamp, Electronic power control fault lamp	110
007 - 2.0l petrol engine, High (AW1) , CKJA	111-126
1. 2.0l petrol engine, High (AW1) , CKJA	111
2. Battery, Starter, Alternator with voltage regulator, Fuse 1 in fuse holder A, Fuse 4 in fuse holder A, Fuse holder B	112
3. Main relay, Fuse holder B	113
4. Terminal 15 voltage supply relay, Starter relay 1, Fuse holder B	114
5. Fuse holder C	115
6. Fuel delivery unit, Fuel system pressurisation pump, Fuel pump relay, Electric fuel pump 2 relay	116
7. Engine control unit, Spark plug connector, Spark plugs	117
8. Accelerator pedal module, Throttle valve module, Accelerator position sender 2, Throttle valve drive for electric throttle, Throttle valve module, Engine control unit	118
9. Hall sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	119
10. Engine speed sender, Lambda probe, Lambda probe after catalytic converter, Engine control unit	120
11. Engine control unit, Cold start valve, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1	121
12. Brake light switch, Brake pedal switch, Clutch position sender, Vacuum pump relay, Engine control unit, Vacuum pump for brakes	122
13. Radiator outlet coolant temperature sender, Data bus diagnostic interface, Engine control unit	123
14. Onboard supply control unit, Data bus diagnostic interface	124
15. Rev. counter, Speedometer, Oil level and oil temperature sender, Control unit in dash panel insert, Alternator warning lamp, Cruise control system warning lamp, Electronic power control fault lamp	125
16. Oil pressure switch, Fuel gauge, Coolant temperature gauge, Control unit in dash panel insert, Coolant temperature and coolant shortage warning lamp, Reserve fuel warning lamp	126
008 - 1.4l petrol engine , CTHA,CTHD,(AW1)	127-142
1. 1.4l petrol engine , CTHA,CTHD,(AW1)	127
2. Battery, Starter, Alternator with voltage regulator, Fuse 1 on fuse holder A, Fuse 4 on fuse holder A, Fuse holder B	128
3. Main relay, Additional coolant pump relay, Fuse holder B, Coolant circulation pump	129
4. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump control unit, Starter relay 1, Fuse holder B	130
5. Terminal 15 voltage supply relay, Engine/motor control unit, Fuse holder C	131
6. Engine/motor control unit, Ignition coil 1 with output stage, Spark plug connector, Spark plugs	132
7. Knock sensor 1, Radiator outlet coolant temperature sender, Engine/motor control unit, Ignition coil 2 with output stage, Spark plug connector	133
8. Accelerator pedal module, Throttle valve module, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	134
9. Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender, Intake air temperature sender 3, Intake manifold pressure sender 3, Regulating flap potentiometer, Engine/motor control unit, Regulating flap control unit, Regulating flap position control motor	135
10. Engine speed sender, Charge pressure sender, Hall sender, Intake air temperature sender 2, Engine/motor control unit	136
11. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	137
12. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	138
13. Brake light switch, Clutch position sender, Engine/motor control unit, Vacuum pump for brakes	139
14. Brake servo pressure sensor, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	140
15. Control unit in dash panel insert, Data bus diagnostic interface, Alternator warning lamp	141
16. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert	142
009 - 1.6l diesel engine with start/stop system , CAYC,(AW1)	143-163
1. 1.6l diesel engine with start/stop system . CAYC.(AW1)	143

2. Battery, Starter, Alternator with voltage regulator, Fuse holder B	144
3. Main relay, Fuse holder B, Fuse 14 on fuse holder B	145
4. Low heat output relay, High heat output relay, Onboard supply control unit, Fuse holder B	146
5. Start/Stop operation button, Terminal 15 voltage supply relay, Onboard supply control unit, Start/Stop operation warning lamp, Button illumination bulb	147
6. Fuel pump relay, Electric fuel pump 2 relay, Fuse holder C	148
7. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuse holder C	149
8. Engine control unit, Starter relay 1, Starter relay 2	150
9. Engine control unit	151
10. Automatic glow period control unit, Engine control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	152
11. Accelerator pedal module, Intake manifold sender, Charge pressure sender, Intake air temperature sender, Accelerator position sender, Accelerator position sender 2, Engine control unit, Coolant circulation pump 2	153
12. Lambda probe, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Engine control unit	154
13. Engine control unit	155
14. Coolant temperature sender, Air mass meter, Fuel temperature sender, Engine control unit, Injector, cylinder 1, Injector, cylinder 2	156
15. Exhaust gas recirculation valve 1, Engine speed sender, Engine control unit, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve, Fuel metering valve	157
16. Hall sender, Fuel pressure sender, Position sender for charge pressure positioner, Throttle valve module, Engine control unit, Charge pressure control solenoid valve	158
17. Brake light switch, Engine control unit, Heater element relay, Exhaust gas recirculation cooler changeover valve	159
18. Clutch position sender, ABS control unit, Engine control unit	160
19. Speedometer, Control unit in dash panel insert, Data bus diagnostic interface, Alternator warning lamp, Glow period warning lamp	161
20. Fuel gauge, Coolant temperature gauge, Rev. counter, Oil level and oil temperature sender, Control unit in dash panel insert, Oil pressure warning lamp, Cruise control system warning lamp, Exhaust emissions warning lamp, Electronic power control fault lamp, Diesel particulate filter warning lamp	162
21. Oil pressure switch, Control unit in dash panel insert, Driving program warning light	163
010 - 1.4l petrol engine , CNLA,CRJA,(AW1)	164-183
1. 1.4l petrol engine , CNLA,CRJA,(AW1)	164
2. Battery, Voltage converter, Power and control electronics for electric drive, Battery monitor control unit, High-voltage wiring harness for drive motor, Fuse 1 on fuse holder A, Fuse holder B, Terminal 30 wiring junction, Three-phase current drive	165
3. Main relay, Fuse holder B, Fuse 3 on fuse holder A	166
4. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel pump control unit, Fuse holder B	167
5. Button for extended electric drive mode, Secondary air pump relay, Terminal 15 voltage supply relay, Button illumination bulb, Fuse holder B, Secondary air pump motor	168
6. Engine/motor control unit, Fuse holder C	169
7. Engine/motor control unit	170
8. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector, Spark plugs	171
9. Oil pressure switch for reduced oil pressure, Vacuum pump relay, Engine/motor control unit, Vacuum pump for brakes, Coolant pump for high-temperature circuit, Coolant pump for low-temperature circuit	172
10. Position sender for charge pressure positioner, Throttle valve module, Engine/motor control unit, Charge pressure positioner	173
11. Intake manifold sender, Hall sender, Intake manifold pressure sender, Fuel pressure sender, Intake air temperature sender 2, Hall sender 3, Sender 1 for secondary air pressure, Engine/motor control unit, Secondary air inlet valve	174
12. Charge pressure sender, Engine speed sender, Charge pressure sender, Intake air temperature sender, Knock sensor 1, Engine/motor control unit, Control unit for fuel tank leak detection, Fuel system diagnostic pump	175
13. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Pressure regulator for disengagement clutch	176
14. Lambda probe 1 before catalytic converter, Lambda probe, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	177
15. Accelerator pedal module, Lambda probe 2 before catalytic converter, Accelerator position sender, Lambda probe 2. Accelerator position sender 2. Engine/motor control unit	178

16. Brake light switch, Brake pedal switch, Radiator outlet coolant temperature sender, Brake servo pressure sensor, Tank pressure sensor, Engine/motor control unit	179
17. Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit, Electric drive warning lamp	180
18. Oil pressure switch, Fuel gauge, Coolant temperature gauge, Rev counter, Speedometer, Control unit in dash panel insert, Onboard supply control unit, Alternator warning lamp, Coolant temperature and coolant shortage warning lamp, Cruise control system warning lamp, Reserve fuel warning lamp, Electronic power control fault lamp	181
19. Tank flap release, Fuel tank cap detection switch, Oil level and oil temperature sender, Onboard supply control unit, Tank filler flap locking motor	182
20. Rear lid remote release button, Pressure equalisation button, Driver door control unit, Onboard supply control unit	183
011 - Front camera for driver assist systems , (6K2),(6K3),(6K5)	184-185
1. Front camera for driver assist systems , (6K2),(6K3),(6K5)	184
2. Adaptive cruise control unit, Isolation relay for powertrain CAN bus, Fuse 13 on fuse holder C	185
012 - 1.8l petrol engine , CPKA,CPRA,(AW0)	186-205
1. 1.8l petrol engine , CPKA,CPRA,(AW0)	186
2. Battery, Starter, Alternator with voltage regulator, Fuse holder B, Fuse 14 on fuse holder B	187
3. Main relay, Fuse holder B	188
4. Secondary air pump relay, Engine component current supply relay, Fuse holder B, Secondary air pump motor	189
5. Ignition/starter switch, Converter box	190
6. Terminal 15 voltage supply relay	191
7. Fuse holder C	192
8. Fuel gauge sender, Fuel system pressurisation pump	193
9. Radiator outlet coolant temperature sender, Engine/motor control unit	194
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector, Spark plugs	195
11. Throttle valve module, Throttle valve drive for electric throttle, Engine/motor control unit, Continued coolant circulation pump, Charge pressure positioner	196
12. Intake manifold sender, Secondary air system, Engine speed sender, Fuel pressure sender, Engine/motor control unit, Secondary air inlet valve	197
13. Charge pressure sender, Hall sender, Knock sensor 1, Coolant temperature sender, Engine/motor control unit	198
14. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve	199
15. Accelerator pedal module, Accelerator position sender 2, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Valve for oil pressure control	200
16. Lambda probe 1 before catalytic converter, Engine/motor control unit, Intake manifold flap valve, Fuel system diagnostic pump, Lambda probe heater	201
17. Brake light switch, Brake pedal switch, Oil pressure switch for reduced oil pressure, Lambda probe 1 after catalytic converter, Clutch position sender, Engine/motor control unit, Lambda probe 1 heater after catalytic converter	202
18. Ambient temperature sensor, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit, Radiator blind control motor	203
19. Fuel gauge, Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Onboard supply control unit, Alternator warning lamp, Coolant temperature and coolant shortage warning lamp, Cruise control system warning lamp, Electronic power control fault lamp	204
20. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert, Onboard supply control unit, Reserve fuel warning lamp	205
013 - 1.6l petrol engine , CFNA,CFNB,CLRA,(AW1)	206-219
1. 1.6l petrol engine , CFNA,CFNB,CLRA,(AW1)	206
2. Battery, Starter, Alternator with voltage regulator, Fuse 1 on fuse holder A, Fuse 4 on fuse holder A, Fuse holder B	207
3. Main relay, Fuse holder B	208
4. Terminal 15 voltage supply relay, Starter relay 1, Fuse holder C	209
5. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel pump relay, Engine/motor control unit, Fuse holder C	210
6. Engine/motor control unit, Spark plug connector, Spark plugs	211
7. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Spark plug connector	212
8. Throttle valve module, Intake manifold sender, Engine speed sender, Hall sender, Intake air temperature sender, Throttle valve drive for electric throttle, Engine/motor control unit	213
9. Knock sensor 1. Coolant temperature sender. Engine/motor control unit. Iniector. cvlinder 1.	214

Injector, cylinder 2, Activated charcoal filter solenoid valve 1	
10. Brake light switch, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Injector, cylinder 3, Injector, cylinder 4, Lambda probe heater, Lambda probe 1 heater after catalytic converter	215
11. Radiator outlet coolant temperature sender, Clutch position sender, Onboard supply control unit, Engine/motor control unit	216
12. Onboard supply control unit, Data bus diagnostic interface	217
13. Oil pressure switch, Rev. counter, Speedometer, Control unit in dash panel insert, Data bus diagnostic interface, Alternator warning lamp, Coolant temperature and coolant shortage warning lamp, Cruise control system warning lamp, Reserve fuel warning lamp, Electronic power control fault lamp	218
14. Fuel gauge, Coolant temperature gauge, Control unit in dash panel insert	219
014 - 1.4l petrol engine , CZCA,CZDA,(AW1)	220-236
1. 1.4l petrol engine , CZCA,CZDA,(AW1)	220
2. Battery, Starter, Alternator with voltage regulator, Fuse 1 in fuse holder A, Fuse 4 in fuse holder A, Fuse holder B	221
3. Main relay, Fuse holder B	222
4. Fuel gauge sender, Fuel system pressurisation pump, Onboard supply control unit, Fuel pump control unit, Starter relay 1, Fuse holder B	223
5. Start/Stop operation button, Terminal 15 voltage supply relay, Onboard supply control unit, Starter relay 2, Start/Stop operation warning lamp, Button illumination bulb	224
6. Vacuum pump relay, Onboard supply control unit, Fuse holder C, Vacuum pump for brakes	225
7. Engine control unit, Fuse holder C	226
8. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug connector, Spark plugs	227
9. Accelerator pedal module, Knock sensor 1, Accelerator position sender, Radiator outlet coolant temperature sender, Accelerator position sender 2, Engine control unit	228
10. Intake manifold sender, Fuel pressure sender, Intake air temperature sender 2, Hall sender 3, Throttle valve module, Engine control unit	229
11. Charge pressure sender, Engine speed sender, Charge pressure sender, Hall sender, Intake air temperature sender, Hall sender 3, Engine control unit, Charge pressure positioner	230
12. Engine control unit, Injector, cylinder 1, Charge air cooling pump	231
13. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine control unit, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Lambda probe 1 heater after catalytic converter	232
14. Brake light switch, Oil pressure switch, Brake servo pressure sensor, Clutch position sender, Engine control unit	233
15. Gearbox neutral position sender, Data bus diagnostic interface, Engine control unit	234
16. Rev. counter, Speedometer, Control unit in dash panel insert, Data bus diagnostic interface, Alternator warning lamp, Cruise control system warning lamp, Electronic power control fault lamp	235
17. Oil pressure switch for reduced oil pressure, Fuel gauge, Coolant temperature gauge, Oil level and oil temperature sender, Control unit in dash panel insert, Coolant temperature and coolant shortage warning lamp, Reserve fuel warning lamp	236
015 - 2.0l diesel engine , CFFB,(AW1)	237-255
1. 2.0l diesel engine , CFFB,(AW1)	237
2. Battery, Starter, Alternator with voltage regulator, Fuse holder B, Fuse 14 on fuse holder B	238
3. Main relay, Fuse holder B	239
4. Low heat output relay, High heat output relay, Starter relay 1, Fuse holder B	240
5. Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	241
6. Fuel gauge sender, Fuel delivery unit, Fuel pump relay, Electric fuel pump 2 relay, Fuse holder C	242
7. Fuel delivery unit, Fuel system pressurisation pump, Engine control unit	243
8. Automatic glow period control unit, Engine control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	244
9. Accelerator pedal module, Intake manifold sender, Engine control unit	245
10. Lambda probe, Exhaust gas temperature sender 1, Engine control unit, Circulation pump	246
11. Coolant temperature sender, Fuel temperature sender, Radiator outlet coolant temperature sender, Engine control unit	247
12. Air mass meter, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	248
13. Exhaust gas recirculation valve 1, Engine speed sender, Position sender for charge pressure positioner, Engine control unit, Fuel pressure regulating valve, Fuel metering valve	249
14. Throttle valve module, Hall sender, Fuel pressure sender, Engine control unit, Charge pressure control solenoid valve, Exhaust gas recirculation cooler changeover valve	250
15. Brake light switch, Clutch position sender, Engine control unit	251
16. ABS control unit, Data bus diagnostic interface, Engine control unit	252
17. Rev. counter, Speedometer, Control unit in dash panel insert, Data bus diagnostic interface, Alternator warning lamp. Glow period warning lamp. Cruise control system warning lamp	253

18. Oil pressure switch, Fuel gauge, Coolant temperature gauge, Oil level and oil temperature sender, Control unit in dash panel insert, Oil pressure warning lamp, Exhaust emissions warning lamp, Electronic power control fault lamp, Diesel particulate filter warning lamp, Driving program warning light	254
19.	255
016 - 2.0l petrol engine , CPLA,CPPA,(AW1)	256-273
1. 2.0l petrol engine , CPLA,CPPA,(AW1)	256
2. Battery, Starter, Alternator with voltage regulator, Main relay, Fuse holder B, Fuse 14 on fuse holder B	257
3. Main relay, Fuse holder B	258
4. Secondary air pump relay, Terminal 15 voltage supply relay, Engine component current supply relay, Fuse holder B, Secondary air pump motor	259
5. Starter relay 1, Starter relay 2, Fuse holder C	260
6. Fuel gauge sender, Fuel system pressurisation pump, Fuse holder C	261
7. Radiator outlet coolant temperature sender, Engine control unit	262
8. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector, Spark plugs	263
9. Throttle valve module, Throttle valve drive for electric throttle, Engine control unit, Continued coolant circulation pump, Charge pressure positioner	264
10. Intake manifold sender, Secondary air system, Engine speed sender, Fuel pressure sender, Engine control unit, Secondary air inlet valve	265
11. Charge pressure sender, Hall sender, Knock sensor 1, Coolant temperature sender, Engine control unit	266
12. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve	267
13. Accelerator pedal module, Accelerator position sender 2, Engine control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Valve for oil pressure control	268
14. Lambda probe 1 before catalytic converter, Engine control unit, Intake manifold flap valve, Fuel system diagnostic pump, Lambda probe heater	269
15. Brake light switch, Brake pedal switch, Oil pressure switch for reduced oil pressure, Lambda probe 1 after catalytic converter, Clutch position sender, Engine control unit, Lambda probe 1 heater after catalytic converter	270
16. Ambient temperature sensor, Data bus diagnostic interface, Engine control unit, Diagnostic connection, Radiator blind control motor	271
17. Oil pressure switch, Fuel gauge, Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Onboard supply control unit, Alternator warning lamp, Coolant temperature and coolant shortage warning lamp, Cruise control system warning lamp, Reserve fuel warning lamp, Electronic power control fault lamp	272
18. Oil level and oil temperature sender, Control unit in dash panel insert, Onboard supply control unit	273
017 - 1.2l petrol engine with start/stop system , CJZD,CYVD,(AW1)	274-289
1. 1.2l petrol engine with start/stop system , CJZD,CYVD,(AW1)	274
2. Battery, Starter, Alternator with voltage regulator, Fuse 1 on fuse holder A, Fuse 4 on fuse holder A, Fuse holder B	275
3. Main relay, Fuse holder B	276
4. Fuel gauge sender, Fuel system pressurisation pump, Onboard supply control unit, Fuel pump control unit, Starter relay 1, Fuse holder B	277
5. Start/Stop operation button, Terminal 15 voltage supply relay, Onboard supply control unit, Starter relay 2, Start/Stop operation warning lamp, Button illumination bulb	278
6. Onboard supply control unit, Fuse holder C	279
7. Engine/motor control unit, Fuse holder C	280
8. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug connector, Spark plugs	281
9. Accelerator pedal module, Knock sensor 1, Accelerator position sender, Radiator outlet coolant temperature sender, Accelerator position sender 2, Engine/motor control unit	282
10. Throttle valve module, Intake manifold sender, Hall sender, Fuel pressure sender, Intake air temperature sender 2, Engine/motor control unit	283
11. Charge pressure sender, Engine speed sender, Charge pressure sender, Intake air temperature sender, Engine/motor control unit, Charge pressure positioner	284
12. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Charge air cooling pump	285
13. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Brake servo pressure sensor, Gearbox neutral position sender, Engine/motor control unit, Lambda probe 1 heater after catalytic converter	286

14. Brake light switch, Clutch position sender, Data bus diagnostic interface, Engine/motor control unit	287
15. Control unit in dash panel insert, Data bus diagnostic interface, Alternator warning lamp	288
16. Oil pressure switch for reduced oil pressure, Fuel gauge, Coolant temperature gauge, Rev. counter, Speedometer, Oil level and oil temperature sender, Control unit in dash panel insert, Coolant temperature and coolant shortage warning lamp, Cruise control system warning lamp, Reserve fuel warning lamp, Electronic power control fault lamp	289
018 - 2.0l diesel engine , CLCA,CLCB,(AW1)	290-308
1. 2.0l diesel engine , CLCA,CLCB,(AW1)	290
2. Battery, Starter, Alternator with voltage regulator, Fuse holder B, Fuse 14 on fuse holder B	291
3. Main relay, Fuse holder B	292
4. Low heat output relay, High heat output relay, Starter relay 1, Fuse holder B	293
5. Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	294
6. Fuel gauge sender, Fuel delivery unit, Fuel pump relay, Electric fuel pump 2 relay, Fuse holder C	295
7. Fuel delivery unit, Fuel system pressurisation pump, Engine/motor control unit	296
8. Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	297
9. Accelerator pedal module, Intake manifold sender, Charge pressure sender, Intake air temperature sender, Engine/motor control unit	298
10. Lambda probe, Exhaust gas temperature sender 1, Engine/motor control unit, Circulation pump	299
11. Coolant temperature sender, Fuel temperature sender, Radiator outlet coolant temperature sender, Engine/motor control unit	300
12. Air mass meter, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	301
13. Exhaust gas recirculation valve 1, Engine speed sender, Position sender for charge pressure positioner, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	302
14. Throttle valve module, Hall sender, Fuel pressure sender, Engine/motor control unit, Charge pressure control solenoid valve, Exhaust gas recirculation cooler changeover valve	303
15. Brake light switch, Clutch position sender, Engine/motor control unit	304
16. ABS control unit, Data bus diagnostic interface, Engine/motor control unit	305
17. Rev. counter, Speedometer, Control unit in dash panel insert, Data bus diagnostic interface, Alternator warning lamp, Glow period warning lamp, Cruise control system warning lamp	306
18. Oil pressure switch, Fuel gauge, Coolant temperature gauge, Oil level and oil temperature sender, Control unit in dash panel insert, Oil pressure warning lamp, Exhaust emissions warning lamp, Electronic power control fault lamp, Diesel particulate filter warning lamp, Driving program warning light	307
19. Control unit in dash panel insert	308
019 - 1.4l petrol engine , CAXA,CMSB,(AW1)	309-324
1. 1.4l petrol engine , CAXA,CMSB,(AW1)	309
2. Battery, Starter, Alternator with voltage regulator, Fuse 1 on fuse holder A, Fuse 4 on fuse holder A, Fuse holder B	310
3. Main relay, Additional coolant pump relay, Fuse holder B, Coolant circulation pump	311
4. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump control unit, Starter relay 1, Fuse holder B	312
5. Terminal 15 voltage supply relay, Engine/motor control unit, Fuse holder C	313
6. Engine/motor control unit, Ignition coil 1 with output stage, Spark plug connector, Spark plugs	314
7. Knock sensor 1, Radiator outlet coolant temperature sender, Engine/motor control unit, Ignition coil 2 with output stage, Spark plug connector	315
8. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Throttle valve module, Engine/motor control unit	316
9. Intake manifold sender, Engine speed sender, Charge pressure sender, Hall sender, Intake air temperature sender, Fuel pressure sender, Intake air temperature sender 2, Engine/motor control unit	317
10. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Fuel pressure regulating valve	318
11. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Injector, cylinder 3, Injector, cylinder 4	319
12. Brake light switch, Clutch position sender, Engine/motor control unit	320
13. Brake servo pressure sensor, Onboard supply control unit, Engine/motor control unit, Vacuum pump for brakes	321
14. Onboard supply control unit, Data bus diagnostic interface	322
15. Fuel gauge, Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Data bus diagnostic interface, Alternator warning lamp, Coolant temperature and coolant shortage warning lamp, Cruise control system warning lamp, Electronic power control fault lamp	323
16. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert, Reserve fuel warning lamp	324

020 - 1.2l petrol engine , CBZB,(AW1)	325-340
1. 1.2l petrol engine , CBZB,(AW1)	325
2. Battery, Starter, Alternator with voltage regulator, Fuse 1 on fuse holder A, Fuse 4 on fuse holder A, Fuse holder B	326
3. Main relay, Fuse holder B	327
4. Terminal 15 voltage supply relay, Low heat output relay, High heat output relay, Fuse holder B, Fuse holder C, Coolant circulation pump	328
5. Fuel gauge sender, Fuel system pressurisation pump, Vacuum pump relay, Fuse holder C	329
6. Fuel pump control unit, Engine control unit	330
7. Engine control unit, Spark plug connector, Spark plugs	331
8. Accelerator pedal module, Throttle valve module, Accelerator position sender, Accelerator position sender 2, Engine control unit	332
9. Gearbox neutral position switch, Hall sender, Knock sensor 1, Coolant temperature sender, Radiator outlet coolant temperature sender, Engine control unit	333
10. Intake manifold sender, Intake air temperature sender, Fuel pressure sender, Position sender for charge pressure positioner, Engine control unit, Charge pressure positioner	334
11. Engine speed sender, Charge pressure sender, Brake servo pressure sensor, Intake air temperature sender 2, Engine control unit, Activated charcoal filter solenoid valve 1, Coolant regulating valve	335
12. Lambda probe 1 after catalytic converter, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve	336
13. Brake light switch, Brake pedal switch, Lambda probe 1 before catalytic converter, Clutch position sender, Engine control unit	337
14. Onboard supply control unit, Data bus diagnostic interface, Engine control unit	338
15. Rev. counter, Speedometer, Control unit in dash panel insert, Onboard supply control unit, Alternator warning lamp, Cruise control system warning lamp, Electronic power control fault lamp	339
16. Oil pressure switch, Fuel gauge, Coolant temperature gauge, Control unit in dash panel insert, Coolant temperature and coolant shortage warning lamp, Reserve fuel warning lamp	340
021 - Basic equipment, Low (AW0) , (AW0)	341-362
1. Basic equipment, Low (AW0) , (AW0)	341
2. Terminal 15 voltage supply relay, Onboard supply control unit, Starter relay 1, Fuse 1 on fuse holder A, Fuse 4 on fuse holder A, Fuse holder B	342
3. Ignition/starter switch, Onboard supply control unit, Converter box, Fuse holder C	343
4. Onboard supply control unit, Fuse holder C	344
5. Onboard supply control unit, Fuse holder C	345
6. Switch and instrument illumination regulator, Onboard supply control unit, Terminal 75 voltage supply relay 1, Left fog light bulb, Right fog light bulb, Front left headlight, Left side light bulb, Front left turn signal bulb	346
7. Light switch, Fog light switch, Onboard supply control unit, Automatic control of lights warning lamp, Front right headlight, Right side light bulb, Front right turn signal bulb	347
8. Light switch, Rear fog light switch, Onboard supply control unit, Fog light warning lamp, Rear left fog light bulb, Left tail light cluster, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb	348
9. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, Right reversing light bulb, Rear lid central locking motor, Number plate light	349
10. Onboard supply control unit, Right tail light cluster, Rear right turn signal bulb, Right brake light bulb, High-level brake light bulb, Tank filler flap locking motor	350
11. Turn signal switch, Headlight dipper and flasher switch, Left steering column switch, Cruise control system switch, Cruise control system (CCS) SET button, Onboard supply control unit	351
12. Reversing light switch, Airbag coil connector and return ring with slip ring, Steering angle sender, Onboard supply control unit	352
13. Onboard supply control unit, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb	353
14. Intermittent wiper switch, Washer pump switch (automatic wash/wipe and headlight washer system), Onboard supply control unit	354
15. Hazard warning lights button, Horn or dual tone horn, Onboard supply control unit, Indicator lamp for hazard warning light, Windscreen wiper motor, Left washer jet heater element, Right washer jet heater element	355
16. Bonnet contact switch, Onboard supply control unit, Front interior light, Front passenger reading light, Interior light with switch-off delay, Driver side reading light, Left centre reading light, Right centre reading light	356
17. Glove compartment light switch, Onboard supply control unit, Luggage compartment light, Glove compartment light, Rear left reading light, Rear right reading light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Rear interior light	357
18. Brake light switch, Blocking diode, Onboard supply control unit, Cigarette lighter illumination bulb, Cigarette lighter, 12 V socket	358
19. Onboard supply control unit. Diagnostic connection. Heated rear window	359

20. Immobiliser reader coil, Oil pressure switch, Handbrake warning switch, Brake fluid level warning contact, Immobiliser control unit, Dash panel insert	360
21. Fuel delivery unit, Windscreen washer fluid level sender, Front left brake pad wear sender, Dash panel insert, Rear fog light warning lamp	361
22. Ambient temperature sensor, Coolant shortage indicator sender, Dash panel insert	362
022 - Convenience system, Low (AW0) , (AW0)	363-377
1. Convenience system, Low (AW0) , (AW0)	363
2. Battery, Terminal 15 voltage supply relay, Fuse 4 on fuse holder A, Fuse holder B, Fuse holder C, Fuse 25 on fuse holder B	364
3. Rear lid remote release button, Button illumination bulb, Fuse holder C	365
4. Front left window regulator switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Front right window regulator switch in driver door, Childproof lock button, Driver door control unit	366
5. Mirror adjustment switch, Mirror adjustment changeover switch, Exterior mirror heater button, Fold-in mirror switch, Driver side interior locking button for central locking system, Driver door control unit	367
6. Mirror adjustment switch, Driver door control unit, Onboard supply control unit, Mirror adjustment switch illumination bulb	368
7. Onboard supply control unit, Blind Spot Monitor warning lamp in left exterior mirror, Driver side exterior mirror, Driver side mirror adjustment motor	369
8. Driver door contact switch, Front passenger door contact switch, Onboard supply control unit, Driver door lock unit, Front passenger door lock unit, Driver door central locking motor, Front passenger door central locking motor	370
9. Window regulator switch in front passenger door, Front passenger door control unit, Onboard supply control unit, Blind Spot Monitor warning lamp in right exterior mirror, Front passenger side turn signal repeater bulb, Passenger side exterior mirror, Front passenger side window regulator motor	371
10. Rear lid handle release button, Rear central switch for interior locking, Front passenger side interior locking button for central locking system, Onboard supply control unit	372
11. Rear lid lock unit, Onboard supply control unit, Alarm horn relay, Rear lid central locking motor, Tank filler flap locking motor, Luggage compartment light	373
12. Rear left window regulator switch, in door, Rear left door contact switch, Rear left door control unit, Onboard supply control unit, Rear left door lock unit, Rear left window regulator motor, Rear left door central locking motor, lock	374
13. Rear right window regulator switch, in door, Rear right door control unit, Onboard supply control unit, Rear right window regulator motor	375
14. Rear right door contact switch, Sliding sunroof adjustment control unit, Onboard supply control unit, Rear right door lock unit, Rear right door central locking motor, lock	376
15. Sliding sunroof adjustment regulator, Button 1 for tilting roof, Bonnet contact switch, Sliding sunroof adjustment control unit, Onboard supply control unit, Data bus diagnostic interface, Sliding sunroof motor, Automatic anti-dazzle interior mirror	377
023 - Basic equipment, High (AW1) , (AW1)	378-401
1. Basic equipment, High (AW1) , (AW1)	378
2. Wiper motor relay 1, Wiper motor relay 2, Onboard supply control unit, Fuse 1 in fuse holder A, Fuse 4 in fuse holder A, Fuse holder B	379
3. Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder B, Fuse holder C	380
4. Onboard supply control unit, Fuse holder C	381
5. Onboard supply control unit, Terminal 75 voltage supply relay 1, Right fog light bulb, Right cornering light bulb, Fuse holder C	382
6. Onboard supply control unit, Left fog light bulb, Left cornering light bulb, Left daytime running light bulb, Left side light bulb, Front left headlight, Front left turn signal bulb, DC/AC converter with socket, 12 V - 230 V, Left headlight range control motor	383
7. Switch and instrument illumination regulator, Headlight range control regulator, Onboard supply control unit, Front right headlight, Right side light bulb, Front right turn signal bulb, Right headlight range control motor	384
8. Rotary light switch, Fog light switch, Rear fog light switch, Onboard supply control unit, Fog light warning lamp, Automatic control of lights warning lamp	385
9. Onboard supply control unit, Rear left fog light bulb, Right tail light bulb, Left tail light, Left tail light bulb, Rear left turn signal bulb, Left brake light bulb, Right reversing light bulb	386
10. Rear lid handle release button, Brake light switch, Luggage compartment light switch, Rear lid lock unit, Onboard supply control unit, Number plate light	387
11. Reversing light switch, Onboard supply control unit, Right tail light, Rear right turn signal bulb, Right brake light bulb, High-level brake light bulb, Tank filler flap locking motor	388
12. Driver door control unit, Front passenger door control unit, Onboard supply control unit, Cigarette lighter illumination bulb, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb. Cigarette lighter. 12 V socket	389

13. Right steering column switch, Intermittent wiper switch, Intermittent wiper regulator, Washer pump switch (automatic wash/wipe and headlight washer system), Onboard supply control unit, Steering column electronics control unit	390
14. Ignition/starter switch, Turn signal switch, Headlight dipper and flasher switch, Left steering column switch, Cruise control system switch, Cruise control system (CCS) SET button, Onboard supply control unit, Steering column electronics control unit	391
15. Airbag coil connector and return ring with slip ring, Onboard supply control unit, Steering column electronics control unit	392
16. Glove compartment light switch, Bonnet contact switch, Onboard supply control unit, Windscreen wiper motor, Glove compartment light, Left washer jet heater element, Right washer jet heater element	393
17. Horn or dual tone horn, Dual tone horn relay, Heated rear window relay, Onboard supply control unit, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Heated rear window	394
18. Onboard supply control unit, Front interior light, Luggage compartment light, Right centre reading light, Automatic anti-dazzle interior mirror	395
19. Hazard warning lights button, Onboard supply control unit, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Rear interior light	396
20. Handbrake warning switch, Brake fluid level warning contact, Front left brake pad wear sender, Dash panel insert	397
21. Immobiliser reader coil, Oil pressure switch, Fuel delivery unit, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Immobiliser control unit, Fuel pump control unit, Dash panel insert	398
22. Multifunction display call-up button, Multifunction display memory switch, Dash panel insert	399
23. Data bus diagnostic interface, Dash panel insert	400
24. Data bus diagnostic interface, Diagnostic connection	401
024 - Convenience system, High (AW1) , (AW1)	402-417
1. Convenience system, High (AW1) , (AW1)	402
2. Battery, Fuse 1 in fuse holder A, Fuse 4 in fuse holder A, Fuse holder C, Fuse 25 on fuse holder B	403
3. Front left window regulator switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Front right window regulator switch in driver door, Childproof lock button, Driver door control unit	404
4. Rear lid remote release button, Pressure equalisation button, Driver door control unit	405
5. Mirror adjustment switch, Mirror adjustment changeover switch, Exterior mirror heater button, Fold-in mirror switch, Driver side interior locking button for central locking system, Driver door control unit, Driver side interior locking warning lamp, Mirror adjustment switch illumination bulb	406
6. Driver door control unit, Blind Spot Monitor warning lamp in left exterior mirror, Driver side exterior mirror, Driver side fold-in mirror motor, Driver side mirror adjustment motor	407
7. Driver door contact switch, Driver door control unit, Front passenger door control unit, Driver door lock unit, Driver door central locking motor, Front passenger side window regulator motor	408
8. Window regulator switch in front passenger door, Front passenger door contact switch, Front passenger door control unit, Front passenger door lock unit, Front passenger door central locking motor	409
9. Front passenger side interior locking button for central locking system, Front passenger door control unit, Front passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor	410
10. Rear lid handle release button, Interior monitoring deactivation switch, Deactivation button for vehicle inclination sender, Luggage compartment light switch, Rear lid lock unit, Onboard supply control unit, Blind Spot Monitor warning lamp in right exterior mirror, Front passenger side exterior mirror, Rear lid electric opener motor, Luggage compartment light	411
11. Interior monitoring sensor, Vehicle inclination sender, Alarm horn, Onboard supply control unit, Tank filler flap locking motor	412
12. Bonnet contact switch, Terminal 15 voltage supply relay, Onboard supply control unit, Front interior light, Automatic anti-dazzle interior mirror	413
13. Sliding sunroof adjustment regulator, Button 1 for tilting roof, Sliding sunroof adjustment control unit, Onboard supply control unit, Sliding sunroof motor	414
14. Rear left window regulator switch, in door, Rear left door control unit, Onboard supply control unit, Rear left window regulator motor	415
15. Rear right window regulator switch, in door, Rear left door contact switch, Rear right door control unit, Rear left door lock unit, Rear right window regulator motor, Rear left door central locking motor, lock	416
16. Rear right door contact switch, Rear right door lock unit, Rear right door central locking motor, lock	417
025 - Electromechanical power steering , (1N3)	418-420
1. Electromechanical power steering . (1N3)	418

2. Power steering control unit, Data bus diagnostic interface, Fuse 3 in fuse holder A, Fuse 14 on fuse holder C, Electromechanical power steering motor	419
3. Steering angle sender, Steering moment sender, Power steering control unit	420
026 - Dual clutch gearbox 02E , (0ES)	421-425
1. Dual clutch gearbox 02E , (0ES)	421
2. Mechatronic unit for dual clutch gearbox	422
3. Gearbox input speed sender, Clutch temperature sender, Mechatronic unit for dual clutch gearbox	423
4. Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Selector lever display illumination bulb, Selector lever lock solenoid, Selector lever position display	424
5. Control unit in dash panel insert, Data bus diagnostic interface, Selector lever sensors control unit	425
027 - Dual clutch gearbox 0AM , (0EG)	426-430
1. Dual clutch gearbox 0AM , (0EG)	426
2. Engine control unit, Mechatronic unit for dual clutch gearbox	427
3. Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox	428
4. Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Selector lever display illumination bulb, Selector lever position display	429
5. Control unit in dash panel insert, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox	430
028 - Air conditioning system , (KH6)	431-435
1. Air conditioning system , (KH6)	431
2. Air conditioning system control unit	432
3. High-pressure sender, Potentiometer for left temperature flap control motor, Evaporator output temperature sender, Potentiometer for air distribution flap control motor, Air conditioning system control unit, Temperature flap control motor, Air distribution flap control motor	433
4. Fresh air blower switch, Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Air conditioner compressor regulating valve, Fresh air blower	434
5. Air conditioning system control unit	435
029 - Climatronic , (9AK)	436-441
1. Climatronic , (9AK)	436
2. Battery, High-pressure sender, Sunlight penetration photosensor, Climatronic control unit	437
3. Left vent temperature sender, Right vent temperature sender, Fresh air blower control unit, Climatronic control unit, Fresh air blower	438
4. Potentiometer for defroster flap control motor, Potentiometer for left temperature flap control motor, Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator temperature sensor, Climatronic control unit, Defroster flap control motor, Left temperature flap control motor	439
5. Potentiometer for centre flap control motor, Potentiometer for right temperature flap control motor, Potentiometer for fresh air/air recirculation, air flow flap control motor, Climatronic control unit, Centre flap control motor, Right temperature flap control motor, Fresh air/air recirculation, air flow flap control motor	440
6. Magnetic clutch relay, Climatronic control unit, Onboard supply control unit, Air conditioner compressor regulating valve, Magnetic clutch for supercharger	441
030 - Anti-lock brake system (ABS) , (1AC)	442-447
1. Anti-lock brake system (ABS) , (1AC)	442
2. Terminal 15 voltage supply relay, Onboard supply control unit	443
3. Traction control system switch, Front right speed sensor, Front left speed sensor, ABS control unit	444
4. Tyre Pressure Loss Indicator button, Rear right speed sensor, Rear left speed sensor, ABS control unit	445
5. Handbrake warning switch, Brake fluid level warning contact, Front left brake pad wear sender, ABS control unit, Control unit in dash panel insert, Data bus diagnostic interface, ABS warning lamp, Warning lamp for electronic stabilisation program and TCS	446-447
031 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) and electronic stabilisation program (ESP) , (1AS),(1AT)	448-453
1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) and electronic stabilisation program (ESP) , (1AS),(1AT)	448
2. Terminal 15 voltage supply relay, Fuse holder C	449
3. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	450
4. Button for TCS and electronic stabilisation program, Tyre Pressure Loss Indicator button, Vacuum sender, ABS control unit	451
5. Lateral acceleration sender, Yaw rate sender, Sensor unit for electronic stabilisation program, ABS control unit, Onboard supply control unit, Data bus diagnostic interface	452
6. Brake fluid level warning contact, Front left brake pad wear sender, Control unit in dash panel insert. ABS warning lamp. Warning lamp for electronic stabilisation program and TCS. Tyre Pressure	453

Loss Indicator warning lamp	
032 - Front and rear parking aid (PDC) , (7X2)	454-457
1. Front and rear parking aid (PDC) , (7X2)	454
2. Parking aid button, Rear parking aid warning buzzer, Front parking aid warning buzzer, Terminal 15 voltage supply relay, Parking aid control unit, Parking aid warning lamp, Button illumination bulb	455
3. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Parking aid control unit	456
4. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	457
033 - Trailer coupling , (1D2),(1M5)	458-460
1. Trailer coupling , (1D2),(1M5)	458
2. Trailer detector control unit, Onboard supply control unit, Fuse 24 on fuse holder B, Fuse holder C, Trailer socket	459
3. Trailer detector control unit, Onboard supply control unit	460
034 - Mobile telephone systems	461-464
1. Mobile telephone systems	461
2. Operating unit for preparation for mobile telephone, Telephone transmitter and receiver unit, Fuse holder B, Fuse holder C	462
3. Control unit with display for radio and navigation, Telephone transmitter and receiver unit	463
4. Control unit with display for radio and navigation, Onboard supply control unit, Data bus diagnostic interface, Radio, Roof aerial, Telephone microphone, GPS aerial, Telephone aerial, GSM aerial	464
035 - Auxiliary air heater (PTC), diesel engine , (7E6)	465-467
1. Auxiliary air heater (PTC), diesel engine , (7E6)	465
2. Main relay, Low heat output relay, Auxiliary air heater element	466
3. High heat output relay, Auxiliary air heater element	467
036 - Headlight washer system , (8X1),(AW1)	468-469
1. Headlight washer system , (8X1),(AW1)	468
2. Intermittent wiper switch, Washer pump switch (automatic wash/wipe and headlight washer system), Headlight washer system relay, Onboard supply control unit, Steering column electronics control unit, Headlight washer system pump	469
037 - Heated seats , (4A3)	470-474
1. Heated seats , (4A3)	470
2. Onboard supply control unit, Heated front seats control unit, Fuse holder B, Fuse holder C	471
3. Driver seat temperature sensor, Heated front seats control unit, Heated backrest for driver seat, Heated backrest for front passenger seat	472
4. Heated driver seat regulator, Heated front passenger seat regulator, Front passenger seat temperature sensor, Seat occupied recognition control unit	473
5. Heated driver seat regulator, Heated front passenger seat regulator	474
038 - Electric seat adjustment with no memory function	475-477
1. Electric seat adjustment with no memory function	475
2. Backrest adjustment button 2, Fuse holder A, Front passenger seat backrest adjustment motor	476
3. Seat longitudinal adjustment button, Rake adjustment button, Seat height adjustment button, Backrest adjustment button, Driver seat adjustment operating unit, Driver seat longitudinal adjustment motor, Driver seat backrest adjustment motor, Driver seat height adjustment motor, Seat rake adjustment motor	477
039 - Seat backrest and electric lumbar support, driver seat , (7P7),(AW1)	478-479
1. Seat backrest and electric lumbar support, driver seat , (7P7),(AW1)	478
2. Driver seat lumbar support adjustment switch, Fuse 21 on fuse holder C, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	479
040 - Compass , (QR1)	480-482
1. Compass , (QR1)	480
2. Battery, Magnetic field sender for compass, Voltage stabiliser, Fuse holder B, Fuse holder C	481
3. Magnetic field sender for compass, Multifunction indicator, Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface	482
041 - Airbag systems with no rear side airbags , (4X1),(4X3)	483-487
1. Airbag systems with no rear side airbags , (4X1),(4X3)	483
2. Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag deactivated warning lamp, Driver side airbag igniter	484
3. Driver side belt switch, Front passenger side belt switch, Airbag control unit, Front passenger side airbag igniter 1, Driver seat belt tensioner igniter 1, Side airbag igniter on driver side, Side airbag igniter on front passenger side	485
4. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1. Driver side curtain airbag igniter. Front passenger	486

side curtain airbag igniter	
5. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Control unit in dash panel insert, Data bus diagnostic interface, Dash panel insert	487
042 - Airbag systems with rear side airbags , (4X4),(AW1)	488-493
1. Airbag systems with rear side airbags , (4X4),(AW1)	488
2. Key operated switch to deactivate front passenger side airbag, Airbag coil connector and return ring with slip ring, Airbag control unit, Steering column electronics control unit, Front passenger side airbag deactivated warning lamp, Driver side airbag igniter	489
3. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit, Front passenger side airbag igniter 1, Side airbag igniter on driver side, Side airbag igniter on front passenger side, Rear side airbag igniter on driver side	490
4. Driver side belt switch, Front passenger side belt switch, Rear side airbag crash sensor on driver side, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Rear side airbag igniter on passenger side	491
5. Rear side airbag crash sensor on passenger side, Airbag control unit, Data bus diagnostic interface, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Diagnostic connection	492
6. Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface, Airbag warning lamp	493
043 - Interior mirror with no humidity sender but with main beam assist , (8G1)	494-495
1. Interior mirror with no humidity sender but with main beam assist , (8G1)	494
2. Steering column electronics control unit, Data bus diagnostic interface, Fuse 13 on fuse holder C, Front interior light, Automatic anti-dazzle interior mirror	495
044 - 6-speed automatic gearbox with Tiptronic , CBPA,CBTA,CBUA,CCCA,CKJA,CLRA	496-501
1. 6-speed automatic gearbox with Tiptronic , CBPA,CBTA,CBUA,CCCA,CKJA,CLRA	496
2. Multifunction switch, Automatic gearbox control unit, Fuse 23 on fuse holder C, Fuse 25 on fuse holder C	497
3. Automatic gearbox control unit, Solenoid valve 1, Solenoid valve 2, Solenoid valve 3, Solenoid valve 4, Solenoid valve 5, Solenoid valve 6, Solenoid valve 9, Solenoid valve 10	498
4. Tiptronic switch, Selector lever locked in position P switch, Gearbox oil temperature sender, Gearbox input speed sender, Gearbox output speed sender, Automatic gearbox control unit	499
5. Tiptronic switch, Automatic gearbox control unit, Selector lever display illumination bulb, Selector lever lock solenoid, Selector lever position display	500
6. Multifunction indicator, Automatic gearbox control unit, Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface	501
045 - Radio systems/navigation systems	502-508
1. Radio systems/navigation systems	502
2. Control unit with display for radio and navigation, Radio, Fuse 4 in fuse holder A, Fuse holder C	503
3. Control unit with display for radio and navigation, Radio, Roof aerial, GPS aerial, Satellite aerial	504
4. Control unit with display for radio and navigation, Radio, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	505
5. Control unit with display for radio and navigation, Radio, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	506
6. Control unit with display for radio and navigation, Radio, Aerial, Radio aerial 2, Left aerial module, Right aerial module, Digital radio aerial, Heated rear window	507
7. Control unit in dash panel insert, Onboard supply control unit	508
046 - Multimedia socket MEDIA-IN , (UF6),(UF8),(UF9)	509-511
1. Multimedia socket MEDIA-IN , (UF6),(UF8),(UF9)	509
2. Control unit with display for radio and navigation, Onboard supply control unit, Radio, Connection for external audio sources	510
3. Multimedia system control unit, Connection for external audio sources	511
047 - Radiator fan , (9AB),(KH6),(9AK)	512-513
1. Radiator fan , (9AB),(KH6),(9AK)	512
2. Battery, Main relay, Radiator fan control unit, Radiator fan, Right radiator fan, Radiator fan 2	513
048 - Earthing concept	514-535
1. Earthing concept	514
2. Earth strap, battery - body, Earth point 2, left A-pillar	515
3. Earth point, lower part of right A-pillar, Earth connection, in rear right door wiring harness	516
4. Earth connection 3, in seat heating wiring harness, Earth connection 4, in interior wiring harness, Earth connection 4, in seat heating wiring harness	517
5. Earth connection 4, in interior wiring harness	518
6. Earth connection 1, in interior wiring harness, Earth connection 4, in interior wiring harness	519
7. Earth connection 1. in interior wirina harness. Earth point 1. on front of riacht longitudinal	520

member, Earth point 2, on right A-pillar	
8. Earth point (audio), front below centre console, Earth point, on left headlight	521
9. Earth connection 1, in front left wiring harness	522
10. Earth connection 2, in engine compartment wiring harness, Earth connection 2 in automatic gearbox wiring harness	523
11. Earth point, lower part of left A-pillar, Earth connection 2 in automatic gearbox wiring harness, Earth connection, in driver door wiring harness, Earth connection 2, in window regulator/central locking and convertible roof wiring harness	524
12. Earth connection 1, in seat adjustment wiring harness, Earth connection 1, in seat heating wiring harness, Earth connection, in external mirror wiring harness, Earth connection, in driver door wiring harness	525
13. Onboard supply control unit, Earth connection 1, in seat heating wiring harness, Earth connection 2, in main wiring harness, Earth point, on top end of steering column	526
14. Onboard supply control unit, Earth connection 2, in interior wiring harness, Earth connection 2, in main wiring harness	527
15. Earth connection 2, in interior wiring harness	528
16. Earth connection 1, in engine compartment wiring harness, Earth connection 2, in interior wiring harness, Earth connection, in roof wiring harness	529
17. Earth connection 1, in engine compartment wiring harness	530
18. Earth point, on left in engine compartment, Earth connection 2, in fully electronic ignition system wiring harness	531
19. Earth connection 2, in fully electronic ignition system wiring harness, Earth connection 3, in left rear end wiring harness	532
20. Battery fan 1, Earth point, on left in luggage compartment, Earth connection 1, in left rear end wiring harness, Earth connection 3, in left rear end wiring harness	533
21. Earth point, on right in luggage compartment, Earth connection 2, in rear wiring harness, Earth connection 1, in left rear end wiring harness, Earth connection 2, in left rear end wiring harness, Earth point, engine and gearbox earth, Earth point 1, in rear right side panel	534
22. Earth connection 2, in rear wiring harness	535
049 - Auxiliary heater with remote control and air conditioning system , (9M9)	536-540
1. Auxiliary heater with remote control and air conditioning system , (9M9)	536
2. Battery, Heated rear window relay, Auxiliary heater operation relay, Terminal 75 voltage supply relay 1, Fuse 4 in fuse holder A	537
3. Auxiliary heater control unit, Fuel shut-off valve, Combustion air blower, Metering pump, Circulation pump, Fuel pre-heating heater element	538
4. Temperature sensor, Overheating sensor, Auxiliary heater control unit, Glow plug with flame monitor, Roof aerial, Remote control receiver for auxiliary coolant heater, Auxiliary heater aerial	539
5. Multifunction display call-up button, Reset button, Control unit in dash panel insert, Air conditioning system control unit, Steering column electronics control unit, Data bus diagnostic interface	540
050 - Auxiliary heater with remote control and air conditioning system , (9AK),(9M9)	541-544
1. Auxiliary heater with remote control and air conditioning system , (9AK),(9M9)	541
2. Auxiliary heater control unit, Glow plug with flame monitor, Combustion air blower, Circulation pump, Fuel pre-heating heater element	542
3. Temperature sensor, Overheating sensor, Climatronic control unit, Auxiliary heater control unit, Roof aerial, Remote control receiver for auxiliary coolant heater, Auxiliary heater aerial, Metering pump	543
4. Multifunction display call-up button, Reset button, Steering column electronics control unit, Data bus diagnostic interface	544
051 - Air conditioning system with manual regulation , (9AB)	545-548
1. Air conditioning system with manual regulation , (9AB)	545
2. High-pressure sender, Magnetic clutch relay, Air conditioning system control unit, Fresh air blower and air recirculation relay, Magnetic clutch for supercharger	546
3. Air conditioning system control unit, Air conditioner compressor regulating valve	547
4. Fresh air blower switch, Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	548
052 - Manually controlled heater , (9AA)	549-552
1. Manually controlled heater , (9AA)	549
2. Heater control unit, Onboard supply control unit, Fuse 4 on fuse holder A, Fuse holder C	550
3. Fresh air blower switch, Heater control unit, Onboard supply control unit, Fresh air blower series resistor with overheating fuse	551
4. Heater control unit, Fresh air blower and air recirculation relay, Fresh air blower, Fresh air and air recirculation flap control motor	552
053 - "Volkswagen Sound" sound system , (8RB),(8RU)	553-556
1. "Volkswagen Sound" sound system , (8RB),(8RU)	553
2. Control unit with display for radio and navigation. Radio. Amplifier. Front left treble	554

loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Fuse holder B	
3. Onboard supply control unit, Data bus diagnostic interface, Amplifier, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right bass loudspeaker, Front right bass loudspeaker, Front right mid-range loudspeaker	555
4. Amplifier, Subwoofer	556
054 - Keyless access locking and starting system , (AW0)	557-562
1. Keyless access locking and starting system , (AW0)	557
2. Starter, Starter relay 1, Starter relay 2, Fuse holder B, Fuse holder C	558
3. Terminal 15 voltage supply relay, Entry and start authorisation control unit, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	559
4. Starter button, Contact sensor for driver exterior door handle, Contact sensor for front passenger exterior door handle, Entry and start authorisation control unit, Control unit for electronic steering column lock, Driver side aerial for entry and start system, Passenger side aerial for entry and start system, Rear bumper aerial for entry and start system	560
5. Engine/motor control unit, Control unit for electronic steering column lock, Converter box	561
6. Immobiliser reader coil, Multifunction indicator, Immobiliser control unit, Dash panel insert	562
055 - "Keyless access" locking and starting system , (AW1)	563-567
1. "Keyless access" locking and starting system , (AW1)	563
2. Starter, Terminal 15 voltage supply relay, Starter relay 2	564
3. Entry and start authorisation control unit, Rear bumper aerial for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	565
4. Starter button, Driver exterior door handle contact sensor, Front passenger exterior door handle contact sensor, Entry and start authorisation control unit, Control unit for electronic steering column lock, Driver side aerial for entry and start system, Passenger side aerial for entry and start system	566
5. Immobiliser reader coil, Multifunction indicator, Immobiliser control unit, Control unit for electronic steering column lock, Dash panel insert	567
056 - Multifunction steering wheel , (AW0)	568-572
1. Multifunction steering wheel , (AW0)	568
2. Coil connector, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	569
3. Multifunction buttons on left in steering wheel, Coil connector, Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit	570
4. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit	571
5. Multifunction buttons on right in steering wheel, Multifunction indicator, Control unit in dash panel insert, Multifunction steering wheel control unit, Onboard supply control unit, Data bus diagnostic interface, Diagnostic connection	572
057 - Multifunction steering wheel , (AW1)	573-578
1. Multifunction steering wheel , (AW1)	573
2. Ignition/starter switch, Steering column electronics control unit	574
3. Cruise control system switch, Airbag coil connector and return ring with slip ring, Horn plate, Airbag control unit, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on driver side, Ignition key withdrawal lock solenoid	575
4. Multifunction steering wheel control unit	576
5. Multifunction steering wheel control unit, Data bus diagnostic interface	577
6. Multifunction indicator, Control unit in dash panel insert	578
058 - Vehicle location system with restart prevention device , (711)	579-580
1. Vehicle location system with restart prevention device , (711)	579
2. Control unit in dash panel insert, Control unit for vehicle location system, Fuse 14 on fuse holder C, Fuse 23 on fuse holder C	580
059 - Radiator fan with no air conditioning system	581-582
1. Radiator fan with no air conditioning system	581
2. Radiator fan thermal switch, Fuse 27 on fuse holder B, Radiator fan	582
060 - Electrically adjustable and heated exterior mirror , (AW1)	583-586
1. Electrically adjustable and heated exterior mirror , (AW1)	583
2. Driver door control unit, Fuse holder C, Driver side exterior mirror	584
3. Driver door control unit, Front passenger door control unit, Driver side exterior mirror, Front passenger side exterior mirror	585
4. Front passenger door control unit, Front passenger side exterior mirror	586
061 - Anti-theft alarm system , (7AG),(7AZ),(9V5)	587-588
1. Anti-theft alarm system . (7AG).(7AZ).(9V5)	587

2. Bonnet contact switch, Alarm system horn, Onboard supply control unit, Alarm horn relay, Fuse holder C	588
062 - Auxiliary air heater (PTC), petrol engine , (7E6)	589-591
1. Auxiliary air heater (PTC), petrol engine , (7E6)	589
2. Main relay, Low heat output relay, Auxiliary air heater element	590
3. High heat output relay, Auxiliary air heater element	591
063 - DC/AC converter with socket	592-593
1. DC/AC converter with socket	592
2. Electric socket warning lamp, DC/AC converter with socket, 12 V - 230 V, DC/AC converter with socket, 12 V - 115 V	593
064 - Tail light cluster with LED , (4R4),(8SP),(8SS)	594-596
1. Tail light cluster with LED , (4R4),(8SP),(8SS)	594
2. Rear left fog light bulb, Left tail light bulb, Left tail light 2, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb, Left tail light bulb 2	595
3. Right tail light bulb, Right tail light, Right tail light 2, Right reversing light bulb	596
065 - High voltage system , CNLA,CRJA	597-605
1. High voltage system , CNLA,CRJA	597
2. Battery, Battery monitor control unit, Onboard supply control unit, Fuse holder B, Jump start connection	598
3. Hybrid battery unit, Battery regulation control unit, Fan enabling relay, Fuse holder C	599
4. Hybrid battery unit, Hybrid battery, Battery regulation control unit, Pilot line connector 1, Maintenance connector for high-voltage system, Battery fan 1	600
5. Hybrid battery unit, Power and control electronics for electric drive, Battery regulation control unit, Electric drive control unit, High-voltage wiring harness for high-voltage battery	601
6. Voltage converter, DC/AC converter for drive motor, Power and control electronics for electric drive, Electric drive control unit, Three-phase current drive	602
7. Drive motor temperature sender, Power and control electronics for electric drive, Electric drive control unit, Control unit for air conditioning compressor, High-voltage wiring harness for drive motor, High-voltage wire for electrical air conditioner compressor, Three-phase current drive, Electric drive motor, Electrical air conditioner compressor	603
8. Control unit in dash panel insert, Data bus diagnostic interface, Engine control unit, Control unit for air conditioning compressor, Electric drive warning lamp	604
9. Button for extended electric drive mode, Engine control unit, Pressure regulator for disengagement clutch	605
066 - Airbag systems (US equipment) , (4UM)	606-612
1. Airbag systems (US equipment) , (4UM)	606
2. Airbag coil connector and return ring with slip ring, Front airbag crash sensor for driver side, Airbag control unit, Steering column electronics control unit, Warning lamp for airbag deactivated on front passenger side, Airbag igniter on driver side	607
3. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for front passenger side, Airbag control unit, Front passenger airbag unit, Airbag igniter 1 on front passenger side, Side airbag igniter on driver side	608
4. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Pressure sensor for seat occupied recognition, Airbag control unit, Seat occupied recognition control unit, Side airbag igniter on front passenger side	609
5. Driver side belt switch, Front passenger side belt switch, Driver side seat position sensor, Front passenger side seat position sensor, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Diagnostic connection	610
6. Hybrid battery unit, Driver side belt force limiter, Front passenger side belt force limiter, Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Front passenger side curtain airbag igniter	611
7. Airbag control unit, Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface, Airbag warning lamp	612
067 - Auxiliary air heater (PTC) , CNLA,CRJA,(7E6)	613-615
1. Auxiliary air heater (PTC) , CNLA,CRJA,(7E6)	613
2. Main relay	614
3. Low heat output relay, High heat output relay, Auxiliary air heater element	615
068 - Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light , (AW1)	616-620
1. Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light , (AW1)	616
2. Wiper motor relay 1, Wiper motor relay 2, Windscreen wiper motor	617
3. Onboard supply control unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control, Front left headlight	618
4. Onboard supply control unit, Front left headlight, Front right headlight	619
5. Rotary light switch. Onboard supply control unit. Front right headlight	620

069 - Reversing camera (Rear Assist) , (KA1)	621-622
1. Reversing camera (Rear Assist) , (KA1)	621
2. Control unit with display for radio and navigation, Control unit for navigation system, Reversing camera	622
070 - Dual clutch gearbox 0AM , (0EG),(0K1)	623-626
1. Dual clutch gearbox 0AM , (0EG),(0K1)	623
2. Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox	624
3. Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Selector lever display illumination bulb, Selector lever position display	625
4. Power and control electronics for electric drive, Control unit in dash panel insert, Data bus diagnostic interface, Selector lever sensors control unit, Engine control unit, Mechatronic unit for dual clutch gearbox	626
071 - Airbag systems , CRJA	627-632
1. Airbag systems , CRJA	627
2. Airbag coil connector and return ring with slip ring, Airbag control unit, Steering column electronics control unit, Front passenger side airbag deactivated warning lamp, Driver side airbag igniter	628
3. Key operated switch to deactivate front passenger side airbag, Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit, Front passenger side airbag igniter 1, Side airbag igniter on driver side	629
4. Driver side belt switch, Front passenger side belt switch, Seat occupied sensor, front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Side airbag igniter on front passenger side, Rear side airbag igniter on driver side	630
5. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Rear side airbag igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	631
6. Hybrid battery unit, Airbag control unit, Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface, Airbag warning lamp, Diagnostic connection	632
072 - Fuses in interior , (AW0)	633-643
1. Fuses in interior , (AW0)	633
2. Fuse holder C	634
3. Fuse holder C	635
4. Fuse holder C	636
5. Engine/motor control unit, Fuse holder C	637
6. Fuse holder C	638
7. Fuse holder C	639
8. Onboard supply control unit, Fuse holder C	640
9. Onboard supply control unit, Fuse holder B, Fuse holder C	641
10. Fuse holder C	642
11. Fuse holder C	643
073 - Fuses in interior , (AW1)	644-654
1. Fuses in interior , (AW1)	644
2. Emergency call module control unit and communication unit, Fuse holder C	645
3. Fuse holder C	646
4. Fuse holder C	647
5. Engine control unit, Fuse holder C	648
6. Onboard supply control unit, Fuse holder C	649
7. Fuse holder C	650
8. Fuse holder C	651
9. Fuse holder B, Fuse holder C	652
10. Fuse holder C	653
11. Fuse holder C	654
074 - Data bus network , (AW0)	655-663
1. Data bus network , (AW0)	655
2. Diagnostic connection, K-diagnosis wire connection, in interior wiring harness, Connection 3 (LIN bus) in main wiring harness	656
3. Connection 1 (LIN bus) in main wiring harness	657
4. Isolation relay for powertrain CAN bus, Connection 2 (powertrain CAN bus, high), in main wiring harness, Connection 2 (powertrain CAN bus, low), in main wiring harness, Connection 1 (convenience CAN bus, high), in main wiring harness, Connection (convenience CAN bus, low), in main wiring harness	658
5. Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness	659
6. Connection 1 (powertrain CAN bus. high). in main wirina harness. Connection 1 (powertrain CAN bus.	660

low), in main wiring harness, Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness	
7. Connection 1 (powertrain CAN bus, high), in main wiring harness, Connection 1 (powertrain CAN bus, low), in main wiring harness	661
8. Connection 1 (powertrain CAN bus, high), in main wiring harness, Connection 1 (powertrain CAN bus, low), in main wiring harness	662
9. Connection 1 (powertrain CAN bus, high), in main wiring harness, Connection 1 (powertrain CAN bus, low), in main wiring harness, Connection (CAN bus, high), in headlight wiring harness, Connection (CAN bus, low), in headlight wiring harness	663
075 - Data bus network , (AW1)	664-673
1. Data bus network , (AW1)	664
2. Data bus diagnostic interface, Diagnostic connection	665
3. Data bus diagnostic interface, Connection 1 (LIN bus) in engine compartment wiring harness	666
4. Data bus diagnostic interface, Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness	667
5. Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness	668
6. Connection 1 (powertrain CAN bus, high), in main wiring harness, Connection 1 (powertrain CAN bus, low), in main wiring harness, Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness	669
7. Connection 1 (powertrain CAN bus, high), in main wiring harness, Connection 1 (powertrain CAN bus, low), in main wiring harness	670
8. Connection 1 (powertrain CAN bus, high), in main wiring harness, Connection 1 (powertrain CAN bus, low), in main wiring harness, Connection 1 (hybrid CAN bus, high) in main wiring harness, Connection 1 (hybrid CAN bus, low) in main wiring harness	671
9. Connection 1 (powertrain CAN bus, high), in main wiring harness, Connection 1 (powertrain CAN bus, low), in main wiring harness, Connection 1 (infotainment CAN bus, high), in main wiring harness, Connection 1 (infotainment CAN bus, low), in main wiring harness, Connection 1 (hybrid CAN bus, high) in main wiring harness, Connection 1 (hybrid CAN bus, low) in main wiring harness, Connection (CAN bus, high), in headlight wiring harness, Connection (CAN bus, low), in headlight wiring harness	672
10. Connection 1 (infotainment CAN bus, high), in main wiring harness, Connection 1 (infotainment CAN bus, low), in main wiring harness	673
076 - Lane change assist , (7Y8)	674-676
1. Lane change assist , (7Y8)	674
2. Onboard supply control unit, Data bus diagnostic interface, Isolation relay for powertrain CAN bus, Blind Spot Monitor control unit	675
3. Blind Spot Monitor control unit 2, Blind Spot Monitor warning lamp in left exterior mirror, Blind Spot Monitor warning lamp in right exterior mirror, Driver side exterior mirror, Front passenger side exterior mirror	676
077 - Mobile telephone systems with MEDIA-IN multimedia socket	677-681
1. Mobile telephone systems with MEDIA-IN multimedia socket	677
2. Operating unit for preparation for mobile telephone, Mobile telephone operating electronics control unit, Fuse holder B, Fuse holder C	678
3. Mobile telephone operating electronics control unit, Control unit with display for radio and navigation, Connection for external audio sources	679
4. Control unit with display for radio and navigation, Data bus diagnostic interface, Radio, Roof aerial, Telephone microphone, GPS aerial, Telephone aerial	680
5. Onboard supply control unit	681
078 - Emergency call module , (EL2)	682-685
1. Emergency call module , (EL2)	682
2. Emergency assistance call button, Onboard supply control unit, Emergency call module control unit and communication unit, Microphone unit in front roof module	683
3. Mobile telephone operating electronics control unit, Control unit with display for radio and navigation, Emergency call module control unit and communication unit, Roof aerial, GPS aerial, Telephone aerial	684
4. Onboard supply control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit	685
079 - 6-speed automatic gearbox with Tiptronic , CPKA,CPRA,CZTA,CZDA	686-690
1. 6-speed automatic gearbox with Tiptronic , CPKA,CPRA,CZTA,CZDA	686
2. Reversing switch, Multifunction switch, Automatic gearbox control unit	687
3. Gearbox oil temperature sender, Gearbox input speed sender, Gearbox output speed sender, Automatic gearbox control unit, Solenoid valve 1, Solenoid valve 2, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 5, Automatic gearbox pressure regulating valve 7	688
4. Automatic gearbox control unit, Dash panel insert, Automatic gearbox pressure regulating valve 2, Automatic gearbox pressure regulating valve 3. Automatic gearbox pressure regulating valve 4	689

5. Selector lever, Tiptronic switch, Selector lever locked in position P switch, Automatic gearbox control unit, Selector lever display illumination bulb, Selector lever lock solenoid, Selector lever position display	690
080 - Garage door opener , (VC2)	691-692
1. Garage door opener , (VC2)	691
2. Garage door operating unit, Terminal 15 voltage supply relay, Garage door operation control unit, Fuse 15 on fuse holder C, Fuse 25 on fuse holder B	692
081 - Keyless access locking and starting system , CPRA,CPKA	693-697
1. Keyless access locking and starting system , CPRA,CPKA	693
2. Starter, Starter relay 1, Starter relay 2, Fuse holder C	694
3. Terminal 15 voltage supply relay, Entry and start authorisation control unit, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	695
4. Starter button, Entry and start authorisation control unit, Control unit for electronic steering column lock, Converter box	696
5. Immobiliser reader coil, Multifunction indicator, Immobiliser control unit, Dash panel insert	697
082 - "Keyless access" locking and starting system , CPPA	698-702
1. "Keyless access" locking and starting system , CPPA	698
2. Starter, Starter relay 1, Starter relay 2, Fuse holder C	699
3. Terminal 15 voltage supply relay, Entry and start authorisation control unit, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	700
4. Starter button, Entry and start authorisation control unit, Control unit for electronic steering column lock	701
5. Immobiliser reader coil, Multifunction indicator, Immobiliser control unit, Dash panel insert	702
083 - 1.4l petrol engine , CZTA,(AW0)	703-721
1. 1.4l petrol engine , CZTA,(AW0)	703
2. Battery, Starter, Alternator with voltage regulator, Fuse 1 on fuse holder A, Fuse 4 on fuse holder A, Fuse holder B	704
3. Automatic gearbox control unit, Main relay, Fuse holder B	705
4. Entry and start authorisation control unit, Terminal 75 voltage supply relay 1, Fuse holder B, Fuse holder C	706
5. Fuel gauge sender, Fuel system pressurisation pump, Onboard supply control unit, Fuel pump control unit	707
6. Vacuum pump relay, Terminal 15 voltage supply relay, Onboard supply control unit, Starter relay 1, Starter relay 2, Vacuum pump for brakes	708
7. Onboard supply control unit, Converter box	709
8. Ignition/starter switch, Converter box	710
9. Engine/motor control unit	711
10. Knock sensor 1, Radiator outlet coolant temperature sender, Engine/motor control unit, Control unit for fuel tank leak detection, Fuel system diagnostic pump	712
11. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug connector, Spark plugs	713
12. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Throttle valve module, Engine/motor control unit	714
13. Intake manifold sender, Charge pressure sender, Engine speed sender, Charge pressure sender, Intake air temperature sender, Fuel pressure sender, Intake air temperature sender 2, Hall sender 3, Engine/motor control unit	715
14. Hall sender, Position sender for charge pressure positioner, Engine/motor control unit, Charge pressure positioner	716
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Coolant pump for low-temperature circuit	717
16. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Injector, cylinder 4, Lambda probe 1 heater after catalytic converter	718
17. Brake light switch, Oil pressure switch, Brake servo pressure sensor, Clutch position sender, Engine/motor control unit	719
18. Rev. counter, Speedometer, Control unit in dash panel insert, Engine/motor control unit, Alternator warning lamp, Cruise control system warning lamp, Electronic power control fault lamp	720
19. Oil pressure switch for reduced oil pressure, Fuel gauge, Coolant temperature gauge, Oil level and oil temperature sender, Control unit in dash panel insert, Coolant temperature and coolant shortage warning lamp, Reserve fuel warning lamp	721
084 - Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light , (AW0)	722-726
1. Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light , (AW0)	722
2. Left steering column switch, Reversing light switch, Onboard supply control unit, Control unit for cornering light and headlight range control	723
3. Onboard supply control unit. Control unit for cornering light and headlight range control. Front	724

left headlight	
4. Onboard supply control unit, Front left headlight, Front right headlight	725
5. Rotary light switch, Switch and instrument illumination regulator, Onboard supply control unit, Front right headlight	726
085 - Emergency call module , (EL2),(NZ3)	727-730
1. Emergency call module , (EL2),(NZ3)	727
2. Emergency assistance call button, Onboard supply control unit, Emergency call module control unit and communication unit, Microphone unit in front roof module	728
3. Control unit with display for radio and navigation, Emergency call module control unit and communication unit, Roof aerial, GPS aerial, Telephone aerial, Reversing camera	729
4. Airbag control unit, Emergency call module control unit and communication unit	730
086 - Convenience system , (AW1)	731-746
1. Convenience system , (AW1)	731
2. Battery, Fuse 1 on fuse holder A, Fuse 4 on fuse holder A, Fuse holder C, Fuse 25 on fuse holder B	732
3. Front left window regulator switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Front right window regulator switch in driver door, Childproof lock button, Driver door control unit	733
4. Rear lid remote release button, Pressure equalisation button, Driver door control unit, Driver side interior locking warning lamp	734
5. Mirror adjustment switch, Mirror adjustment changeover switch, Exterior mirror heater button, Fold-in mirror switch, Driver side interior locking button for central locking system, Driver door control unit, Mirror adjustment switch illumination bulb, Driver side interior door handle illumination bulb	735
6. Driver door control unit, Blind Spot Monitor warning lamp in left exterior mirror, Driver side exterior mirror, Driver side fold-in mirror motor, Driver side mirror adjustment motor	736
7. Driver door contact switch, Driver door control unit, Front passenger door control unit, Driver door lock unit, Driver door central locking motor, Front passenger side window regulator motor	737
8. Window regulator switch in front passenger door, Front passenger door contact switch, Front passenger door control unit, Front passenger door lock unit, Front passenger door central locking motor	738
9. Front passenger side interior locking button for central locking system, Front passenger door control unit, Blind Spot Monitor warning lamp in right exterior mirror, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor	739
10. Rear lid handle release button, Interior monitoring deactivation switch, Deactivation button for vehicle inclination sender, Front passenger door control unit, Onboard supply control unit, Blind Spot Monitor warning lamp in right exterior mirror, Front passenger side interior door handle illumination bulb, Passenger side exterior mirror	740
11. Luggage compartment light switch, Rear lid lock unit, Interior monitoring sensor, Vehicle inclination sender, Onboard supply control unit, Tank filler flap locking motor, Rear lid electric opener motor, Luggage compartment light	741
12. Alarm horn, Onboard supply control unit, Front interior light, Automatic anti-dazzle interior mirror	742
13. Bonnet contact switch, Terminal 15 voltage supply relay, Onboard supply control unit	743
14. Sliding sunroof adjustment regulator, Button 1 for tilting roof, Sliding sunroof adjustment control unit, Onboard supply control unit, Sliding sunroof motor	744
15. Rear left window regulator switch, in door, Rear left door contact switch, Rear left door control unit, Rear left door lock unit, Rear left window regulator motor, Rear left door central locking motor, lock	745
16. Rear right window regulator switch, in door, Rear right door contact switch, Rear right door control unit, Rear right door lock unit, Rear right window regulator motor, Rear right door central locking motor, lock	746
087 - 1.6l petrol engine , CWVA,CWVB	747-757
1. 1.6l petrol engine , CWVA,CWVB	747
2. Battery, Starter, Alternator with voltage regulator, Main relay, Fuse 1 in fuse holder A, Fuse holder B	748
3. Main relay, Starter relay 1, Fuse holder B	749
4. Engine control unit	750
5. Accelerator pedal module, Coolant temperature sender, Radiator outlet coolant temperature sender, Engine control unit	751
6. Brake light switch, Oil pressure switch, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Clutch position sender, Engine control unit	752
7. Throttle valve module, Engine control unit, Injector, cylinder 1, Injector, cylinder 2	753
8. Intake manifold sender, Engine speed sender, Hall sender, Intake manifold pressure sender, Intake air temperature sender 2. Engine control unit. Injector. cylinder 3	754

9. Knock sensor 1, Engine control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1	755
10. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	756
11. Fuel gauge, Fuel delivery unit, Coolant temperature gauge, Fuel system pressurisation pump, Dash panel insert	757
088 - Radio systems/navigation systems	758-763
1. Radio systems/navigation systems	758
2. Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Telephone microphone, Connection for external audio sources	759
3. Control unit 1 for information electronics, Control unit for navigation system, Connection for external audio sources, USB connection 1	760
4. Control unit 1 for information electronics, Amplifier, Front left treble loudspeaker, Front left bass loudspeaker, Front right bass loudspeaker	761
5. Control unit 1 for information electronics, Amplifier, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right bass loudspeaker, Front right treble loudspeaker	762
6. Control unit 1 for information electronics, Roof aerial, Aerial, GPS aerial, Radio aerial 2, Impedance converter for rear left window aerial, Impedance converter for rear right window aerial	763
089 - Radio system , (8DU),(I6F),(I6Q)	764-768
1. Radio system , (8DU),(I6F),(I6Q)	764
2. Data bus diagnostic interface, Radio	765
3. Radio, Rear right treble loudspeaker, Rear right bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	766
4. Radio, Rear left treble loudspeaker, Rear left bass loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	767
5. Onboard supply control unit, Radio, Aerial, Right aerial module, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Heated rear window	768
090 - 1.4l petrol engine , CZDA,(B41)	769-784
1. 1.4l petrol engine , CZDA,(B41)	769
2. Battery, Starter, Alternator with voltage regulator, Fuse 1 on fuse holder A, Fuse 4 on fuse holder A, Fuse holder B	770
3. Main relay, Fuse holder B	771
4. Fuel gauge sender, Fuel system pressurisation pump, Onboard supply control unit, Fuel pump control unit, Fuse holder B	772
5. Vacuum pump relay, Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C, Vacuum pump for brakes	773
6. Engine/motor control unit, Fuse holder C	774
7. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug connector, Spark plugs	775
8. Accelerator pedal module, Knock sensor 1, Accelerator position sender, Radiator outlet coolant temperature sender, Accelerator position sender 2, Engine/motor control unit	776
9. Intake manifold sender, Fuel pressure sender, Intake air temperature sender 2, Throttle valve module, Engine/motor control unit	777
10. Charge pressure sender, Charge pressure sender, Hall sender, Intake air temperature sender, Hall sender 3, Engine/motor control unit, Charge pressure positioner	778
11. Engine speed sender, Engine/motor control unit	779
12. Lambda probe 1 before catalytic converter, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Charge air cooling pump	780
13. Brake light switch, Oil pressure switch, Lambda probe 1 after catalytic converter, Clutch position sender, Engine/motor control unit, Lambda probe 1 heater after catalytic converter	781
14. Brake servo pressure sensor, Data bus diagnostic interface, Engine/motor control unit	782
15. Rev. counter, Speedometer, Control unit in dash panel insert, Data bus diagnostic interface, Alternator warning lamp, Cruise control system warning lamp, Electronic power control fault lamp	783
16. Oil pressure switch for reduced oil pressure, Fuel gauge, Coolant temperature gauge, Oil level and oil temperature sender, Control unit in dash panel insert, Coolant temperature and coolant shortage warning lamp, Reserve fuel warning lamp	784
091 - 6-speed automatic gearbox , CZDA,(B41)	785-789
1. 6-speed automatic gearbox , CZDA,(B41)	785
2. Reversing switch, Multifunction switch, Automatic gearbox control unit	786
3. Gearbox oil temperature sender, Gearbox input speed sender, Gearbox output speed sender, Automatic gearbox control unit, Solenoid valve 1, Solenoid valve 2, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 5, Automatic gearbox pressure regulating valve 7	787
4. Automatic gearbox control unit. Data bus diagnostic interface. Automatic gearbox pressure	788

regulating valve 2, Automatic gearbox pressure regulating valve 3, Automatic gearbox pressure regulating valve 4	
5. Selector lever, Tiptronic switch, Selector lever locked in position P switch, Automatic gearbox control unit, Selector lever display illumination bulb, Selector lever lock solenoid, Selector lever position display	789
092 - Windscreen heater , (4GX)	790-791
1. Windscreen heater , (4GX)	790
2. Heated windscreen relay, Onboard supply control unit, Fuse holder B, Heated windscreen	791
093 - Basic equipment, Low (AW0) , (AW0)	792-813
1. Basic equipment, Low (AW0) , (AW0)	792
2. Terminal 15 voltage supply relay, Onboard supply control unit, Starter relay 1, Fuse 1 on fuse holder A, Fuse 4 on fuse holder A, Fuse holder B	793
3. Ignition/starter switch, Onboard supply control unit, Converter box	794
4. Onboard supply control unit, Converter box, Fuse holder C	795
5. Onboard supply control unit, Fuse holder C	796
6. Switch and instrument illumination regulator, Onboard supply control unit, Left fog light bulb, Right fog light bulb, Left LED module for daytime running light and side light, Left side light bulb, Front left headlight, Front left turn signal bulb, Fuse holder C	797
7. Light switch, Onboard supply control unit, Terminal 75 voltage supply relay 1, Automatic control of lights warning lamp, Right LED module for daytime running light and side light, Front right headlight, Right side light bulb, Front right turn signal bulb	798
8. Light switch, Fog light switch, Rear fog light switch, Onboard supply control unit, Fog light warning lamp, Rear left fog light bulb, Left tail light cluster, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb	799
9. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, Right reversing light bulb, Rear lid central locking motor, Number plate light	800
10. Onboard supply control unit, Right tail light cluster, Rear right turn signal bulb, Right brake light bulb, High-level brake light bulb, Tank filler flap locking motor	801
11. Turn signal switch, Headlight dipper and flasher switch, Left steering column switch, Cruise control system switch, Cruise control system (CCS) SET button, Onboard supply control unit, Steering column electronics control unit	802
12. Reversing light switch, Airbag coil connector and return ring with slip ring, Steering angle sender, Onboard supply control unit	803
13. Onboard supply control unit, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb	804
14. Intermittent wiper switch, Washer pump switch (automatic wash/wipe and headlight washer system), Onboard supply control unit	805
15. Hazard warning lights button, Horn or dual tone horn, Onboard supply control unit, Indicator lamp for hazard warning light, Windscreen wiper motor, Left washer jet heater element, Right washer jet heater element	806
16. Bonnet contact switch, Onboard supply control unit, Front interior light, Front passenger reading light, Interior light with switch-off delay, Driver side reading light, Left centre reading light, Right centre reading light	807
17. Glove compartment light switch, Onboard supply control unit, Luggage compartment light, Glove compartment light, Rear left reading light, Rear right reading light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Rear interior light	808
18. Brake light switch, Blocking diode, Onboard supply control unit, Cigarette lighter illumination bulb, Cigarette lighter, 12 V socket	809
19. Onboard supply control unit, Diagnostic connection, Heated rear window	810
20. Immobiliser reader coil, Oil pressure switch, Handbrake warning switch, Brake fluid level warning contact, Immobiliser control unit, Dash panel insert	811
21. Fuel delivery unit, Windscreen washer fluid level sender, Front left brake pad wear sender, Dash panel insert, Rear fog light warning lamp	812
22. Ambient temperature sensor, Coolant shortage indicator sender, Dash panel insert	813
094 - Basic equipment, High (AW1) , (AW1)	814-837
1. Basic equipment, High (AW1) , (AW1)	814
2. Wiper motor relay 1, Wiper motor relay 2, Onboard supply control unit, Fuse 1 on fuse holder A, Fuse 4 on fuse holder A, Fuse holder B	815
3. Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder B, Fuse holder C	816
4. Onboard supply control unit, Fuse holder C	817
5. Onboard supply control unit, Terminal 75 voltage supply relay 1, Right fog light bulb, Right cornering light bulb, Fuse holder C	818
6. Onboard supply control unit, Left fog light bulb, Left cornering light bulb, Left daytime running light bulb, Left side light bulb, Front left headlight, Front left turn signal bulb, DC/AC converter with socket, 12 V - 230 V, Left headlight range control motor	819
7. Switch and instrument illumination regulator. Headlight range control regulator. Onboard supply	820

control unit, Front right headlight, Right side light bulb, Front right turn signal bulb, Right headlight range control motor	
8. Rotary light switch, Fog light switch, Rear fog light switch, Onboard supply control unit, Fog light warning lamp, Automatic control of lights warning lamp	821
9. Onboard supply control unit, Rear left fog light bulb, Right tail light bulb, Left tail light, Left tail light bulb, Rear left turn signal bulb, Left brake light bulb, Right reversing light bulb	822
10. Rear lid handle release button, Brake light switch, Luggage compartment light switch, Rear lid lock unit, Onboard supply control unit, Right number plate light	823
11. Reversing light switch, Onboard supply control unit, Right tail light, Rear right turn signal bulb, Right brake light bulb, High-level brake light bulb, Tank filler flap locking motor	824
12. Driver door control unit, Front passenger door control unit, Onboard supply control unit, Cigarette lighter illumination bulb, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb, Cigarette lighter, 12 V socket	825
13. Right steering column switch, Intermittent wiper switch, Intermittent wiper regulator, Washer pump switch (automatic wash/wipe and headlight washer system), Onboard supply control unit, Steering column electronics control unit	826
14. Ignition/starter switch, Turn signal switch, Headlight dipper and flasher switch, Left steering column switch, Cruise control system switch, Cruise control system (CCS) SET button, Onboard supply control unit, Steering column electronics control unit	827
15. Airbag coil connector and return ring with slip ring, Onboard supply control unit, Steering column electronics control unit	828
16. Glove compartment light switch, Bonnet contact switch, Onboard supply control unit, Windscreen wiper motor, Glove compartment light, Left washer jet heater element, Right washer jet heater element	829
17. Horn or dual tone horn, Dual tone horn relay, Heated rear window relay, Onboard supply control unit, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Heated rear window	830
18. Onboard supply control unit, Front interior light, Luggage compartment light, Right centre reading light, Automatic anti-dazzle interior mirror	831
19. Hazard warning lights button, Onboard supply control unit, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Rear interior light	832
20. Handbrake warning switch, Brake fluid level warning contact, Front left brake pad wear sender, Dash panel insert	833
21. Immobiliser reader coil, Oil pressure switch, Fuel delivery unit, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Immobiliser control unit, Fuel pump control unit, Dash panel insert	834
22. Multifunction display call-up button, Multifunction display memory switch, Dash panel insert	835
23. Data bus diagnostic interface, Dash panel insert	836
24. Data bus diagnostic interface, Diagnostic connection	837
095 - Radio and navigation system (South Korea) , (7UB)	838-844
1. Radio and navigation system (South Korea) , (7UB)	838
2. Control unit with display for radio and navigation, Fuse holder B, Fuse holder C	839
3. Control unit with display for radio and navigation, Control unit for navigation system, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	840
4. Control unit with display for radio and navigation, Control unit for navigation system, Telephone microphone, Internal loudspeaker	841
5. Control unit with display for radio and navigation, Control unit for navigation system, Reversing camera	842
6. Control unit with display for radio and navigation, Roof aerial, Left aerial module, Right aerial module, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Impedance converter or digital radio reception, Heated rear window	843
7. Heated rear window relay, Data bus diagnostic interface	844
096 - 6-speed automatic gearbox with Tiptronic , CWVA,CWVB,(0ID)	845-849
1. 6-speed automatic gearbox with Tiptronic , CWVA,CWVB,(0ID)	845
2. Reversing switch, Multifunction switch, Automatic gearbox control unit	846
3. Gearbox oil temperature sender, Gearbox input speed sender, Gearbox output speed sender, Automatic gearbox control unit, Solenoid valve 1, Solenoid valve 2, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 5, Automatic gearbox pressure regulating valve 7	847
4. Automatic gearbox control unit, Data bus diagnostic interface, Automatic gearbox pressure regulating valve 2, Automatic gearbox pressure regulating valve 3, Automatic gearbox pressure regulating valve 4	848
5. Selector lever, Tiptronic switch, Selector lever locked in position P switch, Automatic gearbox control unit. Selector lever display illumination bulb. Selector lever lock solenoid. Selector lever	849

position display	
097 - Actuator for structure-borne sound , CPLA,CPPA,(A8H)	850-851
1. Actuator for structure-borne sound , CPLA,CPPA,(A8H)	850
2. Brake light switch, Engine control unit, Control unit for structure-borne sound, Actuator for structure-borne sound	851
098 - 1.4l petrol engine , CZTA,(AW0)	852-870
1. 1.4l petrol engine , CZTA,(AW0)	852
2. Battery, Starter, Alternator with voltage regulator, Fuse 1 on fuse holder A, Fuse 4 on fuse holder A, Fuse holder B	853
3. Automatic gearbox control unit, Main relay, Fuse holder B	854
4. Entry and start authorisation control unit, Terminal 75 voltage supply relay 1, Fuse holder B, Fuse holder C	855
5. Fuel gauge sender, Fuel system pressurisation pump, Onboard supply control unit, Fuel pump control unit	856
6. Vacuum pump relay, Terminal 15 voltage supply relay, Onboard supply control unit, Starter relay 1, Starter relay 2, Vacuum pump for brakes	857
7. Onboard supply control unit, Converter box	858
8. Ignition/starter switch, Converter box	859
9. Engine/motor control unit	860
10. Knock sensor 1, Radiator outlet coolant temperature sender, Engine/motor control unit, Control unit for fuel tank leak detection, Fuel system diagnostic pump	861
11. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug connector, Spark plugs	862
12. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Throttle valve module, Engine/motor control unit	863
13. Intake manifold sender, Charge pressure sender, Engine speed sender, Charge pressure sender, Intake air temperature sender, Fuel pressure sender, Intake air temperature sender 2, Hall sender 3, Engine/motor control unit	864
14. Hall sender, Position sender for charge pressure positioner, Engine/motor control unit, Charge pressure positioner	865
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Coolant pump for low-temperature circuit	866
16. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Injector, cylinder 4, Lambda probe 1 heater after catalytic converter	867
17. Brake light switch, Oil pressure switch, Brake servo pressure sensor, Clutch position sender, Engine/motor control unit	868
18. Rev. counter, Speedometer, Control unit in dash panel insert, Engine/motor control unit, Alternator warning lamp, Cruise control system warning lamp, Electronic power control fault lamp	869
19. Oil pressure switch for reduced oil pressure, Fuel gauge, Coolant temperature gauge, Oil level and oil temperature sender, Control unit in dash panel insert, Coolant temperature and coolant shortage warning lamp, Reserve fuel warning lamp	870
099 - 1.4l petrol engine , CNLA,CRJA,(AW1)	871-890
1. 1.4l petrol engine , CNLA,CRJA,(AW1)	871
2. Battery, Voltage converter, Power and control electronics for electric drive, Battery monitor control unit, High-voltage wiring harness for drive motor, Fuse 1 on fuse holder A, Fuse holder B, Terminal 30 wiring junction, Three-phase current drive	872
3. Main relay, Fuse holder B, Fuse 3 on fuse holder A	873
4. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel pump control unit, Fuse holder B	874
5. Button for extended electric drive mode, Secondary air pump relay, Terminal 15 voltage supply relay, Button illumination bulb, Fuse holder B, Secondary air pump motor	875
6. Engine/motor control unit, Fuse holder C	876
7. Engine/motor control unit	877
8. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector, Spark plugs	878
9. Oil pressure switch for reduced oil pressure, Vacuum pump relay, Engine/motor control unit, Vacuum pump for brakes, Coolant pump for high-temperature circuit, Coolant pump for low-temperature circuit	879
10. Position sender for charge pressure positioner, Throttle valve module, Engine/motor control unit, Charge pressure positioner	880
11. Intake manifold sender, Hall sender, Intake manifold pressure sender, Fuel pressure sender, Intake air temperature sender 2, Hall sender 3, Sender 1 for secondary air pressure, Engine/motor control unit, Secondary air inlet valve	881
12. Charge pressure sender, Engine speed sender, Charge pressure sender, Intake air temperature sender. Knock sensor 1. Engine/motor control unit. Control unit for fuel tank leak detection. Fuel	882

system diagnostic pump	
13. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Pressure regulator for disengagement clutch	883
14. Lambda probe 1 before catalytic converter, Lambda probe, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	884
15. Accelerator pedal module, Lambda probe 2 before catalytic converter, Accelerator position sender, Lambda probe 2, Accelerator position sender 2, Engine/motor control unit	885
16. Brake light switch, Brake pedal switch, Radiator outlet coolant temperature sender, Brake servo pressure sensor, Tank pressure sensor, Engine/motor control unit	886
17. Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit, Electric drive warning lamp	887
18. Oil pressure switch, Fuel gauge, Coolant temperature gauge, Rev counter, Speedometer, Control unit in dash panel insert, Onboard supply control unit, Alternator warning lamp, Coolant temperature and coolant shortage warning lamp, Cruise control system warning lamp, Reserve fuel warning lamp, Electronic power control fault lamp	888
19. Tank flap release, Fuel tank cap detection switch, Oil level and oil temperature sender, Onboard supply control unit, Tank filler flap locking motor	889
20. Rear lid remote release button, Pressure equalisation button, Driver door control unit, Onboard supply control unit	890
100 - Convenience system, right-hand drive , (L0R)	891-906
1. Convenience system, right-hand drive , (L0R)	891
2. Battery, Fuse 1 in fuse holder A, Fuse 4 in fuse holder A, Fuse holder C, Fuse 25 on fuse holder B	892
3. Front left window regulator switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Front right window regulator switch in driver door, Childproof lock button, Driver door control unit	893
4. Rear lid remote release button, Driver side interior locking button for central locking system, Driver door control unit, Driver side interior locking warning lamp	894
5. Mirror adjustment switch, Mirror adjustment changeover switch, Exterior mirror heater button, Fold-in mirror switch, Driver door control unit, Mirror adjustment switch illumination bulb, Driver side door interior handle illumination bulb	895
6. Driver door control unit, Driver side exterior mirror, Driver side fold-in mirror motor, Driver side mirror adjustment motor	896
7. Driver door contact switch, Driver door control unit, Front passenger door control unit, Driver door lock unit, Driver door central locking motor, Front passenger side window regulator motor	897
8. Window regulator switch in front passenger door, Front passenger door contact switch, Front passenger door control unit, Front passenger door lock unit, Front passenger door central locking motor	898
9. Front passenger side interior locking button for central locking system, Front passenger door control unit, Front passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor	899
10. Rear lid handle release button, Interior monitoring deactivation switch, Deactivation button for vehicle inclination sender, Luggage compartment light switch, Rear lid lock unit, Front passenger door control unit, Onboard supply control unit, Front passenger side door interior handle illumination bulb, Rear lid electric opener motor	900
11. Interior monitoring sensor, Vehicle inclination sender, Alarm horn, Onboard supply control unit, Tank filler flap locking motor, Luggage compartment light	901
12. Bonnet contact switch, Terminal 15 voltage supply relay, Onboard supply control unit, Front interior light, Automatic anti-dazzle interior mirror	902
13. Sliding sunroof adjustment regulator, Button 1 for tilting roof, Sliding sunroof adjustment control unit, Onboard supply control unit, Sliding sunroof motor	903
14. Rear left window regulator switch, in door, Rear left door control unit, Onboard supply control unit, Rear left window regulator motor	904
15. Rear right window regulator switch, in door, Rear left door contact switch, Rear left door control unit, Rear right door control unit, Rear left door lock unit, Rear right window regulator motor, Rear left door central locking motor, lock	905
16. Rear right door contact switch, Rear right door control unit, Rear right door lock unit, Rear right door central locking motor, lock	906
101 - Auxiliary heater with remote control and air conditioning system , (9M9)	907-912
1. Auxiliary heater with remote control and air conditioning system , (9M9)	907
2. Battery, Heated rear window relay, Auxiliary heater operation relay, Terminal 75 voltage supply relay 1, Fuse 4 in fuse holder A	908-909
3. Auxiliary heater control unit, Fresh air blower and air recirculation relay, Fuel shut-off valve, Combustion air blower, Metering pump, Fuel pre-heating heater element	910
4. Temperature sensor. Overheating sensor. Auxiliary heater control unit. Fuel shut-off valve. Glow	911

plug with flame monitor, Roof aerial, Remote control receiver for auxiliary coolant heater, Auxiliary heater aerial, Circulation pump	
5. Multifunction display call-up button, Reset button, Control unit in dash panel insert, Air conditioning system control unit, Steering column electronics control unit, Data bus diagnostic interface	912
102 - 1.4l petrol engine , CZCA,CZDA,(AW1)	913-929
1. 1.4l petrol engine , CZCA,CZDA,(AW1)	913
2. Battery, Starter, Alternator with voltage regulator, Fuse 1 on fuse holder A, Fuse 4 on fuse holder A, Fuse holder B	914
3. Main relay, Fuse holder B	915
4. Fuel gauge sender, Fuel system pressurisation pump, Onboard supply control unit, Fuel pump control unit, Starter relay 1, Fuse holder B	916
5. Start/Stop operation button, Terminal 15 voltage supply relay, Onboard supply control unit, Starter relay 2, Start/Stop operation warning lamp, Button illumination bulb	917
6. Vacuum pump relay, Onboard supply control unit, Fuse holder C, Vacuum pump for brakes	918
7. Engine/motor control unit, Fuse holder C	919
8. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug connector, Spark plugs	920
9. Accelerator pedal module, Knock sensor 1, Accelerator position sender, Radiator outlet coolant temperature sender, Accelerator position sender 2, Engine/motor control unit	921
10. Intake manifold sender, Fuel pressure sender, Intake air temperature sender 2, Hall sender 3, Throttle valve module, Engine/motor control unit	922
11. Charge pressure sender, Engine speed sender, Charge pressure sender, Hall sender, Intake air temperature sender, Hall sender 3, Engine/motor control unit, Charge pressure positioner	923
12. Engine/motor control unit, Injector, cylinder 1, Charge air cooling pump	924
13. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Lambda probe 1 heater after catalytic converter	925
14. Brake light switch, Oil pressure switch, Brake servo pressure sensor, Clutch position sender, Engine/motor control unit	926
15. Gearbox neutral position sender, Data bus diagnostic interface, Engine/motor control unit	927
16. Rev. counter, Speedometer, Control unit in dash panel insert, Data bus diagnostic interface, Alternator warning lamp, Cruise control system warning lamp, Electronic power control fault lamp	928
17. Oil pressure switch for reduced oil pressure, Fuel gauge, Coolant temperature gauge, Oil level and oil temperature sender, Control unit in dash panel insert, Coolant temperature and coolant shortage warning lamp, Reserve fuel warning lamp	929
103 - Fuses in interior , (AW0)	930-942
1. Fuses in interior , (AW0)	930
2. Emergency call module control unit and communication unit, Fuse holder B, Fuse holder C	931
3. Fuse holder C	932
4. Fuse holder C	933
5. Fuse holder C	934
6. Engine/motor control unit, Fuse holder C	935
7. Fuse holder C	936
8. Onboard supply control unit, Fuse holder C	937
9. Onboard supply control unit, Fuse holder C	938
10. Fuse holder C	939
11. Fuse holder C	940
12. Fuse holder C	941
13. Fuse holder C	942
104 - Fuses in interior , (AW1)	943-956
1. Fuses in interior , (AW1)	943
2. Emergency call module control unit and communication unit, Fuse holder B, Fuse holder C	944
3. Fuse holder C	945
4. Fuse holder C	946
5. Fuse holder C	947
6. Fuse holder C	948
7. Engine/motor control unit, Fuse holder C	949
8. Onboard supply control unit, Fuse holder C	950
9. Onboard supply control unit, Fuse holder C	951
10. Fuse holder C	952
11. Fuse holder C	953
12. Fuse holder C	954
13. Fuse holder C	955
14. Fuse holder C	956
105 - Seat heating . (4A3)	957-962

1. Seat heating , (4A3)	957
2. Onboard supply control unit, Fuse holder B, Fuse holder C	958
3. Driver seat temperature sensor, Heated front seats control unit, Fuse holder C, Heated backrest for driver seat	959
4. Heated front seats control unit, Heated backrest for front passenger seat	960
5. Heated driver seat regulator, Front passenger seat temperature sensor, Seat occupied recognition control unit	961
6. Heated driver seat regulator, Heated front passenger seat regulator	962
106 - 2.0l diesel engine , DGMA	963-985
1. 2.0l diesel engine , DGMA	963
2. Battery, Starter, Alternator with voltage regulator, Fuse holder B	964
3. Main relay, Fuse holder B, Fuse 14 on fuse holder B	965
4. Low heat output relay, High heat output relay, Fuse holder B	966
5. Ignition/starter switch, Onboard supply control unit, Converter box	967
6. Terminal 15 voltage supply relay, Onboard supply control unit, Starter relay 1, Fuse holder C	968
7. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel pump relay, Fuse holder C	969
8. Engine control unit	970
9. Cylinder 1 combustion chamber pressure sender, Cylinder 2 combustion chamber pressure sender, Cylinder 3 combustion chamber pressure sender, Engine control unit, Glow plug 1, Glow plug 2, Glow plug 3	971
10. Cylinder 4 combustion chamber pressure sender, Automatic glow period control unit, Engine control unit, Glow plug 4	972
11. Accelerator pedal module, Ambient temperature sensor, Accelerator position sender, Accelerator position sender 2, Engine control unit	973
12. Oil pressure switch for reduced oil pressure, Lambda probe, Water separator sender, Engine control unit, Coolant circuit valve, Valve for oil pressure control, Lambda probe heater	974
13. Charge pressure sender, Radiator outlet coolant temperature sender, Exhaust gas pressure sensor 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Charge air temperature sender after charge air cooler, Engine control unit	975
14. Air mass meter, Pressure differential sender, Engine control unit, Exhaust flap control unit, Charge air cooling pump	976
15. Control unit for NOx sender, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Auxiliary pump for heating	977
16. Throttle valve module, Fuel pressure sender, Engine control unit, Injector, cylinder 4, Fuel pressure regulating valve, Fuel metering valve	978
17. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine speed sender, Engine control unit, Charge pressure control solenoid valve, Heater element for crankcase breather	979
18. Intake air temperature sender, Coolant temperature sender, Fuel temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Temperature sensor 2 for exhaust recirculation, Reducing agent quality sensor, Engine control unit	980
19. Delivery unit for reducing agent metering system, Engine control unit, Control unit for reducing agent metering system, Control unit for reducing agent heater, Relay for reducing agent metering system	981
20. ABS control unit, Engine control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	982
21. Brake light switch, Hall sender, Clutch position sender, Position sender for charge pressure positioner, Engine control unit, Injector for reducing agent	983
22. Coolant temperature gauge, Rev. counter, Speedometer, Oil level and oil temperature sender, Fuel pressure sender for low pressure, Control unit in dash panel insert, Engine control unit, Alternator warning lamp, Coolant temperature and coolant shortage warning lamp, Cruise control system warning lamp, Reserve fuel warning lamp, Electronic power control fault lamp	984
23. Oil pressure switch, Fuel gauge, Control unit in dash panel insert, Reserve fuel warning lamp	985
107 - 2.0l petrol engine , CPLA,CPPA,(AW1)	986-1003
1. 2.0l petrol engine , CPLA,CPPA,(AW1)	986
2. Battery, Starter, Alternator with voltage regulator, Main relay, Fuse holder B, Fuse 14 on fuse holder B	987
3. Main relay, Fuse holder B	988
4. Secondary air pump relay, Terminal 15 voltage supply relay, Engine component current supply relay, Fuse holder B, Secondary air pump motor	989
5. Starter relay 1, Starter relay 2	990
6. Fuel gauge sender, Fuel system pressurisation pump, Engine/motor control unit	991
7. Radiator outlet coolant temperature sender, Engine/motor control unit	992
8. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector, Spark pluas	993

9. Throttle valve module, Throttle valve drive for electric throttle, Engine/motor control unit, Continued coolant circulation pump, Charge pressure positioner	994
10. Intake manifold sender, Engine speed sender, Fuel pressure sender, Sender 1 for secondary air pressure, Engine/motor control unit	995
11. Charge pressure sender, Hall sender, Knock sensor 1, Coolant temperature sender, Engine/motor control unit	996
12. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve	997
13. Accelerator pedal module, Accelerator position sender 2, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Valve for oil pressure control	998
14. Lambda probe 1 before catalytic converter, Engine/motor control unit, Intake manifold flap valve, Fuel system diagnostic pump, Lambda probe heater	999
15. Brake light switch, Brake pedal switch, Oil pressure switch for reduced oil pressure, Lambda probe 1 after catalytic converter, Clutch position sender, Engine/motor control unit, Lambda probe 1 heater after catalytic converter	1000
16. Ambient temperature sensor, Data bus diagnostic interface, Engine/motor control unit, Diagnostic connection, Radiator blind control motor	1001
17. Fuel gauge, Coolant temperature gauge, Rev. counter, Speedometer, Coolant shortage indicator sender, Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface, Alternator warning lamp, Coolant temperature and coolant shortage warning lamp, Cruise control system warning lamp, Reserve fuel warning lamp, Electronic power control fault lamp	1002
18. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert, Onboard supply control unit	1003
108 - 1.8l petrol engine , CPKA,CPRA,(AW0)	1004-1023
1. 1.8l petrol engine , CPKA,CPRA,(AW0)	1004
2. Battery, Starter, Alternator with voltage regulator, Fuse holder B, Fuse 14 on fuse holder B	1005
3. Main relay, Fuse holder B	1006
4. Secondary air pump relay, Engine component current supply relay, Fuse holder B, Secondary air pump motor	1007
5. Ignition/starter switch, Converter box	1008
6. Terminal 15 voltage supply relay	1009
7. Fuse holder C	1010
8. Fuel gauge sender, Fuel system pressurisation pump	1011
9. Radiator outlet coolant temperature sender, Engine/motor control unit	1012
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector, Spark plugs	1013
11. Throttle valve module, Throttle valve drive for electric throttle, Engine/motor control unit, Continued coolant circulation pump, Charge pressure positioner	1014
12. Intake manifold sender, Engine speed sender, Fuel pressure sender, Sender 1 for secondary air pressure, Engine/motor control unit	1015
13. Charge pressure sender, Hall sender, Knock sensor 1, Coolant temperature sender, Engine/motor control unit	1016
14. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve	1017
15. Accelerator pedal module, Accelerator position sender 2, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Valve for oil pressure control	1018
16. Lambda probe 1 before catalytic converter, Ambient temperature sensor, Engine/motor control unit, Intake manifold flap valve, Fuel system diagnostic pump, Lambda probe heater	1019
17. Brake light switch, Brake pedal switch, Oil pressure switch for reduced oil pressure, Lambda probe 1 after catalytic converter, Clutch position sender, Engine/motor control unit, Lambda probe 1 heater after catalytic converter	1020
18. Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit, Radiator blind control motor	1021
19. Fuel gauge, Coolant temperature gauge, Rev. counter, Speedometer, Coolant shortage indicator sender, Control unit in dash panel insert, Onboard supply control unit, Alternator warning lamp, Coolant temperature and coolant shortage warning lamp, Cruise control system warning lamp, Electronic power control fault lamp	1022
20. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert, Onboard supply control unit, Reserve fuel warning lamp	1023
109 - Airbag systems , (4UF)	1024-1029
1. Airbag systems , (4UF)	1024
2. Airbag coil connector and return ring with slip ring, Airbag control unit, Steering column electronics control unit. Front passenger side airbag deactivated warning lamp. Driver side airbag	1025

igniter	
3. Key operated switch to deactivate front passenger side airbag, Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit, Front passenger side airbag igniter 1, Side airbag igniter on driver side	1026
4. Driver side belt switch, Front passenger side belt switch, Seat occupied sensor, front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Side airbag igniter on front passenger side, Rear side airbag igniter on driver side	1027
5. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Rear side airbag igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	1028
6. Airbag control unit, Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface, Airbag warning lamp, Diagnostic connection	1029
110 - 6-speed automatic gearbox with Tiptronic , CPKA,CPRA,CZDA,CZTA	1030-1034
1. 6-speed automatic gearbox with Tiptronic , CPKA,CPRA,CZDA,CZTA	1030
2. Reversing switch, Multifunction switch, Automatic gearbox control unit	1031
3. Multifunction switch, Automatic gearbox control unit	1032
4. Automatic gearbox control unit	1033
5. Selector lever locked in position P switch, Automatic gearbox control unit	1034
111 - 6-speed automatic gearbox 09G , CPKA,CPRA,CZDA,CZTA	1035-1039
1. 6-speed automatic gearbox 09G , CPKA,CPRA,CZDA,CZTA	1035
2. Reversing switch, Multifunction switch, Automatic gearbox control unit	1036
3. Gearbox oil temperature sender, Gearbox input speed sender, Gearbox output speed sender, Automatic gearbox control unit, Solenoid valve 1, Solenoid valve 2, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 5, Automatic gearbox pressure regulating valve 7	1037
4. Automatic gearbox control unit, Dash panel insert, Automatic gearbox pressure regulating valve 2, Automatic gearbox pressure regulating valve 3, Automatic gearbox pressure regulating valve 4	1038
5. Selector lever, Tiptronic switch, Selector lever locked in position P switch, Automatic gearbox control unit, Selector lever display illumination bulb, Selector lever lock solenoid, Selector lever position display	1039
112 - 6-speed automatic gearbox , CWVA,CWVB	1040-1044
1. 6-speed automatic gearbox , CWVA,CWVB	1040
2. Reversing switch, Multifunction switch, Automatic gearbox control unit	1041
3. Multifunction switch, Automatic gearbox control unit	1042
4. Automatic gearbox control unit	1043
5. Selector lever locked in position P switch, Automatic gearbox control unit	1044
113 - Radio system , (I6V),(I6W),(I7A),(I7B),(I7C)	1045-1049
1. Radio system , (I6V),(I6W),(I7A),(I7B),(I7C)	1045
2. Control unit 1 for information electronics, Connection for external audio sources	1046
3. Data bus diagnostic interface, Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker	1047
4. Control unit 1 for information electronics, Rear right treble loudspeaker, Rear right bass loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	1048
5. Control unit 1 for information electronics, Aerial, Rear left treble loudspeaker, Rear left bass loudspeaker, Radio aerial 2, Left aerial module, Right aerial module	1049
114 - Radio system , (I7F),(I7G)	1050-1054
1. Radio system , (I7F),(I7G)	1050
2. Data bus diagnostic interface, Control unit 1 for information electronics	1051
3. Control unit 1 for information electronics, Rear right treble loudspeaker, Rear right bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	1052
4. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	1053
5. Onboard supply control unit, Control unit 1 for information electronics, Aerial, Right aerial module, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Heated rear window	1054
801 - -Fitting locations: Earth points - 3	1055-1059
1. Earth points	1055-1059
1.1 Overview of earth points at front	1055-1059
802 - -Fitting locations: Fuses - 3	1060-1099
1. Fuses	1060-1099
1.1 Overview of fuse holders	1060
1.2 Fitting location of fuse holder A -SA-	1061-1063
1.2.1 Fitting location of fuse holder A -SA-	1062
1.2.2 Fitting location of fuse holder A -SA-. hybrid	1063

1.3 Fuse assignment for fuse holder A -SA-	1064
1.3.1 Fuse assignment for fuse holder A -SA-, from July 2014	1064
1.3.2 Fuse assignment for fuse holder A -SA-, hybrid from September 2014	1064
1.4 Fitting location of fuse holder B -SB-	1065
1.5 Fuse assignment for fuse holder B -SB-, from July 2014	1066-1068
1.6 Fuse assignment for fuse holder B -SB-, from July 2015	1069-1071
1.7 Fuse assignment for fuse holder B -SB-, from July 2017	1072-1074
1.8 Fitting location of fuse holder C -SC-	1075-1077
1.8.1 Fitting location of fuse holder C -SC-, LHD models	1075-1076
1.8.2 Fitting location of fuse holder C -SC-, RHD models	1077
1.9 Fuse assignment for fuse holder C -SC-, from July 2014	1078-1081
1.10 Fuse assignment for fuse holder C -SC-, from July 2015	1082-1086
1.11 Fuse assignment for fuse holder C -SC-, from July 2016	1087-1090
1.12 Fuse assignment for fuse holder C -SC-, from July 2017	1091-1094
1.13 Fitting location of driver seat adjustment thermal fuse 1 -S44-, from July 2014	1095
1.14 Fuse assignment for driver seat adjustment thermal fuse 1 -S44-, from July 2014	1096
1.15 Fitting location of fuses in fuse holder -S-	1097
1.16 Fuse assignment for fuses in fuse holder -S-, hybrid from September 2014	1098-1099
803 - - Fitting locations: Relays - 3	1100-1121
1. Relays	1100-1121
1.1 Overview of relay carriers	1100-1102
1.2 Fitting locations and relay assignment, E-box	1103-1106
1.2.1 Fitting locations and relay assignment, E-Box low, from July 2014	1103
1.2.2 Fitting locations and relay assignment, E-Box high, from July 2014	1104-1105
1.2.3 Fitting locations and relay assignment, E-Box high, hybrid system, from September 2014	1106
1.3 Fitting locations and relay assignment, E-Box high, Russia, from November 2014	1107
1.4 Fitting locations and relay assignment: relay carrier under dash panel	1108-1113
1.4.1 Fitting locations and relay assignment, left-hand drive models (E-Box low), from July 2014	1108-1109
1.4.2 Fitting locations and relay assignment, left-hand drive models (E-Box high), from July 2014	1110-1111
1.4.3 Fitting locations and relay assignment, right-hand drive models (E-Box high), from August 2014	1112-1113
1.5 Fitting locations and relay assignment, left-hand drive models (E-Box low), from July 2015	1114-1115
1.6 Fitting locations and relay assignment, left-hand drive models (E-Box high), from July 2015	1116-1117
1.7 Fitting locations and relay assignment, left-hand drive models (E-Box low), from July 2016	1118-1119
1.8 Fitting locations and relay assignment, left-hand drive models (E-Box high), from July 2016	1120-1121
804 - - Fitting locations: Control units in front part of vehicle - 3	1122-1162
1. Control units in front part of vehicle	1122-1162
1.1 Overview of control units in front part of vehicle	1122-1124
1.1.1 Overview of control units in front part of vehicle, all vehicles	1122-1123
1.1.2 Overview of control units in front part of vehicle, additional in hybrid models	1124
1.2 Radiator fan control unit -J293-	1125
1.3 Auxiliary heater control unit -J364-	1126-1127
1.4 Automatic glow period control unit -J179-	1128-1129
1.5 ABS control unit -J104-	1130-1133
1.5.1 ABS control unit -J104-, 26-pin connector -T26-	1130-1131
1.5.2 ABS control unit -J104-, 47-pin connector -T47-	1132-1133
1.6 Control unit for NOx sender -J583-	1134-1135
1.7 Automatic gearbox control unit -J217-	1136-1140
1.7.1 Automatic gearbox control unit -J217-, in plenum chamber	1136-1137
1.7.2 Automatic gearbox control unit -J217-, in engine compartment	1138-1140
1.8 Mechatronic unit for dual clutch gearbox -J743-	1141-1144
1.8.1 Mechatronic unit for dual clutch gearbox -J743-, 25-pin connector	1141-1142
1.8.2 Mechatronic unit for dual clutch gearbox -J743-, 20-pin connector	1143-1144
1.9 Control unit for structure-borne sound -J869-	1145-1146
1.10 Power steering control unit -J500-	1147-1148
1.11 Engine control unit -J623-	1149-1152
1.11.1 Engine control unit -J623-, 105-pin/91-pin connector	1149-1150
1.11.2 Engine control unit -J623-, 94-pin/60-pin connector	1151
1.11.3 Engine control unit -J623-, 80-pin connector	1152
1.12 Battery monitoring control unit -J367-	1153-1154
1.13 Adaptive cruise control unit -J428-	1155
1.14 Power and control electronics for electric drive -JX1-	1156-1157
1.15 Jump start connection -TV32-	1158
1.16 Three-phase current drive -VX54-	1159-1161
1.17 Control unit for air conditioning compressor -J842-	1162
805 - - Fitting locations: Control units in middle part of vehicle - 3	1163-1246
1. Control units in middle part of vehicle	1163-1246

1.1 Overview of control units in middle part of vehicle	1163-1166
1.2 Airbag control unit -J234-	1167-1169
1.2.1 Airbag control unit -J234-, 50-pin connector	1167
1.2.2 Airbag control unit -J234-, 75-pin connector	1168
1.2.3 Airbag control unit -J234-, 100-pin connector	1169
1.3 Sliding sunroof adjustment control unit -J245-	1170
1.4 Control unit in dash panel insert -J285-	1171-1172
1.5 Data bus diagnostic interface -J533-	1173-1174
1.6 Fresh air blower control unit -J126-	1175-1176
1.7 Control unit for reducing agent metering system -J880-/control unit for reducing-agent heater -J891-	1177-1178
1.8 Multifunction steering wheel control unit -J453-	1179-1180
1.9 Heated front seats control unit -J774-	1181-1182
1.10 Steering column electronics control unit -J527-	1183-1184
1.11 Control unit for electronic steering column lock -J764-	1185-1186
1.12 Amplifier -R12-	1187-1188
1.13 Telephone transmitter and receiver unit -R36-	1189-1190
1.14 Multimedia system control unit -J650-	1191-1193
1.14.1 Multimedia system control unit -J650-, in front centre armrest	1191-1192
1.14.2 Multimedia system control unit -J650-, on glove compartment	1193
1.15 Mobile telephone operating electronics control unit -J412-	1194-1197
1.15.1 Mobile telephone operating electronics control unit -J412-, in front centre armrest	1194-1195
1.15.2 Mobile telephone operating electronics control unit -J412-, on glove compartment	1196-1197
1.16 Control unit for cornering light and headlight range control -J745-	1198
1.17 Control module with display for radio and navigation system -J503-/radio -R-	1199-1200
1.18 Voltage stabilizer -J532-	1201
1.19 Parking aid control unit -J446-	1202-1203
1.20 Heater and air conditioning system control unit	1204-1210
1.20.1 Heater control unit -J65-/J162-	1204-1205
1.20.2 Climatronic control unit -J255-	1206-1208
1.20.3 Air conditioning system control unit -J301-	1209-1210
1.21 Driver door control unit -J386-	1211-1214
1.21.1 Driver door control unit -J386-, AW0	1211
1.21.2 Driver door control unit -J386-, AW1	1212-1214
1.22 Front passenger door control unit -J387-	1215-1219
1.22.1 Front passenger door control unit -J387-, AW0	1215-1216
1.22.2 Front passenger door control unit -J387-, AW1	1217-1219
1.23 Rear left door control unit -J388-	1220-1223
1.23.1 Rear left door control unit -J388-, AW0	1220-1221
1.23.2 Rear left door control unit -J388-, AW1	1222-1223
1.24 Rear right door control unit -J389-	1224-1227
1.24.1 Rear right door control unit -J389-, AW0	1224-1225
1.24.2 Rear right door control unit -J389-, AW1	1226-1227
1.25 Onboard supply control unit -J519-	1228-1235
1.25.1 Onboard supply control unit -J519-, AW0	1228-1231
1.25.2 Onboard supply control unit -J519-, AW1	1232-1235
1.26 Entry and start authorisation control unit -J518-	1236-1237
1.27 Emergency call module control unit and communication unit -J949-	1238-1239
1.28 Fuel pump control unit -J538-	1240-1241
1.29 Seat occupied recognition control unit -J706-	1242-1243
1.30 Exhaust flap control unit -J883-	1244-1246
806 - -Fitting locations: Control units in rear part of vehicle - 3	1247-1257
1. Control units in rear part of vehicle	1247-1257
1.1 Overview of control units in rear part of vehicle	1247-1249
1.1.1 Overview of control units in rear part of vehicle, all vehicles	1247-1248
1.1.2 Overview of control units in rear part of vehicle, additional in hybrid models	1249
1.2 Blind spot monitor control unit -J1086-	1250
1.3 Trailer detector control unit -J345-	1251-1252
1.4 Blind spot monitor control unit 2 -J1087-	1253-1254
1.5 Battery monitoring control unit -J367-, additional in hybrid vehicles	1255-1257
807 - -Fitting locations: Coupling points - 3	1258-1268
1. Coupling points	1258-1268
1.1 Coupling point in engine compartment, left	1258
1.2 Coupling point in interior, centre	1259
1.3 Coupling point on front left door	1260
1.4 Coupling point on front right door	1261

1.5 Diagnostic connection -U31-	1262-1263
1.5.1 Diagnostic connection -U31-, left-hand drive models	1262
1.5.2 Diagnostic connection -U31-, right-hand drive models	1263
1.6 Coupling point for front left seat	1264
1.7 Coupling point for front right seat	1265
1.8 Coupling point on rear left door	1266
1.9 Coupling point on rear right door	1267
1.10 Coupling point in luggage compartment, right	1268