



Contents

1	Engine list	1
2	Service work	3
2.1	Information about flexible or fixed service	3
2.2	Service tables	10
3	General information	23
3.1	Raising vehicle with lifting platform or trolley jack	23
3.2	Label	24
3.3	Connecting vehicle diagnostic tester	25
3.4	Vehicle identification number	26
3.5	Vehicle data sticker	27
3.6	Countries with hot climate	28
3.7	Country overview for petrol not compliant with EN 228	29
3.8	Country overview for diesel not compliant with EN 590	30
3.9	Engine code and engine number	31
3.10	Severe operating conditions	31
3.11	Countries with high levels of dust	31
3.12	Identification plate	32
3.13	Shortened intervals for spark plug replacement	33
4	Descriptions of work:	38
4.1	Removable towing bracket: checking and cleaning if necessary	40
4.2	Swivel joints and suspension link mountings: inspecting	42
4.3	Automatic headlight control and static cornering light: checking function	42
4.4	Automatic gearbox: changing ATF (09G gearbox)	44
4.5	Front passenger airbag: checking key switch and "ON/OFF function"	45
4.6	Battery: checking battery terminal clamps for secure seating	46
4.7	Battery: checking with battery tester (always refer to workshop manual)	49
4.8	Status of battery: reading, sending diagnosis protocol online	49
4.9	Tyres: checking condition, wear pattern, inflation pressures and tread depth	50
4.10	Brake and clutch system: changing brake fluid	61
4.11	Brake system and shock absorbers: inspecting for leaks and damage	67
4.12	Brakes, front and rear: checking thickness of brake pads and condition of brake discs	68
4.13	Brake fluid level: Check	71
4.14	6-speed dual clutch gearbox 02E: changing oil and filter	73
4.15	Electric windows: checking positioning (open and close functions)	73
4.16	Bonnet catch hook: grease.	73
4.17	Multi-purpose additive for petrol fuel: adding	75
4.18	Boots: inspecting	76
4.19	Renewing rubber buffers for engine cover	77
4.20	Hybrid components: inspect for damage to high-voltage components and wires.	77
4.21	Interior and exterior body: inspecting for corrosion with doors and flaps open	78
4.22	Poly V-belt: adjusting tension on engines without automatic tensioning roller	78
4.23	Poly V-belt: checking condition	79
4.24	Dash panel insert: Adapting menu language	79
4.25	Cooling system: checking frost protection and coolant level	81
4.26	Air filter: cleaning housing and renewing filter element	84
4.27	Memory seat: initialising	90
4.28	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	90
4.29	Engine cover panel "top": removing and installing	90
4.30	Engine compartment cover (noise insulation) "bottom": removing and installing	92
4.31	Engine oil level: checking	92
4.32	Engine oil: draining or extracting, renewing oil filter and replenishing engine oil	94
4.33	Engine oil: capacities and specifications	103



4.34	Checking breakdown set	104
4.35	Panorama sliding sunroof: check function, clean and lubricate guide rails and clean wind deflector.	104
4.36	Road test: performing (driving behaviour, noises, air conditioner etc.)	108
4.37	Wheel securing bolts: tightening to specified torque	109
4.38	Radio code: reading using vehicle diagnostic tester	112
4.39	Radio/radio navigation system: entering PIN of anti-theft coding and storing local radio stations to station buttons	113
4.40	Tyre pressure loss indicator: performing basic setting	117
4.41	Renewing tyre pressure sensors	119
4.42	Window wash/wipe system and headlight washer system: checking function	119
4.43	Wiper blades: checking park position	122
4.44	Wiper blade protection: removing	123
4.45	Headlight adjustment: checking halogen headlights	126
4.46	Headlight adjustment: checking gas discharge headlights	129
4.47	Checking fog lights and other auxiliary lights	133
4.48	Sliding sunroof drains: checking for blockage, cleaning if necessary	134
4.49	Service interval display: resetting/recoding	136
4.50	Sliding sunroof: checking function, cleaning and greasing guide rails	141
4.51	Snow filter for fresh air blower	143
4.52	Track rod ends: checking clearance, firm seating and boots	144
4.53	Auxiliary heater: setting weekday in menu of dash panel insert	144
4.54	Dust and pollen filter: cleaning housing and renewing filter element	145
4.55	Transportation mode: switching off	145
4.56	Transportation devices: removing blocking pieces from springs on front axle	147
4.57	Door arrester: grease.	147
4.58	Clock and date: setting	148
4.59	Underbody: inspecting for damage to underbody sealant, underbody panels, routing of lines, plugs	149
4.60	Toothed belt: renew	150
4.61	Toothed belt: Checking	150
4.62	Spark plugs: Renew	153
4.63	Fault memory of all systems: reading with vehicle diagnostic tester , correcting possible faults according to repair guidelines	163
5	Exhaust emissions test	164
5.1	Exhaust emissions test for petrol engines	164
6	Glossary	167