



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Operation and safety notes for gas discharge lamps	2
2 Repair notes	4
2.1 Contact corrosion	4
2.2 Routing and attachment of lines	4
3 Battery	5
3.1 Types of battery	5
3.2 Battery - general notes	5
27 - Starter, current supply, CCS	6
1 Battery	6
1.1 Assembly overview - battery	6
1.2 Removing and installing battery	9
1.3 Disconnecting and connecting battery	12
1.4 Removing and installing battery tray	16
1.5 Checking battery	18
1.6 Charging battery	18
1.7 Removing and installing earth wire with battery monitor control unit J367	18
1.8 Adapting battery monitor control unit J367	21
2 Alternator	22
2.1 Assembly overview - alternator	22
2.2 Removing and installing alternator	24
2.3 Checking alternator	40
2.4 Checking poly V-belt	40
2.5 Removing and installing poly V-belt pulley	41
2.6 Removing and installing voltage regulator	48
3 Starter motor	52
3.1 Assembly overview - starter	52
3.2 Removing and installing starter motor	54
3.3 Checking starter	61
4 Cruise control system (CCS)	62
5 Start/stop system	63
5.1 General description - start/stop system	63
5.2 Removing and installing voltage stabiliser	65
6 Adaptive cruise control	66
6.1 Overview of fitting locations - adaptive cruise control	66
6.2 Removing and installing automatic distance control unit	67
6.3 Calibrating adaptive cruise control	70
90 - Gauges, instruments	71
1 Dash panel insert	71
1.1 Assembly overview - dash panel insert	71
1.2 Removing and installing dash panel insert KX2	72
1.3 Multi-pin connector pin assignment on dash panel insert	73
1.4 Removing and installing ambient temperature sensor	74
2 Horn	75
2.1 Assembly overview - horn	75
2.2 Removing and installing treble horn H2 and bass horn H7	75



92 - Windscreen wash/wipe system	77
1 Windscreen wiper system.	77
1.1 Assembly overview - windscreen wiper system	77
1.2 Moving wipers to service position	78
1.3 Removing and installing wiper blade	78
1.4 Removing and installing wiper arms	79
1.5 Adjusting wiper arms	81
1.6 Removing and installing wiper motor V	82
1.7 Removing and installing rain and light sensor	85
1.8 Repairing rain and light sensor	87
2 Windscreen washer system	89
2.1 Assembly overview - windscreen washer system	89
2.2 Removing and installing washer fluid reservoir	90
2.3 Removing and installing windscreen washer fluid level sender	91
2.4 Removing and installing windscreen washer pump	92
2.5 Removing and installing washer jets	93
2.6 Adjusting spray jets	93
3 Headlight washer system	94
3.1 Assembly overview - headlight washer system	94
3.2 Removing and installing headlight washer system pump V11	94
3.3 Removing and installing washer jets	95
3.4 Adjusting spray jets	96
3.5 Removing and installing pop-up cylinder	96
4 Washer fluid lines	98
4.1 Repairing washer fluid lines	98
94 - Lights, bulbs, switches - exterior	99
1 Headlights	100
1.1 Assembly overview - headlight	100
1.2 Removing and installing headlight	106
1.3 Adjusting headlights	107
1.4 Adjusting headlight installation position	108
1.5 Removing and installing front turn signal bulb M5 / M7	109
1.6 Installing repair kit for headlight housing	112
1.7 Converting headlights from driving on right to driving on left	116
1.8 Converting headlights from driving on left to driving on right	117
1.9 Removing and installing headlight range control motor V48 / V49	119
1.10 Removing and installing dipped beam bulb	120
1.11 Removing and installing headlight main beam bulb M30 / M32	121
1.12 Removing and installing gas discharge bulb L13 / L14	122
1.13 Removing and installing side light bulb M1 / M3	124
1.14 Removing and installing daytime running light bulb L174 / L175	125
1.15 Removing and installing daytime running light	127
1.16 Removing and installing headlight screen adjustment solenoid	128
1.17 Removing and installing swivel module position sensor G474 / G475	128
1.18 Removing and installing bulbs for cornering light L148 / L149	128
1.19 Removing and installing gas discharge bulb control unit J343 / J344	130
1.20 Removing and installing output module for headlight J667 / J668	130
1.21 Removing and installing control unit for daytime running light and side light J860 / J861	131
2 Fog lights	133
2.1 Assembly overview - fog lights	133
2.2 Removing and installing fog light	135
2.3 Removing and installing fog light bulb L22 / L23	138



2.4	Adjusting fog lights	139
3	Side marker light	140
3.1	Removing and installing side marking light bulb	140
4	Lights in exterior mirror	142
4.1	Assembly overview - lights in exterior mirror	142
4.2	Removing and installing turn signal repeater bulb L131 / L132	143
4.3	Removing and installing entry light in exterior mirror	144
5	Tail lights	145
5.1	Assembly overview - tail lights in body	145
5.2	Assembly overview - tail lights in rear lid	147
5.3	Removing and installing bulb carrier	149
5.4	Removing and installing tail light in rear lid	150
5.5	Removing and installing tail light	151
5.6	Removing and installing tail light bulb M2 / M4	151
5.7	Removing and installing rear fog light	152
5.8	Removing and installing brake and tail light bulb M21 / M22	152
5.9	Removing and installing reversing light bulb	153
5.10	Removing and installing turn signal bulb	154
6	High-level brake light	156
6.1	Assembly overview - high-level brake light	156
6.2	Removing and installing additional brake light	156
6.3	Removing and installing high-level brake light	157
7	Number plate light	158
7.1	Removing and installing number plate light X4 / X5	158
7.2	Removing and installing bulb for number plate light X4 / X5	158
8	Entry and start authorisation system	159
8.1	Overview of fitting locations - entry and start authorisation system	159
8.2	Removing and installing entry and start authorisation control unit J518	162
8.3	Removing and installing interior aerial 1 for entry and start authorisation R138	164
8.4	Removing and installing interior aerial 2 for entry and start authorisation R139	164
8.5	Removing and installing front passenger side aerial for entry and start system R135	165
8.6	Removing and installing driver side aerial for entry and start system R134	165
8.7	Removing and installing luggage compartment aerial for entry and start system R137	165
8.8	Removing and installing rear bumper aerial for entry and start system R136	166
8.9	Checking entry and start system aerials and sensors	167
9	Steering column switch module	169
9.1	Assembly overview - steering column switch module	169
9.2	Removing and installing steering column electronics control unit J527	172
9.3	Removing and installing steering column combination switch	177
9.4	Removing and installing base for steering column combination switch	187
9.5	Removing and installing electronic steering column lock control unit J764	195
9.6	Removing and installing ignition/starter switch	196
9.7	Checking ignition/starter switch	197
9.8	Removing and installing lock cylinder	198
9.9	Removing and installing steering lock housing	200
9.10	Removing and installing ignition key withdrawal lock solenoid N376	200
10	Parking aid	202
10.1	Assembly overview – parking aid	202
10.2	Removing and installing parking aid control unit J446	205
10.3	Removing and installing front parking aid warning buzzer H22	206
10.4	Removing and installing rear parking aid warning buzzer H15	207
10.5	Removing and installing front parking aid senders	208
10.6	Removing and installing rear parking aid senders	212
11	Main beam assist	217



11.1	Overview - main beam assist	217
11.2	Overview of fitting locations - main beam assist	217
11.3	Removing and installing main beam assist control unit J844	218
11.4	Renewing main beam assist control unit J844	219
11.5	Coding main beam assist control unit J844	219
11.6	Removing and installing light sensor G399	219
12	Automatic headlight range control	220
12.1	Assembly overview - automatic headlight range control	220
12.2	Removing and installing headlight range control unit	221
13	Towing bracket	223
13.1	Assembly overview - towing bracket socket	223
13.2	Removing and installing trailer detector control unit J345	223
13.3	Trailer socket	224
14	Blind Spot Monitor	226
14.1	Assembly overview - blind spot monitor	226
14.2	Removing and installing warning lamp for Blind Spot Monitor K303 / K304	226
14.3	Removing and installing blind spot monitor control unit J1086 / J1087	227
14.4	Calibrating Blind Spot Monitor	228
96	Lights, bulbs, switches - interior	235
1	Lights	235
1.1	Overview of fitting locations - lights in dash panel	235
1.2	Overview of fitting locations - lights in luggage compartment	237
1.3	Overview of fitting locations - lights in roof trim	238
1.4	Removing and installing glove compartment light W6	238
1.5	Removing and installing Central locking SAFELock function warning lamp K133	240
1.6	Removing and installing luggage compartment light W3	241
1.7	Removing and installing illuminated vanity mirror W20 / W14	242
1.8	Renewing front interior light bulb W1 / W13 / W19	243
1.9	Removing and installing centre reading lights	245
1.10	Renewing bulb of rear interior light W47 / W48	245
2	Controls	248
2.1	Overview of fitting locations - controls in dash panel	249
2.2	Overview of fitting locations - controls in front doors	250
2.3	Overview of fitting locations - controls in rear doors	251
2.4	Overview of fitting locations - controls in centre console	252
2.5	Overview of fitting locations - controls in roof trim	253
2.6	Removing and installing rotary light switch EX1	253
2.7	Removing and installing regulator for switch and instrument illumination E20	255
2.8	Removing and installing tyre pressure monitor display button E492	256
2.9	Removing and installing rear ear interior locking switch E273 / E274	257
2.10	Removing and installing driver side interior locking button for central locking system E308	258
2.11	Removing and installing front passenger side interior locking button for central locking system E309	259
2.12	Removing and installing remote release button for fuel filler flap and rear lid E463	260
2.13	Removing and installing Start/Stop operation button E693	261
2.14	Removing and installing TCS and ESP button E256	262
2.15	Removing and installing parking aid button E266	262
2.16	Removing and installing the starter button E378	262
2.17	Removing and installing button for electric drive E656 , high-voltage vehicle	263
2.18	Removing and installing front passenger side airbag deactivated warning lamp K145	263
2.19	Removing and installing hazard warning light button E229	264
2.20	Removing and installing glove compartment light switch E26	264
2.21	Removing and installing mirror adjustment switch E43 / E168	265
2.22	Removing and installing operating unit for window regulator in driver door E512	266



2.23	Removing and installing window regulator switch in front passenger door E107	267
2.24	Removing and installing interior monitoring deactivation switch E267	269
2.25	Removing and installing rear window regulator button E700 / E705	270
2.26	Removing and installing rear lid contact switch	271
2.27	Removing and installing sunroof button E325	271
2.28	Removing and installing front interior light/reading light	272
2.29	Removing and installing rear interior light/reading light	274
2.30	Removing and installing garage door operating unit E284	275
3	Anti-theft alarm	277
3.1	Assembly overview - interior monitor	277
3.2	Activating and deactivating anti-theft alarm	278
3.3	Central locking and anti-theft alarm system aerial R47	279
3.4	Removing and installing alarm horn H12	279
3.5	Removing and installing interior monitoring sensor G273	280
3.6	Removing and installing bonnet contact switch F266	280
3.7	Adaptations of anti-theft alarm system	280
4	Immobiliser	282
4.1	Removing and installing immobiliser control unit	282
4.2	Removing and installing immobiliser reader coil	284
4.3	Ignition key	284
5	Cigarette lighter, socket	286
5.1	Removing and installing AC/DC converter with socket	286
97 - Wiring		289
1	Relay carriers, fuse holders, electronics boxes	289
1.1	Overview of fitting locations - relay carriers, fuse holders, E-boxes	289
1.2	Removing and installing electronics box (E-box)	290
1.3	Removing and installing relay and fuse holder in electronics box	291
1.4	Removing and installing relay and fuse holder behind dash panel on driver side	292
1.5	Removing and installing fuse holder on battery, high-voltage vehicle	294
2	Select Control units	295
2.1	Overview of fitting locations - control units	295
2.2	Removing and installing onboard supply control unit J519	296
2.3	Removing and installing data bus diagnostic interface J533	302
2.4	Removing and installing garage door operation control unit	304
3	Connectors	305
3.1	Separating left door connector	305
3.2	Separating right door connector	306
3.3	Repairing electrical wiring harnesses and plug-in connections	306
4	Releasing and dismantling connector housings	307
5	Repairing aerial cables	308
6	Fibre optic cables	309
7	Vehicle diagnosis, testing and information systems	310