



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with start/stop system	2
1.2 Safety measures when working with pyrotechnic components	3
1.3 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	4
1.4 Additional safety regulations for side airbag	5
1.5 Additional safety instructions for curtain airbag	5
1.6 Safety regulations for crash sensors (pressure sensors) for front side airbags	6
1.7 Additional safety instructions for repair work on seat occupied recognition for front passenger airbag deactivation - country-specific	6
1.8 Measures for seat occupied recognition for front passenger airbag deactivation following an accident - country-specific	7
1.9 Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident	7
1.10 Checking airbag securing parts after an accident	9
1.11 Accident without airbag triggering	9
1.12 Checking seat belts	10
1.13 Check belt webbing	10
1.14 Checking inertia reel (locking mechanism)	11
1.15 Visually checking belt buckle	12
1.16 Check operation of belt buckle	12
1.17 Checking belt relays, and buckle tongues	12
1.18 Checking securing parts and anchorage points after an accident	12
1.19 Checking child seat anchors after an accident	13
1.20 Safety instructions for automatic anti-dazzle interior mirror	13
2 Repair notes	14
2.1 Contact corrosion	14
2.2 Pipe/wire routing and attachment	14
68 - Interior equipment	15
1 Compartments/covers	15
1.1 Overview of fitting locations - storage compartments/covers	15
1.2 Removing and installing dash panel cover on driver side	16
1.3 Removing and installing upper steering column trim	18
1.4 Removing and installing lower steering column trim	19
1.5 Removing and installing glove compartment opener	20
1.6 Removing and installing glove compartment	22
1.7 Removing and installing glove compartment cover	26
1.8 Removing and installing headliner storage compartment	26
2 Equipment	29
2.1 Assembly overview - sun visors	29
2.2 Removing and installing sun visor	29
2.3 Removing and installing roof grab handle	32
3 Centre console	35
3.1 Assembly overview - securing bracket	35
3.2 Removing and installing rear centre console trim	35
3.3 Removing and installing centre console	39
3.4 Removing and installing lid of rear storage compartment of centre console, »Comfort and Highline«	48
3.5 Removing and installing centre console bracket	49
4 On inside	54
4.1 Assembly overview - interior mirror	54



4.2	Removing and installing interior mirror	57
4.3	Repairing interior mirror retaining plate	64
69	Passenger protection	69
1	Seat belts	69
1.1	Assembly overview - front three-point seat belt	69
1.2	Assembly overview - rear three-point seat belt	72
1.3	Removing and installing front three-point seat belt	73
1.4	Removing and installing rear three-point seat belt	84
1.5	Removing and installing belt height adjuster	91
1.6	Removing and installing front belt buckle	93
1.7	Removing and installing rear belt buckle	97
2	Child seat anchors	98
2.1	Points to check	98
2.2	Child seat anchors in rear shelf	98
3	Airbag system	99
3.1	Overview of fitting locations - airbag system	99
4	Airbag control unit	101
4.1	Assembly overview - airbag control unit	101
4.2	Removing and installing airbag control unit J234	101
5	Driver's airbag	106
5.1	Assembly overview - driver side airbag	106
5.2	Removing and installing airbag unit with igniter	108
5.3	Removing and installing return spring with slip ring (coil connector)	113
6	Front passenger side airbag	114
6.1	"Advanced Airbag System" (only for North American Region/Canada)	114
6.2	Removing and installing front passenger side airbag unit with igniter	114
6.3	Removing and installing key-operated switch to deactivate front passenger side airbag	119
7	Side airbags	121
7.1	Removing and installing front side airbag with igniter	121
7.2	Removing and installing rear side airbag with igniter	123
8	Curtain airbags	127
8.1	Removing and installing curtain airbag with igniter	127
9	Airbag crash sensors	133
9.1	Overview of fitting locations - airbag crash sensors	133
9.2	Removing and installing front airbag crash sensor, driver side G283	134
9.3	Removing and installing front airbag crash sensor, front passenger side G284	137
9.4	Removing and installing front side airbag crash sensor G179/G180	140
9.5	Removing and installing rear side airbag crash sensor G256/G257	143
10	Seat belt verification	147
10.1	Removing and installing Seat occupied sensor, front passenger side G128	147
11	Seat occupied recognition	151
11.1	Assembly overview - seat occupied recognition	151
11.2	Removing and installing seat occupied recognition sensor	153
11.3	Removing and installing seat occupied recognition control unit	159
11.4	Removing and installing bracket for seat occupied recognition control unit J706	162
11.5	Importers reporting obligation	164
70	Trim, insulation	166
1	Front door trims	166
1.1	Removing and installing front door trim	166
1.2	Removing and installing mirror cover trim	178
2	Rear door trims	180
2.1	Removing and installing rear door trim	180



3	Dash panel	186
3.1	Assembly overview - dash panel	186
3.2	Removing and installing dash panel end cover	188
3.3	Removing and installing dash panel trim	189
3.4	Removing and installing radio/navigation system mounting frame	191
3.5	Removing and installing dash panel	194
3.6	Removing and installing outer dash panel vents	204
3.7	Removing and installing dash panel insert trim	205
4	Central tube for dash panel	210
4.1	Assembly overview - central tube for dash panel	210
4.2	Removing and installing central tube for dash panel	212
4.3	Removing and installing impact absorber	218
5	Interior trims	221
5.1	Overview of fitting locations - interior trims	221
5.2	Removing and installing sill panel moulding	222
5.3	Removing and installing A-pillar trim	224
5.4	Removing and installing A-pillar gap cover	230
5.5	Removing and installing B-pillar trim	232
5.6	Removing and installing C-pillar trim	238
5.7	Removing and installing wheel housing trims	240
5.8	Removing and installing rear shelf	243
6	Luggage compartment trims	248
6.1	Removing and installing lower rear lid trim	248
6.2	Removing and installing luggage compartment side trim	250
6.3	Removing and installing luggage compartment floor	252
6.4	Removing and installing lock carrier trim	253
6.5	Removing and installing high-voltage battery cover, hybrid vehicles	255
6.6	Removing and installing side panel trim in luggage compartment, hybrid vehicles	258
7	Roof trims	262
7.1	Removing and installing moulded headlining	262
72 -	Seat frames	276
1	Front seats	276
1.1	Assembly overview - front seat	276
1.2	Assembly overview – front backrest	280
1.3	Assembly overview - seat pan	281
1.4	Assembly overview - seat height adjustment	282
1.5	Removing and installing front seat	283
1.6	Removing and installing lumbar support adjustment unit	288
1.7	Removing and installing backrest adjustment unit	289
1.8	Removing and installing front backrest	291
1.9	Removing and installing seat trim on sill side	293
1.10	Removing and installing seat trim on tunnel side	301
1.11	Removing and installing front seat drawer together with mounting	301
1.12	Removing and installing front seat bar and operating lever	303
1.13	Removing and installing bar of electrically adjustable seat	304
1.14	Removing and installing head restraint guide	306
1.15	Removing and installing lumbar support frame	307
1.16	Removing and installing fire extinguisher holder	311
1.17	Removing and installing fire extinguisher holder on seat frame	311
1.18	Removing and installing drive for backrest adjustment (electrically adjustable seat)	312
2	Rear seats	313
2.1	Removing and installing bench seat/individual seats	313
2.2	Removing and installing head restraint guide	315
2.3	Removing and installing rear seat backrest	316



2.4	Removing and installing locking mechanism for rear seat backrest	318
2.5	Removing and installing side padding with side airbag	320
74	Seat - padding, covers	323
1	Front seat covers and padding	323
1.1	Removing and installing cover and padding for seat pan	323
1.2	Removing and installing backrest cover and backrest padding	328
2	Rear seat covers and padding	335
2.1	Removing and installing covers and padding	335
2.2	Removing and installing backrest cover and padding, 1/3 section	339
2.3	Removing and installing backrest cover and padding, 2/3 section	344
2.4	Removing and installing through loading unit with centre armrest	348