



Contents

00 - Technical data	1
1 Basic instructions	1
2 Vehicle identification data	2
2.1 Vehicle identification number	2
2.2 Type plate	3
2.3 Vehicle data sticker	4
3 Safety information	5
4 Body work for which voltage system must be de-energised	6
4.1 The high-voltage system must be de-energised before carrying out the body work described below.	6
5 Moulded foam inserts	7
6 Galvanized body parts, high- and higher-strength and hot-formed body panels	9
6.1 Installing	9
6.2 Overview of vehicle »NAR«	11
6.3 Overview of vehicle »ROW (Rest of the World)«	14
7 Body panel gaps/shut lines	17
7.1 Body, front	17
7.2 Body, centre	18
7.3 Body, rear	19
8 Body dimensions	20
8.1 Body, front	20
8.2 Body, centre	23
8.3 Body, rear	30
8.4 Floor panel - front	32
8.5 Floor panel - centre	34
8.6 Floor panel - rear	35
9 Contour correct surfaces	37
10 Tools	38
11 Measurement and alignment systems, alignment bracket set	39
11.1 Setup overview of complete body	39
11.2 Procedure for structural damage on body	40
12 Measurement and alignment systems, portal gauge	41
12.1 Setup overview of complete body	41
50 - Body - front	43
1 Renewing right bracket	43
1.1 Tools	43
1.2 Removing	43
1.3 Installing	45
2 Renewing left bracket	47
2.1 Tools	48
2.2 Removing	48
2.3 Installing	50
3 Renewing subframe	52
3.1 Tools	52
3.2 Removing	52
3.3 Installing	54
4 Renewing bumper bracket	56
4.1 Tools	57
4.2 Removing	57
4.3 Installing	58



5	Renewing upper wheel housing longitudinal member	60
5.1	Tools	61
5.2	Removing	61
5.3	Installing	64
6	Renewing front wheel housing	71
6.1	Tools	72
6.2	Removing	72
6.3	Installing	73
7	Repairing threads for securing subframe	77
7.1	Contents of thread repair kit	79
7.2	Repairing threads	79
8	Renewing front longitudinal member	83
8.1	Tools	84
8.2	Removing	84
8.3	Installing	86
9	Renewing front longitudinal member - part section	90
9.1	Tools	91
9.2	Removing	91
9.3	Installing	93
10	Renewing front right longitudinal member - part section	102
10.1	Tools	103
10.2	Removing	103
10.3	Installing	105
51 - Body - centre		110
1	Renewing roof - vehicles with no sliding/tilting sunroof	110
1.1	Tools	111
1.2	Removing	112
1.3	Installing	115
2	Renewing roof - vehicles with sliding/tilting sunroof	126
2.1	Tools	127
2.2	Removing	128
2.3	Installing	132
3	Renewing roof side member	144
3.1	Tools	145
3.2	Removing	145
3.3	Installing	147
4	Renewing front cross member for roof	152
4.1	Tools	153
4.2	Removing	153
4.3	Installing	154
5	Renewing roof reinforcement - vehicles for NAR, with no sliding/tilting sunroof	156
5.1	Tools	157
5.2	Removing	157
5.3	Installing	158
6	Renewing rear roof cross member	160
6.1	Tools	161
6.2	Removing	161
6.3	Installing	162
7	Renewing intermediate plate, hybrid vehicles	164
7.1	Tools	165
7.2	Removing	165
7.3	Installing	166



8	Renewing A-pillar	169
8.1	Tools	170
8.2	Removing	170
8.3	Installing	172
9	Renewing A-pillar reinforcement - part section	179
9.1	Tools	180
9.2	Removing	180
9.3	Installing	181
10	Renewing B-pillar	186
10.1	Tools	187
10.2	Removing	187
10.3	Installing	189
11	Renewing B-pillar reinforcement, non-hybrid vehicles	196
11.1	Tools	197
11.2	Removing	197
11.3	Installing	199
12	Renewing B-pillar reinforcement, hybrid vehicles	206
12.1	Tools	207
12.2	Removing	207
12.3	Installing	209
13	Renewing inner B-pillar	216
13.1	Tools	217
13.2	Removing	217
13.3	Installing	218
14	Renewing side member	221
14.1	Tools	222
14.2	Removing	222
14.3	Installing	224
15	Renewing front side member reinforcement, non-hybrid vehicles	230
15.1	Tools	231
15.2	Removing	231
15.3	Installing	232
16	Renewing front side member reinforcement, hybrid vehicles	236
16.1	Tools	237
16.2	Removing	237
16.3	Installing	238
17	Renewing rear side member reinforcement	242
17.1	Tools	243
17.2	Removing	243
17.3	Installing	244
18	Renewing outer mounting for seat cross member	247
18.1	Tools	248
18.2	Removing	249
18.3	Installing	250
19	Renewing inner mounting for seat cross member	253
19.1	Tools	253
19.2	Removing	253
19.3	Installing	255
20	Renewing seat middle cross member	258
20.1	Tools	258
20.2	Removing	258
20.3	Installing	260
53 - Body - rear	263	



1	Renewing cross panel	263
1.1	Tools	264
1.2	Removing	264
1.3	Installing	265
2	Renewing lock carrier	269
2.1	Tools	269
2.2	Removing	269
2.3	Installing	271
3	Renewing tail light mounting	273
3.1	Tools	274
3.2	Removing	274
3.3	Installing	275
4	Renewing tail light reinforcement, hybrid vehicles	277
4.1	Tools	278
4.2	Removing	278
4.3	Installing	279
5	Renewing luggage compartment floor	282
5.1	Tools	283
5.2	Removing	284
5.3	Installing	286
6	Renewing C-pillar reinforcement - part section	293
6.1	Tools	294
6.2	Removing	294
6.3	Installing	295
7	Renewing rear longitudinal member - part section	298
7.1	Tools	299
7.2	Removing	299
7.3	Installing	300
8	Renewing rear longitudinal member - subpart	303
8.1	Tools	304
8.2	Removing	304
8.3	Installing	305
9	Renewing rear longitudinal member reinforcement, hybrid vehicles	307
9.1	Tools	308
9.2	Removing	308
9.3	Installing	309
10	Renewing rear battery mounting, hybrid vehicles	313
10.1	Tools	314
10.2	Removing	314
10.3	Installing	315
11	Renewing side panel - part section	318
11.1	Tools	319
11.2	Removing	319
11.3	Installing	322
12	Renewing outer wheel housing liner	329
12.1	Tools	330
12.2	Removing	330
12.3	Installing	331