



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
2 Identification	2
2.1 Gearbox identification	2
3 Repair notes	3
3.1 General repair instructions	3
4 Technical data	7
4.1 Capacities	7
4.2 Allocation gearbox - engine	7
4.3 Calculation of gear ratios	9
5 Overview - power transmission	11
5.1 Overview - power transmission - front-wheel drive	11
6 Electrical components	13
6.1 Overview of fitting locations - electrical components	13
30 - Clutch	15
1 Clutch operation	15
1.1 Assembly overview - pedal cluster	15
1.2 Assembly overview - clutch hydraulics	18
1.3 Assembly overview - clutch release mechanism	22
1.4 Removing and installing clutch pedal	23
1.5 Removing and installing over-centre spring	28
1.6 Removing and installing mounting bracket	33
1.7 Removing and installing clutch master cylinder	39
1.8 Removing and installing clutch slave cylinder	41
1.9 Bleeding clutch mechanism	43
1.10 Checking clutch master cylinder and clutch slave cylinder	45
1.11 Removing and installing clutch position sender G476	45
1.12 Repairing clutch release mechanism	48
2 Clutch	50
2.1 Determining make of clutch	50
2.2 Assembly overview - clutch	51
2.3 Removing and installing clutch	55
34 - Controls, housing	65
1 Selector mechanism	65
1.1 Installation position - selector mechanism	65
1.2 Assembly overview - gear knob and cover	67
1.3 Assembly overview - Gear lever and selector housing	68
1.4 Assembly overview - Selector cables	70
1.5 Removing and installing gear knob	72
1.6 Removing and installing selector mechanism	74
1.7 Adjusting selector mechanism	79
1.8 Checking selector mechanism	82
1.9 Removing and installing gear selector cable and gate selector cable	82
1.10 Renewing oil seal for selector shaft	84
1.11 Dismantling and assembling selector mechanism	85
2 Removing and installing gearbox	92
2.1 Specified torques for gearbox	92
2.2 Removing gearbox	94



2.3	Installing gearbox	140
3	Assembly mounting	168
3.1	Assembly overview - assembly mountings	168
4	Transporting gearbox	170
5	Dismantling and assembling gearbox	171
5.1	Schematic overview - gearbox	171
5.2	Assembly overview - cover for gearbox housing and 5th gear	173
5.3	Assembly overview - gearbox housing and selector mechanism	174
5.4	Assembly overview - selector unit	175
5.5	Assembly overview - input shaft, output shafts, differential, selector rods	176
5.6	Assembly overview - selector forks	177
5.7	Repairing selector unit	178
5.8	Repairing selector forks	179
5.9	Removing cover for gearbox housing and 5th gear	183
5.10	Dismantling and assembling gearbox	189
5.11	Installing cover for gearbox housing and 5th gear	201
6	Gearbox housing, clutch housing	206
6.1	Assembly overview - gearbox housing	206
6.2	Assembly overview - clutch housing	208
6.3	Repairing gearbox housing	209
6.4	Repairing clutch housing	216
7	Installing to engine and gearbox support	222
8	Gear oil	223
8.1	Checking gear oil level	223
8.2	Draining and filling gear oil	223
35 - Gears, shafts		226
1	Input shaft	226
1.1	Assembly overview - input shaft	226
1.2	Dismantling and assembling input shaft	229
1.3	Adjusting input shaft	234
2	Output shaft	239
2.1	Assembly overview - output shaft	239
2.2	Dismantling and assembling output shaft	242
2.3	Adjusting output shaft	250
3	Reverse shaft	257
3.1	Assembly overview - reverse shaft	257
3.2	Dismantling and assembling reverse shaft	260
39 - Final drive - differential		263
1	Oil seals	263
1.1	Overview of fitting locations - seals	263
1.2	Renewing left oil seal	264
1.3	Renewing right oil seal	266
1.4	Renewing input shaft seal	270
2	Differential	272
2.1	Assembly overview - differential	272
2.2	Dismantling and assembling differential	274
2.3	Adjusting differential	279
3	Adjustment overview	283