



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
<b>2 Identification</b>	<b>2</b>
2.1 Gearbox identification	2
<b>3 Repair notes</b>	<b>4</b>
3.1 General repair instructions	4
<b>4 Technical data</b>	<b>9</b>
4.1 Allocation gearbox - engine	9
4.2 Capacities	9
4.3 Calculation of gear ratios	9
<b>5 Overview - power transmission</b>	<b>10</b>
5.1 Overview - power transmission - front-wheel drive	10
<b>6 Electrical components</b>	<b>12</b>
6.1 Overview of fitting locations - electrical components	12
<b>30 - Clutch</b>	<b>14</b>
<b>1 Clutch mechanism</b>	<b>14</b>
1.1 Overview of fitting locations – clutch mechanism	14
1.2 Assembly overview - pedal cluster	15
1.3 Assembly overview - clutch hydraulics	17
1.4 Assembly overview - clutch release mechanism	22
1.5 Removing and installing over-centre spring	23
1.6 Removing and installing clutch pedal	30
1.7 Removing and installing mounting bracket	37
1.8 Removing and installing clutch master cylinder	44
1.9 Removing and installing clutch slave cylinder	47
1.10 Checking clutch master cylinder and clutch slave cylinder	50
1.11 Removing and installing clutch position sender G476	50
1.12 Bleeding clutch mechanism	53
1.13 Repairing clutch release mechanism	55
<b>2 Clutch</b>	<b>57</b>
2.1 Assembly overview - clutch	57
2.2 Removing and installing clutch	57
<b>34 - Controls, housing</b>	<b>63</b>
<b>1 Selector mechanism</b>	<b>63</b>
1.1 Installation position - selector mechanism	63
1.2 Assembly overview - selector mechanism	64
1.3 Assembly overview – gear knob and cover	65
1.4 Assembly overview - Gear lever and selector housing	66
1.5 Assembly overview – selector cables	68
1.6 Removing and installing gear knob	72
1.7 Dismantling and assembling selector mechanism	74
1.8 Removing and installing selector mechanism	81
1.9 Removing and installing gear selector cable and gate selector cable	89
1.10 Adjusting selector mechanism	91
1.11 Checking selector mechanism	94
1.12 Renewing selector shaft seal	94
<b>2 Removing and installing gearbox</b>	<b>96</b>
2.1 Removing gearbox	96



2.2	Installing gearbox	107
2.3	Specified torques for gearbox	114
<b>3</b>	<b>Assembly mountings</b>	<b>117</b>
3.1	Assembly overview - assembly mountings	117
<b>4</b>	<b>Transporting gearbox</b>	<b>121</b>
<b>5</b>	<b>Gear oil</b>	<b>123</b>
5.1	Checking gear oil level	123
<b>6</b>	<b>Securing to engine and gearbox support</b>	<b>125</b>
<b>7</b>	<b>Dismantling and assembling gearbox</b>	<b>127</b>
7.1	Schematic overview - gearbox	127
7.2	Assembly overview - gearbox	128
7.3	Assembly overview - cover for gearbox housing and 5th gear	128
7.4	Assembly overview - clutch housing	129
7.5	Assembly overview - input shaft, output shafts, differential, selector rods	130
7.6	Assembly overview - selector unit	132
7.7	Assembly overview - selector forks	133
7.8	Repairing selector forks	134
7.9	Repairing selector unit	139
7.10	Dismantling and assembling gearbox	140
<b>8</b>	<b>Gearbox housing, clutch housing</b>	<b>153</b>
8.1	Assembly overview - gearbox housing and clutch housing	153
8.2	Repairing gearbox housing	155
8.3	Repairing clutch housing	156
<b>35 - Gears, shafts</b>		<b>159</b>
<b>1</b>	<b>Input shaft</b>	<b>159</b>
1.1	Assembly overview - input shaft	159
1.2	Dismantling and assembling input shaft	161
1.3	Renewing input shaft seal	173
<b>2</b>	<b>Output shaft</b>	<b>176</b>
2.1	Assembly overview - output shaft	176
2.2	Dismantling and assembling output shaft	178
<b>39 - Final drive - rear differential</b>		<b>187</b>
<b>1</b>	<b>Seals</b>	<b>187</b>
1.1	Overview of fitting locations - seals	187
1.2	Renewing left seal	187
1.3	Renewing right seal	190
<b>2</b>	<b>Differential</b>	<b>193</b>
2.1	Assembly overview - differential	193
2.2	Dismantling and assembling differential	195
2.3	Adjusting differential	204